

INSTRUCTION MANUAL

FT-1017D

For Service Manuals Contact
MAURITRON TECHNICAL SERVICES
8 Cherry Tree Rd, Chinnor
Oxon OX9 4QY
Tel: 01844-351694 Fax: 01844-352554
Email: enquiries@mauritron.co.uk


YASU MUSEN CO., LTD.

TOKYO JAPAN

TABLE CONTENTS

	(Page)
GENERAL DESCRIPTION	1
SPECIFICATIONS	2
TUBES AND SEMICONDUCTORS	3
CONTROLS AND SWITCHES	4
REAR APRON CONNECTIONS.....	7
ACCESSORIES	8
INSTALLATION	10
OPERATION	12
BLOCK DIAGRAM.....	21
CIRCUIT DESCRIPTION.....	22
MAINTENANCE AND ALIGNMENT.....	34
PARTS LIST	43

**HIGH—PERFORMANCE HF TRANSCEIVER
YAESU FT-101ZD**

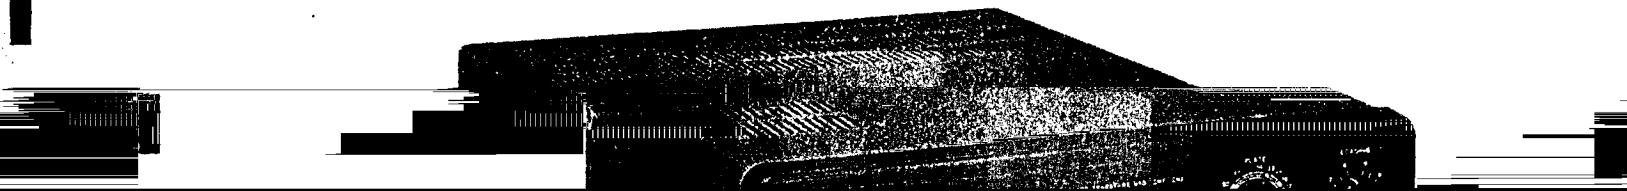

SPECIFICATIONS

Frequency coverage:

160 m	1.8 - 2.0 MHz
80 m	3.5 - 4.0 MHz
40 m	7.0 - 7.5 MHz
30 m	10.0 - 10.5 MHz
20 m	14.0 - 14.5 MHz
17 m	18.0 - 18.5 MHz
15 m	21.0 - 21.5 MHz
12 m	24.5 - 25.0 MHz
10 m	28.0 - 29.9 MHz

Power requirements:

AC	100/110/117/200/220/234 volts, 50/60 Hz
DC	13.5 volts \pm 10% (DC-DC converter optional)

Power consumption:

AC	85 VA receive (73 VA HEATER OFF) 330 VA transmit
DC	5.5 amps receive (1.1 amps HEATER OFF) 21 amps transmit

Size:

345 (W) x 157 (H) x 326 (D) mm

Weight:

Approx. 15 kg.

TRANSMITTER

Emission type:

LSB, USB, CW, AM

Power input:

180 watts DC (SSB, CW)
50 watts DC (AM)

Carrier suppression:

Better than 40 dB

Unwanted sideband suppression:

Better than 40 dB (14 MHz, 1 kHz)

Spurious radiation:

Better than 40 dB down

Transmitter frequency response:

300 - 2700 Hz (-6 dB)

Third order distortion products:

Better than 31 dB down

Transmitter frequency stability:

Less than 300 Hz after 10 minute warmup;
less than 100 Hz after 30 minute warmup.

Antenna output impedance:

50 - 75 ohms, unbalanced

Microphone input impedance:

500 - 600 ohms (low impedance)

RECEIVER

Sensitivity:

0.25 μ V for S/N 10 dB (SSB, CW)
0.5 μ V for S/N 10 dB (AM)

Image rejection:

Better than 60 dB (160 - 12 m)
Better than 50 dB (10 m)

IF rejection:

Better than 70 dB (160, 80, 20.- 10 m)
Better than 60 dB (40 m, 30 m)

Selectivity:

SSB, AM 2.4 kHz at 6 dB down, 4.0 kHz at
60 dB down
CW (with optional CW filter) 600 Hz at 6 dB
down, 1.2 kHz at 60 dB down

Bandwidth control:

Continuous from 2.4 kHz to 300 Hz

Audio output impedance:

4 - 16 ohms

Audio output:

3 watts at 10% THD, 4 ohm load

Specifications subject to change without notice.

For Service Manuals Contact
MAURITRON TECHNICAL SERVICES
8 Cherry Tree Rd, Chinnor

Oxon OX9 4QY
Tel:- 01844-351694 Fax:- 01844-352554
Email:- enquiries@mauritron.co.uk

TUBES AND SEMICONDUCTORS

Vacuum Tubes

12BY7A 1
6146B 2

Transistors

T20A6 2
2SA495 1
2SA496Y 2
2SA564A 3
2SA639 1
2SA733 1
2SA952LB 14
2SB616 1
2SC372Y 15
2SC373 1
2SC380TMY 15
2SC535A 1
2SC732TMGR 1
2SC1000GR 2
2SC1383 1

~~2SC1553 2~~
2SC1674 1
2SC1815GR 1
2SC1815Y 6
2SC2407 2
MPSA13 1

Field Effect Transistors

2SK19GR 8
2SK19BL 1
3SK40M 1
3SK51-03 7
3SK73 1
J310 2

Integrated Circuits (IC)

μ PA54H 1
 μ PC7505H 1
 μ PC78L12 1
 μ PC14308 1
 μ PC2002H 1
MC3403P 1
MC14024B 1
MSM9520RS 1
NJM78L05 1
SN76514N 1
SN74LS123N 1
TA7060P 1
TA7063P 1

Germanium Diodes

1N60 11
1S1007 (GB) 12

Silicon Diodes

~~1S1555 6~~
10D1 7
10D10 8
V06B 2
1SS53 25

Schottky Barrier Diode

ND487C2-3R 1
(Ring Module)

Zener Diodes

WZ061 1
WZ090 2

Varactor Diodes

1S2209 1
1S2236 1
FC63 1

Light Emitting Diodes

GD4-203SRD 9

LED Display


HP-5082-7623 6

FT-101ZD SERIES MODEL CHART

O = BUILT-IN FEATURE X = AVAILABLE OPTION

FEATURE	FT-101ZD	FT-101Z
ALL BAND CRYSTALS	O	O
COUNTER UNIT	O	X
DC-DC CONVERTER	X	X
CW FILTER	X	X
MICROPHONE	X	X
RF PROCESSOR	O	O
COOLING FAN	X	X

CONTROLS AND SWITCHES

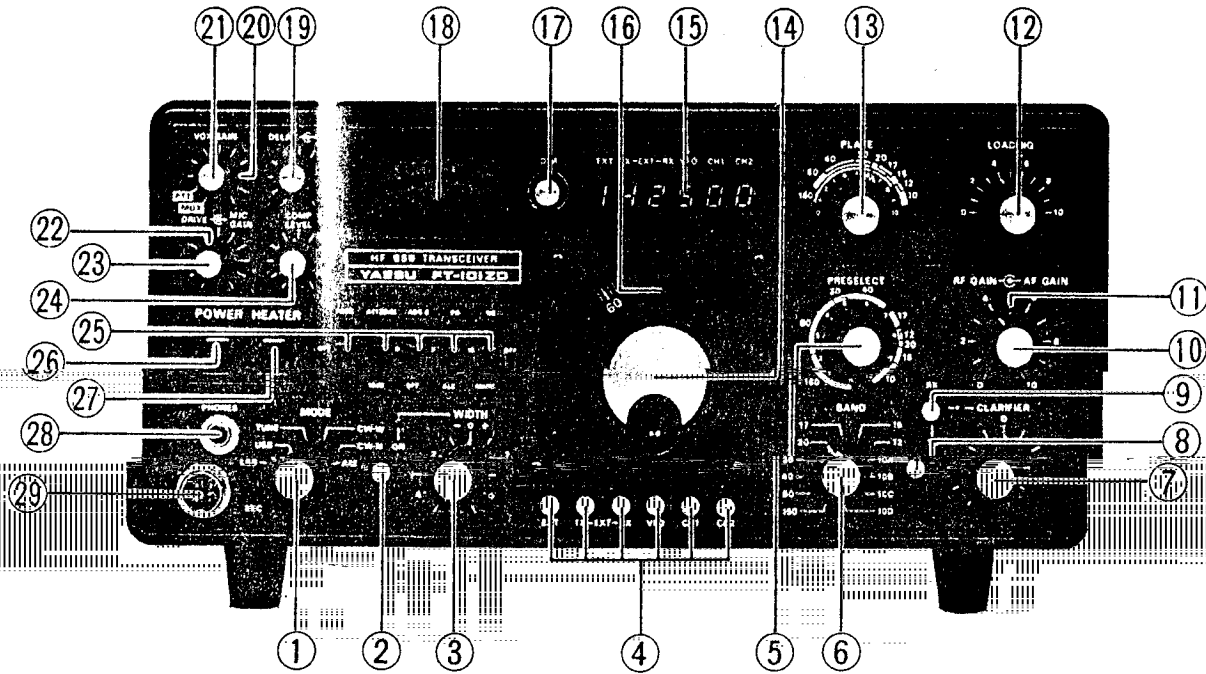

(1) MODE

Selection of LSB, USB, CW-W (SSB filter), CW-N (optional CW filter) and AM is provided.

(2) WIDTH ON

When this button is pressed, the variable bandwidth function is activated.

(3) WIDTH

This control varies the IF bandwidth from 24 kHz down to 300 Hz. When the WIDTH switch is OFF, the bandwidth is fixed by the filter selected at the MODE switch.

(4) SELECT switches

When using the optional FV-901DM synthesized, scanning external VFO, these switches determine which component will control the transmit, receive, or transceive frequency.

EXT This switch, when pressed, shifts control of the transceive frequency to the external VFO.

TX EXT... This switch, when pressed, shifts control of the transmit frequency to the external VFO.

RX EXT... This switch, when pressed, shifts control of the receive frequency to the external VFO.

VFO..... This switch selects control of the transceive frequency on the FT-101ZD internal VFO.

CH1, CH2.. These switches select optional fixed channels, transceive only.

(5) PRESELECT

The preselector control peaks the RF and IF stages for the frequency in use.

(6) BAND

The bandswitch selects the frequency band in use: 160 - 10 meters.

(7) CLARIFIER

The clarifier control allows offset of ± 2.5 kHz from the frequency established by the main tuning dial.

(8) (9) CLARIFIER SELECT switches

Press the **RX** button for offset of the receive frequency.

Press the **TX** button for offset of the transmit frequency.

Press both buttons for offset of the transceive frequency.

(10) AF GAIN

The AF GAIN control varies the output level of the audio amplifier stages. Clockwise rotation increases the audio output level.

(11) RF GAIN

The RF GAIN control varies the gain of the RF and IF stages. Clockwise rotation increases the gain of these stages.

(12) LOADING

PTT SWITCH OR FOOTSWITCH

(22) DRIVE

This control sets the carrier level for CW/AM and tuning purposes. When the RF processor is ON, this control varies the RF output on SSB, as well.

(23) MIC GAIN

This control sets the output level of the microphone amplifier stage. Clockwise rotation increases the mic gain level.

(24) COMP LEVEL

This control varies the compression level for the speech processor. The processor does not function in the AM mode.

(20) DELAY

This control sets the delay time for the VOX relay. For voice-actuated SSB, or semi-break-in CW, the operator may select the delay time most suitable for his or her operating habits.

(21) VOX GAIN

The threshold level for the VOX (voice operated relay) system can be varied using this control. In the PTT position, PTT (push to talk) control is provided, for relay control via the microphone PTT switch on factory unit.

This control tunes the output circuit of the amplifier pi network to match the impedance of the load.

(13) PLATE

This control tunes the plate circuit of the amplifier.

(14) MAIN TUNING KNOB

Rotation of this knob selects the operating frequency, in conjunction with the setting of the bandswitch. One revolution of the dial produces a frequency change of approximately 17 kHz.

(15) DIGITAL DISPLAY

The digital display mode sets the operating frequency. This control is not functional if the built-in RF processor is not functioning.

(26) POWER

This is the main ON/OFF switch for the transceiver.

(27) HEATER


 
With the HEATER switch on, heater voltage is applied to the driver and final amplifier tubes. This switch may be turned off during periods of RX, when energy conservation is critical.

(28) PHONES



This is a standard 1/4" phone jack for use with headphones.

(29) MIC

This is a 4 conductor jack for microphone and PTT input.

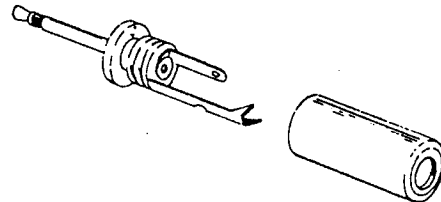


Key plug

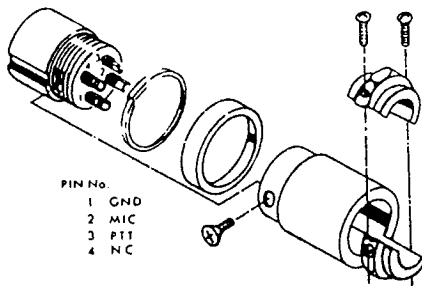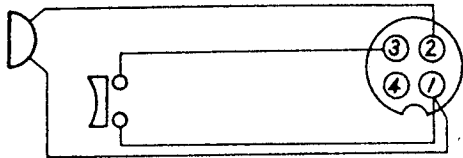



- PIN No.
- 1 GND
 - 2 MIC
 - 3 PTT
 - 4 NC

Mic plug


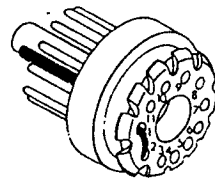


- PIN No.
- 1 HEATER
 - 2 HEATER
 - 3 +100V
 - 4 +300V
 - 5 +800V
 - 6 -100V
 - 7 ALC
 - 8 GND
 - 9 1/2 GND
 - 10 1/2 GND
 - 11 NC

 ACC plug

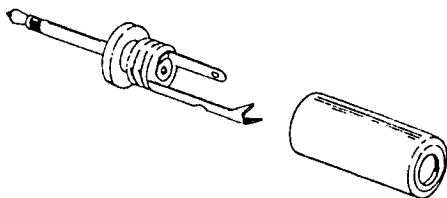


Headphone and external speaker plug

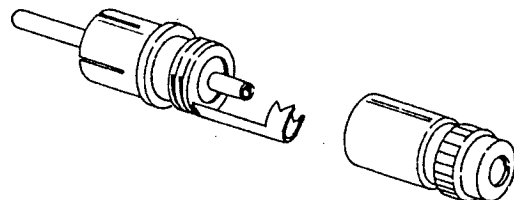 

Pin plug

REAR APRON

For Service Manuals Contact
 MAURITRON TECHNICAL SERVICES
 8 Cherry Tree Rd, Chinnor
 Oxon OX9 4QY
 Tel: 01844-351694 Fax: 01844-352554
 Email: enquiries@mauritron.co.uk

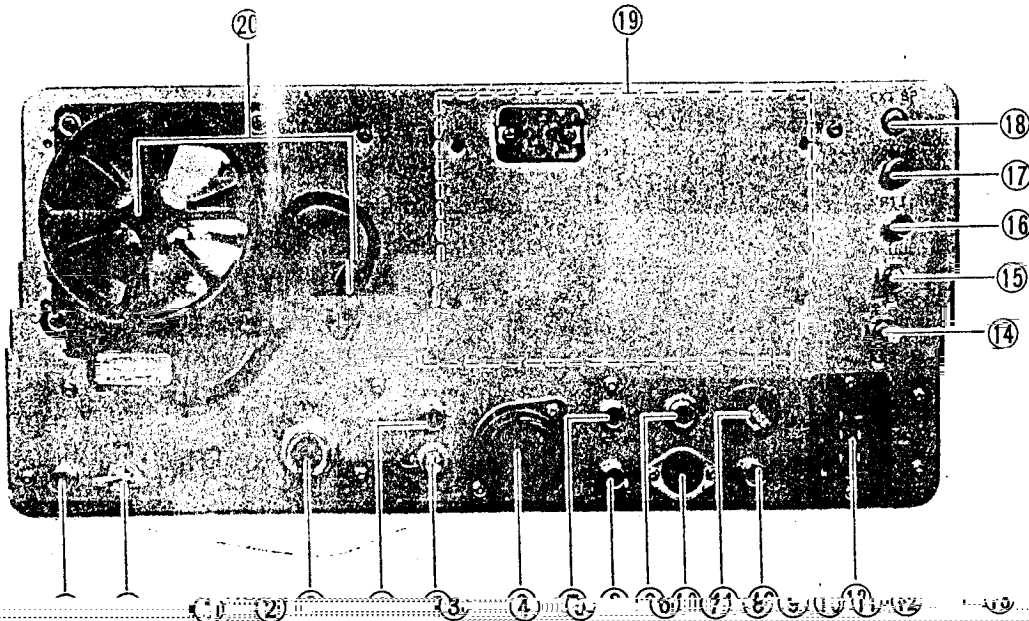

(1) RF OUT

The CW sidetone may be fed to an external receiver through this jack.

(8) ANT TRIP IN

Anti-trip input from an external receiver may be made via this jack, to prevent the receiver audio output from tripping the FT-101ZD VOX.

(7) TONE OUT

RF output of 3 volts RMS is available at this jack for use with a transverter. Output is from the driver stage.

(2) GND

For best transceiver performance, as well as protection from electrical shock, a good ground connection should be made at this point, using a heavy-

braided wire of the shortest length possible.

(3) ANT

Standard "UHF" connector for the antenna.

(4) RCV ANT

This jack is switched in parallel with the ANT jack on receive, for use with an external receiver.

(5) PO ADJ

This control adjusts the relative power output meter.

(6) ACC

Transceiver operating voltages and relay connections can be accessed through the accessory jack. Please insert the ACC plug at all times, to provide heater voltage for the driver and final amplifier tubes.

(9) KEY

The CW key may be connected at this point. Key-down current is 1.5 A. The electronic keyer's output switch level is 7 V. Be sure your keyer will handle these levels.

(10) EXT VFO

Connection of an external VFO, such as the FV-101Z or FV-90, can be made at this jack.

(11) FUSE

This is the fuse holder. Use only a 5 amp 250V fuse. Replace with a fuse of the proper rating.

(12) IF OUT

Wideband IF output for use with a spectrum analyzer, etc.

(13) POWER

Connect the AC power cord at this point, being certain that your AC supply voltage matches the voltage specification for your transceiver. See the transformer primary connection chart. When using the optional DC-DC converter, the DC supply is connected at this point. DO NOT CONNECT THE

~~AC POWER CORD TO A DC POWER SOURCE.~~

OUR WARRANTY DOES NOT COVER DAMAGE CAUSED BY SUCH IMPROPER POWER CONNECTIONS.

(14) TONE

This control varies the CW sidetone output level.

(15) A TRIP

This control varies the level of the VOX anti-trip circuit.

(16) PTT

External control of the transceiver PTT (push to talk) system may be made at this jack, for use with a footswitch, etc.

(17) PATCH

Microphone or phone patch input may be made at this jack. Impedance is 500 ohms.

(18) EXT SP

This is a miniature phone jack for speaker output. When a plug is inserted into this jack, the trans-

ceiver internal speaker will be effective. Impedance is 4 - 16 ohms.

(19) DC-DC CONVERTER (OPTION)

The optional DC-DC converter allows operation from a 13.5 volt DC power source.

(20) COOLING FAN (OPTION)

The optional cooling fan keeps the tubes at a safe operating temperature, when they are used in a hot environment. The 2 pin fan power jack supplies 100 volts to the fan.

ACCESSORIES

The following accessories are included with your new transceiver:

(1) AC POWER CORD 1

The power cord comes equipped with a 6-prong connector for connection to the AC supply.

(2) ACC PLUG 1

The accessory plug allows access to relay contacts and transceiver operating voltages. The ACC plug must be inserted in the accessory socket for proper operation of the transceiver, whether or not external connections are being made.


(3) PHONO PLUG 2

Use these plugs for interface with station equipment via the FT-101ZD rear panel.


(4) SPARE FUSES 5A (3A) 1 each

When replacing fuses, be absolutely certain to use a fuse of the proper rating. OUR WARRANTY DOES NOT COVER DAMAGE CAUSED BY IMPROPER FUSE REPLACEMENT. For 100 - 117 volt AC operation, use a 5 amp fuse. For 200 - 234 volt operation, use a 3 amp fuse.

INTERCONNECTIONS

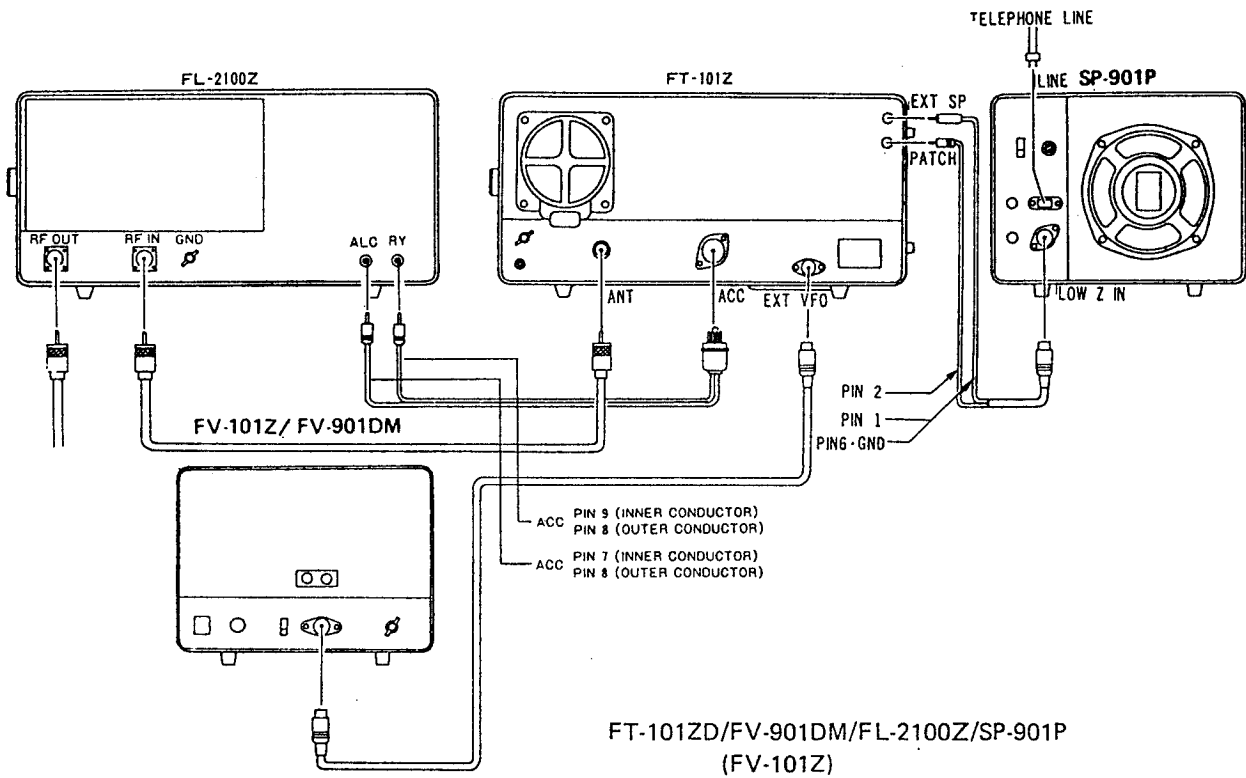

For Service Manuals Contact
MAURITRON TECHNICAL SERVICES
 8 Cherry Tree Rd, Chinnor
 Oxon OX9 4QY
 Tel: 01844-351694 Fax: 01844-352554
 Email: enquiries@mauritron.co.uk

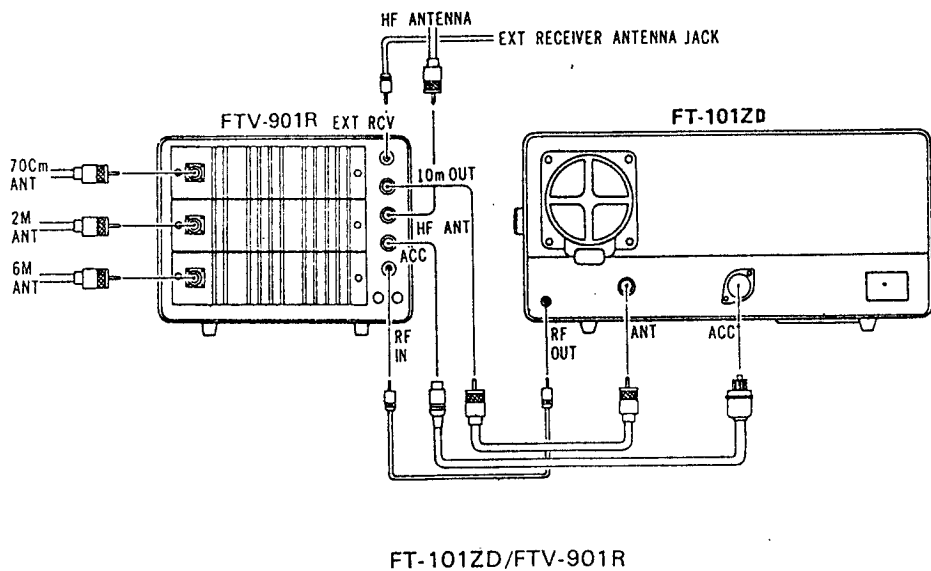

INSTALLATION

The FT-101ZD is designed to be a single-unit station for fixed or portable operation from AC power. Power supply connections providing for operation from a variety of source voltages are available. Please read the following sections carefully before attempting proper installation of your new transceiver.

BASE STATION INSTALLATION

The FT-101ZD is designed for use in many areas of the world, using supply voltages that may differ from your local supply voltage. For this reason, be absolutely certain that the voltage specification marked on the rear of the transceiver agrees with the local AC supply voltage. THIS INSPECTION


~~MUST BE MADE BEFORE CONNECTING THE~~
AC POWER CORD TO THE REAR APRON OF THE TRANSCEIVER.

PRELIMINARY INSPECTION

Upon opening the packing carton, immediately give the transceiver a thorough visual inspection. Check to see that all controls and switches are working freely, and inspect the cabinet for any signs of damage. If any damage has been sustained, immediately contact the shipping company, and document the damage completely. Save the packing carton and foam packing material for possible use at a later date.

CAUTION

PERMANENT DAMAGE WILL RESULT IF IMPROPER AC SUPPLY VOLTAGE IS APPLIED TO THE TRANSCEIVER. OUR WARRANTY DOES NOT COVER DAMAGE CAUSED BY APPLICATION OF IMPROPER SUPPLY VOLTAGE. DO NOT CONNECT THE AC POWER CORD TO A DC POWER SOURCE.

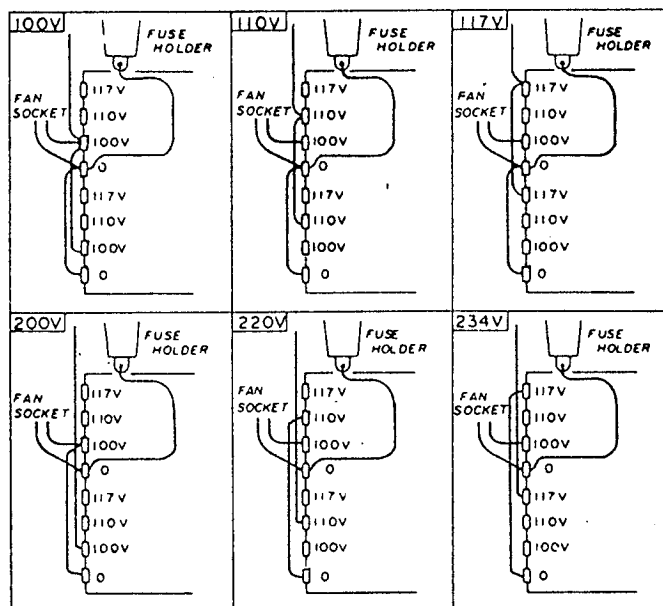

The transceiver should be connected to a good earth ground. The ground lead should be made of a heavy, braided wire, and should be connected to the GND terminal on the rear apron of the transceiver.

MOBILE INSTALLATION

(Note: The DC-DC converter described herein is optional equipment. See your Yaesu dealer.)

When the optional DC-DC converter is installed, the FT-101ZD will operate satisfactorily from a 13.5 volt DC power source capable of providing the required current. The DC power cord is included with the DC-DC converter kit.

For under-dash mobile mounting, a special mobile mounting bracket is an available option for your transceiver. The FT-101ZD should be located away from heater ducts, and a minimum of two inches of air space on all sides is recommended, to allow proper air flow around the cabinet. Never stack other units above or below the FT-101ZD, as the accumulated heat from both units could cause damage.

The transceiver requires an average of 14 amps on transmit, with 20 amps on voice peaks. The DC power cable comes equipped with a 20 amp fuse. Be certain to use only a 20 amp fuse when making replacement.

When making battery connections, be absolutely certain that the RED lead is connected to the POSITIVE battery terminal, and the BLACK lead is connected to the NEGATIVE battery terminal. Reversed connections could cause permanent damage to the transceiver. **OUR WARRANTY DOES NOT COVER DAMAGE CAUSED BY IMPROPER SUPPLY CONNECTIONS.**

It is recommended that the power connections be

made directly to the battery, instead of to the ignition switch, etc. The battery provides considerable filtering action against ignition noise, and connection to the ignition switch can place the power line in a noisy circuit. Keep the power lead as short as possible, and keep the lead away from ignition cables.

Before connecting the DC power cable to the transceiver, check the battery voltage with the engine running (battery charging). If the voltage exceeds 15 volts DC, the vehicle voltage regulator should be adjusted, so as to limit the highest charging rate to less than 15 volts. As well, do not operate the transceiver if the DC supply voltage is less than 12 volts. The transceiver should always be turned off when the car is started, to prevent voltage transients from damaging the power supply components.

ANTENNA CONSIDERATIONS

The FT-101ZD is designed for use with an antenna system presenting a 50 - 75 ohm resistive load at the antenna jack. While the transmitter output circuitry is designed for uniform response within this impedance range, significant departures from the 50 - 75 ohm specification will result in seriously degraded transceiver performance, and may result in damage to the final amplifier tubes.

If an open-wire feedline is used, or if the input impedance of the antenna system presents a higher or lower impedance than specified, some sort of antenna tuner must be used to provide the proper impedance for the transceiver. See your Yaesu dealer for details of the FC-902 antenna coupler.

For mobile operation, most of the commercially-available antennas will provide satisfactory results, if care is taken to tune the antenna for minimum SWR. The outer conductor of the coaxial cable should be securely grounded to the automobile chassis at the antenna mount. See your Yaesu dealer for details on the RSL series of mobile antennas.

For Service Manuals Contact
MAURITRON TECHNICAL SERVICES
8 Cherry Tree Rd, Chinnor
Oxon OX9 4QY
Tel: 01844-351694 Fax: 01844-352554
Email: enquiries@mauritron.co.uk

OPERATION

The tuning procedure for this transceiver is not complicated. However, care should be exercised when tuning so that peak performance of the equipment is secured. The following paragraphs describe the procedure for receiver and transmitter tuning.

INITIAL CHECK

Before connecting the transceiver to the power source, be certain that the voltage specification marked on the rear of the transceiver matches your local supply voltage, and also confirm that a fuse of the proper rating is being used.

FREQUENCY SELECTION

Frequency readout on the FT-101ZD is by digital as well as analog displays. The FT-101Z uses analog display only. The analog readout dial provides resolution to 1 kHz, while the FT-101ZD digital display provides resolution to 100 Hz. The digital display may be added to the FT-101Z as an option. See your Yaesu dealer for details.

RECEIVE OPERATION

- (1) Preset the controls and switches as follows:

POWER OFF
HEATER OFF
VFO Switch pushed
VOX GAIN . . . PTT position
RF GAIN Fully clockwise
AF GAIN Adjust later for comfortable level
BAND Desired band
MODE Desired mode
PRESELECT . . . Desired band segment
AGC OFF
ATT OFF
MARK/NB . . . OFF

- (2) Turn the power switch to ON. The meter will light up, and the operating frequency will be displayed on the dial window (FT-101ZD).

Adjust the AF GAIN control for a comfortable listening level, and adjust the PRESELECT control for desired reception. If the signal level is low, increase the AF GAIN control. If the signal level is high, decrease the AF GAIN control. The PRESELECT control may require repeaking as the transceiver is tuned across the band.

- (3) The RX CLARIFIER may be utilized if the received signal is drifting. Push the RX button, and rotate the CLARIFIER control for offset of up to 2.5 kHz. A red LED indicator will light up when the clarifier is in use.
- (4) When pulse-type noise is encountered, the NB (Noise Blanker) switch should be activated. Advance the noise blanker level control (located on the front panel) to the point which provides the desired blanking. Do not advance the level control beyond the point required to eliminate the noise pulses.
- (5) For varying the width of the IF passband, press the WIDTH button, and rotate the WIDTH control. In the IF, two 8-pole crystal filters are used. One filter is fixed, and presents a boundary for the bandwidth. The center frequency is then varied across the passband of the second filter, using a mixing scheme that provides no change of pitch in the received signal.

The result is continuously variable bandwidth, from 2.4 kHz down to approximately 300 Hz. When the WIDTH switch is turned OFF, the second IF filter is instantly aligned with the first filter, returning the receiver to a 2.4 kHz bandwidth.

- (6) For extremely strong signals, the ATT (attenuator) switch may be activated, providing 10 dB or 20 dB of attenuation on the incoming signal path, depending on the position of the ATT switch.

TRANSMITTER TUNING

The following tuning procedure must be performed prior to commencing operation on the desired mode. See the paragraphs relating to the specific mode after basic transmitter tune-up has been accomplished.

Be certain that a dummy load or matched antenna is connected to the antenna receptacle on the rear of the transceiver. It is possible to damage

the final amplifier components of this equipment if this simple precaution is not followed prior to commencing transmission.

LOADING POSITIONS

Do not exceed 10 seconds of key-down time while tuning.

As well, be certain that the ACC plug is inserted into the rear apron ACC jack. Without this plug, there will be no power applied to the tube heaters. Heater voltage is applied through pins 1 and 2 of the accessory socket.

BAND	FREQUENCY	POSITION
160m	1.8MHz	2.5
	2.0MHz	6.0
80m	3.5MHz	3.0
	4.0MHz	6.0
40m	7.0MHz	6.0
	7.5MHz	6.5
30m	10.0MHz	7.0
	10.5MHz	8.0
20m	14.0MHz	3.0
	14.5MHz	4.0
17m	18.0MHz	2.0
	18.5MHz	2.0
15m	21.0MHz	2.0
	21.5MHz	2.5
12m	24.5MHz	3.0
	25.0MHz	3.0
10m A	28.0MHz	2.0
10m B	28.5MHz	2.0
10m C	29.0MHz	2.0
10m D	29.5MHz	2.0

- (1) Preset the controls and switches as follows:
 MODE TUNE
 DRIVE Fully counterclockwise
 DELAY Fully counterclockwise
 MIC GAIN Fully counterclockwise
 COMP LEVEL ... Fully counterclockwise
 HEATER ON
 PROC OFF
 PO/IC/ALC IC
 PLATE Set to desired band segment
 LOADING 0
 PRESELECT Peaked on receive for maximum response
 TX CLARIFIER .. OFF (button not pushed)

NOTE: LOADING positions are nominal. Minor variations from positions shown are to be expected.

- (2) Turn the HEATER switch ON, and wait 1 minute for the tube heaters to warm up.
- (3) Set the VOX GAIN switch to the MOX position. Observe the reading on the IC meter: it should read 50 mA with no drive applied. If it is not, adjust the PB-1968 BIAS control for a resting current of 50 mA on the IC meter. Refer to the BIAS Adjustment on Page 37. Be certain that the DRIVE control is fully counterclockwise for this adjustment.
- (4) Set the VOX GAIN switch to MOX. Advance the DRIVE control for a reading of 150 mA.
- (5) Peak the PRESELECT control for a maximum meter reading. If the meter reading exceeds 150 mA, reduce the setting of the DRIVE control.
- (6) Rotate the PLATE control for a minimum reading ("dip") on the IC meter. Return the transceiver to the receive mode by rotating the VOX GAIN switch out of the MOX position.

FINAL TUNING

Final transmitter tuning uses the relative power output setting of the METER switch. At full rated output, using a 50 ohm load, the PO meter will indicate between 1/2 and 2/3 of full scale deflection. If the PO reading is too high (off scale) or too low (1/4 scale or less), and if the load impedance is very close to 50 ohms, the PO ADJ control on the rear apron may be varied to provide the proper deflection. Once the PO meter is calibrated, off-scale deflections are the result of reflected power (high SWR), and corrective action may be required in the antenna system.

Set the controls as follows for final tuning:

- (1) Set the METER switch to PO. Rotate the DRIVE control to the 9 o'clock position.
- (2) Rotate the VOX GAIN control to the MOX position, and rotate the PRESELECT control for a maximum meter reading.
- (3) Rotate the LOADING control for a maximum meter reading. Rotate the PLATE control for a maximum meter reading.
- (4) Again rotate the LOADING control and PLATE control, each time advancing the

For Service Manuals Contact
 MAURITRON TECHNICAL SERVICES
 8 Cherry Tree Rd, Chinnor
 Oxon OX9 4QY
 Tel:- 01844-351694 Fax:- 01844-352554
 Email:- enquiries@mauritron.co.uk

DRIVE control approximately 2 steps, until the DRIVE control is fully clockwise. The transmitter is now tuned for maximum power output. Do not exceed the maximum tuning time stipulated previously. Return the VOX GAIN switch to the VOX position (out of the MOX position), return the METER switch to IC, and return the DRIVE control to the fully counterclockwise position.

SSB OPERATION

After completing the above tuning procedure, set the MODE switch to USB or LSB as desired. Set the VOX GAIN control to PTT, and activate the transmitter by pushing the microphone PTT switch or the footswitch, if used. With the METER switch set to the ALC position, speak into the microphone in a normal voice. Advance the MIC GAIN control until the meter kicks up to the midscale of the green-colored portion of the meter scale.

Note: When the METER switch is set to IC, voice modulation peaks will indicate 150 - 200 mA. Actual peak current, though, is approximately 2 times the indicated value.

To set the sensitivity of the VOX (voice-activated T/R switching) system, advance the VOX GAIN control slowly while speaking into the microphone. Advance the VOX GAIN control to the point where the speech signal activates the transmitter.

Set the antitrip potentiometer on the rear apron to the minimum point which prevents the speaker output from tripping the VOX. Do not use more VOX gain nor antitrip than is necessary. Adjust the front panel DELAY control for the desired relay recovery time.

RF SPEECH PROCESSOR ADJUSTMENT

The FT-101ZD RF speech processor, when correctly adjusted, will improve the intelligibility threshold at the receiving end; by increasing the average SSB power output. RF clipping is applied to the IF signal, which is then filtered to remove harmonics and out of band intermodulation products. RF envelope clipping causes much less distortion than that caused by an equivalent amount of AF clipping, and the result is an output signal with more "punch".

Set the PROC switch to OFF and set the MIC GAIN control as described previously (voice peaks falling within the green zone of the ALC meter scale). Now set the PROC switch to ON, and set the COMP LEVEL control to the 10 o'clock position. Advance the DRIVE control so that the desired power output is obtained, and be sure that the ALC meter indication is within the green zone.

With the RF speech processor activated, the ALC meter indication may not be quite as high as when the processor is off. This is entirely normal, because the average power output is higher with the processor, although the peaks are being clipped.

Setting the COMP LEVEL control up to the 3 o'clock position will provide up to 10 dB of compression. Advancing the control beyond the 10 o'clock point may, however, degrade the voice-to-noise ratio, so caution is recommended.

CW OPERATION

After completing the tuning procedure, insert the key line into the KEY jack on the rear panel.

The operator may select any power output desired by advancing the DRIVE control. Once the maximum power output level has been reached, the DRIVE control should not be advanced further.

The transmitter may be activated by the VOX circuit, or by the PTT or MOX systems. The TONE control on the rear apron of the transceiver sets the CW sidetone level.

The key-up voltage at the key jack is 7 volts, and the key-down current is 1.5 mA.

For receiving, two positions of selectivity are provided. When the optional CW filter is installed, the operator may select between the 600 Hz bandwidth of the CW filter and the 2.4 kHz bandwidth of the SSB filter. The WIDTH control may be used with either position of the MODE switch: CW-W or CW-N.

AM OPERATION

AM operation of the transmitter is accomplished by setting the MODE switch to the AM position and inserting the proper amount of carrier with the DRIVE control.

After completing basic transmitter tune-up, place the MODE switch in the AM position. Activate the transmitter, and rotate the DRIVE control until the meter reads .10 (100 mA) in the IC position of the METER switch. While speaking into the microphone in a normal voice, increase the MIC GAIN control until the meter indicates very slight movement with voice peaks. Care must be exercised that the DRIVE control is not advanced too far. Do not exceed .10 (100 mA) meter indication. Exceeding this value may damage the transmitter final amplifier tubes.

For Service Manuals Contact
MAURITRON TECHNICAL SERVICES
 8 Cherry Tree Rd, Chinnor
 Oxon OX9 4QY
 Tel: 01844-351694 Fax: 01844-352554
 Email: enquiries@mauritron.co.uk

SELECT SWITCHES


The SELECT switches allow selection of internal or external VFO frequency control, as well as selection of up to 2 optional crystal-controlled channels.

When the crystal-controlled channels are installed, they may be selected by pressing CH1 or CH2, as desired. See the crystal information elsewhere for full information on crystal requirements.

The external VFO, FV-101Z and FV-901DM, which provide versatile operations with your FT-101ZD, are available from your Yaesu dealer.

Because there is no calibrated dial for the FV-901DM, it can't be used with the analog FT-101Z.

For transceive frequency control on the external VFO, press TX EXT. For the FT-101ZD, press TX EXT. For receive frequency control on the external VFO, and transmit frequency control on the FT-101ZD, press RX EXT. For full transceive control on the external VFO, press VFO.

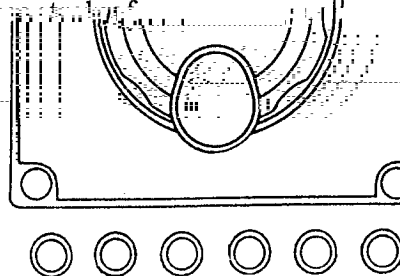


DIAL CALIBRATION AND FREQUENCY DETERMINATION

The FT-101ZD mixing scheme accounts for the difference in carrier frequencies between USB and LSB. For this reason, no recalibration is required. Once the calibration is properly aligned (at the factory, or in shop), no further adjustment is required for accurate frequency derivation. The 250 kHz calibration is included largely for alignment purposes, as it provides a useful reference signal for signal peaking, etc.

Frequency readout on the FT-101ZD digital display is straightforward. The full operating frequency is displayed, with resolution to 100 Hz.

The analog display on the FT-101Z and FT-101ZD transceivers provides easy determination of the operating frequency. The frequency displayed on the analog sub dial (and the main display window, for the FT-101Z) is added to the lower band edge frequency.

 For example, if the analog dial indicates 074, as shown in the example, and the BAND switch is on 40 meters (lower band edge: 7000 kHz), the operating frequency will be 7074 kHz. By rotating the BAND switch, this position of the analog display will produce 14074 kHz for 20 meters, 21074 for 15 meters, etc. For 80 and 12 meters, the lower band edges are 3500 kHz and 24500 kHz, while for 160 meters the band edge is 1.5 MHz. Therefore, the dial should read 074 to produce 3574 kHz, but 374 for 1874 kHz. Be careful so as not to operate outside the amateur bands.



VFO, press EX...
 the transmit freq...
 control on the F...
 receive frequency...
 and transmit frequ...
 press RX EXT. F...
 FT-101ZD, press V...

FIXED CHANNEL CRYSTAL INFORMATION

Two fixed channels may be used with your FT-101ZD, using optional crystals. Crystals are available from your Yaesu dealer. Crystals must meet the specifications shown in Table 2, and must fall within the operating range 5500 - 5000 kHz. Frequency calculation is made from the formula

$$F_x = F_1 - F_0$$

where F_x is the crystal frequency.

F_1 is a constant derived from Table 1

F_0 is the operating frequency.

For example, let us say it is desired to operate on 7199 kHz LSB. Referring to Table 1, we see that for 40 meter LSB, F_1 is 12501.5 kHz. Subtracting F_0 (7199 kHz) from F_1 (12501.5 kHz) yields 5302.5 kHz, the crystal frequency (F_x).

For operation on 21420 kHz USB, compute the crystal frequency as follows:

$$F_x = 26498.5 - 21420 = 5078.5 \text{ kHz.}$$

Inspection of the values of F_1 in Table 1 will reveal that the 7199 kHz crystal for LSB will work on 14199 kHz, 21199 kHz, etc. Of course, LSB is not normally used on these bands. If the operator switches to USB, the operating frequency will be

MODE BAND	U S B	L S B	C W
160m	6998.5	7001.5	6999.2
80m	8998.5	9001.5	8999.2
40m	12498.5	12501.5	12499.2
30m	15498.5	15501.5	15499.2
20m	19498.5	19501.5	19499.2
17m	23498.5	23501.5	23499.2
15m	26498.5	26501.5	26499.2
12m	29998.5	30001.5	29999.2
10m A	33498.5	33501.5	33499.2
10m B	33998.5	34001.5	33999.2
10m C	34498.5	34501.5	34499.2
10m D	34998.5	35001.5	34999.2

Table 1

Type	HC-25/U
Load Capacitance	30pF
Series Resistance	25 Ohms or less
Static Capacitance	7pF or less
Drive Level	5mW

Table 2

... kHz, etc.). If the move is made from LSB to CW, the frequency will move 2.3 kHz down.

Service Manuals Contact
MAURITRON TECHNICAL SERVICES
Cherry Tree Rd, Chinnor
Oxon OX9 4QY

For
MAURITRON
80

Email: enquiries@mauritron.co.uk

CW FILTER INSTALLATION (OPTION)

- (1) Remove the top cover of the transceiver case, as shown in Fig. 1.
- (2) Refer to Fig. 2, and locate the NB-FIX circuit board. Remove its mounting screws, because this board is obstructing the removal of the IF unit.
- (3) Remove the 12-pin, 13-pin, and 15-pin plugs from their sockets on the IF unit. Remove the IF unit mounting screws, and remove the IF unit from the transceiver case.
- (4) Install the optional CW filter as shown in the foil side view of the IF unit (Fig. 3). Make the fastening nuts snug, and solder the pins of the filter to the circuit board, and remove the 2 jumper wires shown in Figure 3.
- (5) Re-install the IF unit, being careful to connect the 12-pin, 13-pin, and 15-pin plugs in the correct sockets. Refer to Fig. 2 to be sure. Re-install the NB-FIX unit, and replace the top cover of the transceiver.
- (6) When the optional CW filter is installed, the CW-N position of the mode switch will activate this filter. In the CW-W position, the SSP 2.4 MHz filter will be active. The WIDTH control is usable in all modes.

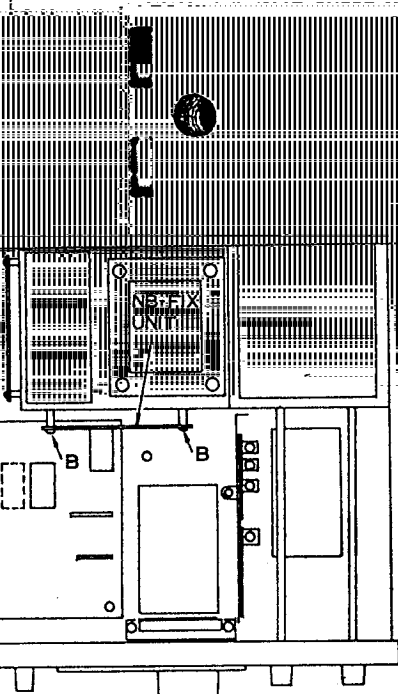


Figure 2

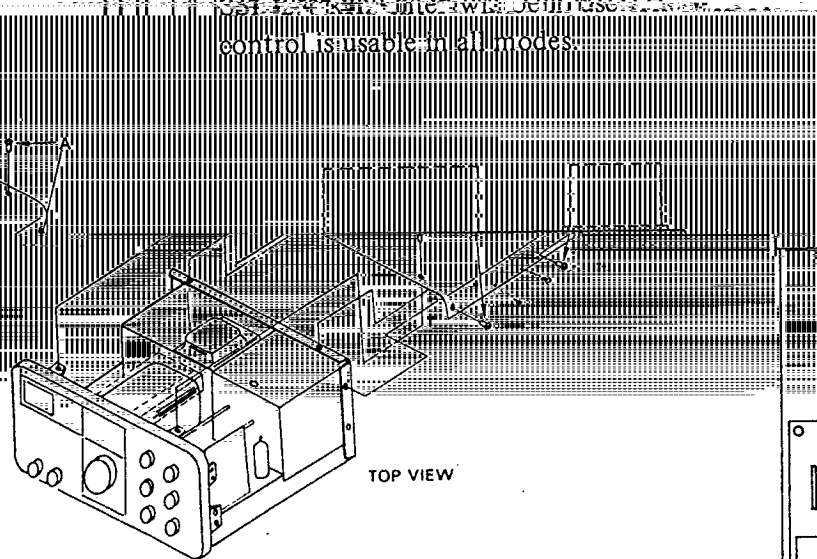


Figure 1

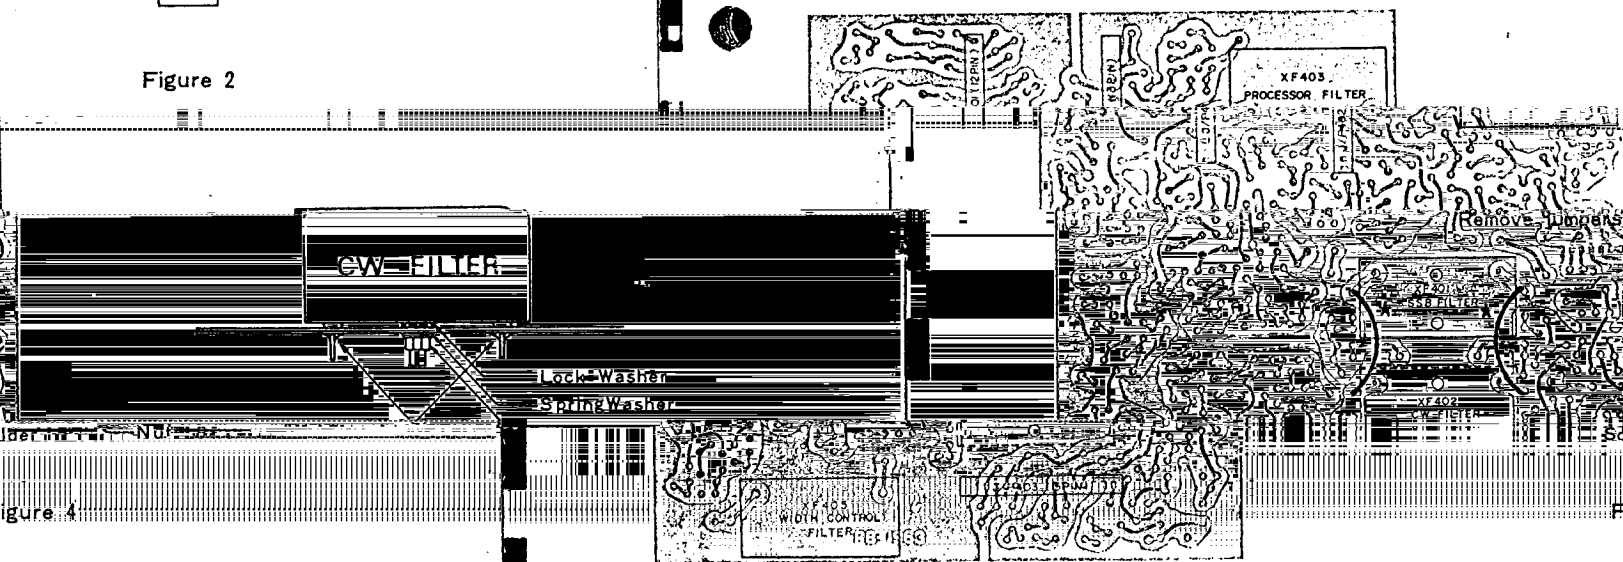


Figure 3

DC-DC CONVERTER INSTALLATION (OPTION)

The optional DC-DC converter is easy to install in a matter of minutes. Please follow the instructions carefully, in order to make the proper connections.

- (1) Install the DC-DC converter module as shown in the drawing. Use the four screws supplied with the kit. Do not force the plug into the socket, as the connection should be smooth, yet solid.
- (2) Check the DC cable fuse socket, located in the positive (red) lead, to be certain that a 20 amp fuse is installed.
- (3) When making connections to the battery, be absolutely certain that the proper polarity is observed. The RED lead should be connected to the POSITIVE (+) battery terminal, and

the BLACK lead should be connected to the NEGATIVE (-) terminal. OUR WARRANTY DOES NOT COVER DAMAGE CAUSED BY REVERSED POLARITY CONNECTIONS.

- (4) Before connecting the DC power cable to the transceiver, check the automobile voltage regulator level with the engine running (battery charging). The maximum charging rate

should be 15 volts or less. If the voltage is higher than this level, please adjust the voltage regulator for a maximum of 15 volts. This precaution applies, as well, to bench power supplies, which should be adjusted in the same fashion. Also, the transceiver should not be operated from a supply voltage of less than 12 volts.


- (5) Connect the DC cable to the transceiver. Power connections are made automatically when the DC cable is connected to the POWER jack.

NOTES ON MOBILE INSTALLATION

Be certain that sufficient room is provided for free air circulation around the transceiver. If the transceiver must be placed on the car seat, set it on a board or other rigid object, in order to provide the necessary air circulation (and to avoid possible heat damage to the upholstery).

A special mobile mounting bracket is available from your YAESU dealer.

The DC supply should be capable of providing amps on voice peaks, 14 amps continuous. THE HEATER switch may be turned off during long periods of reception, for energy conservation.


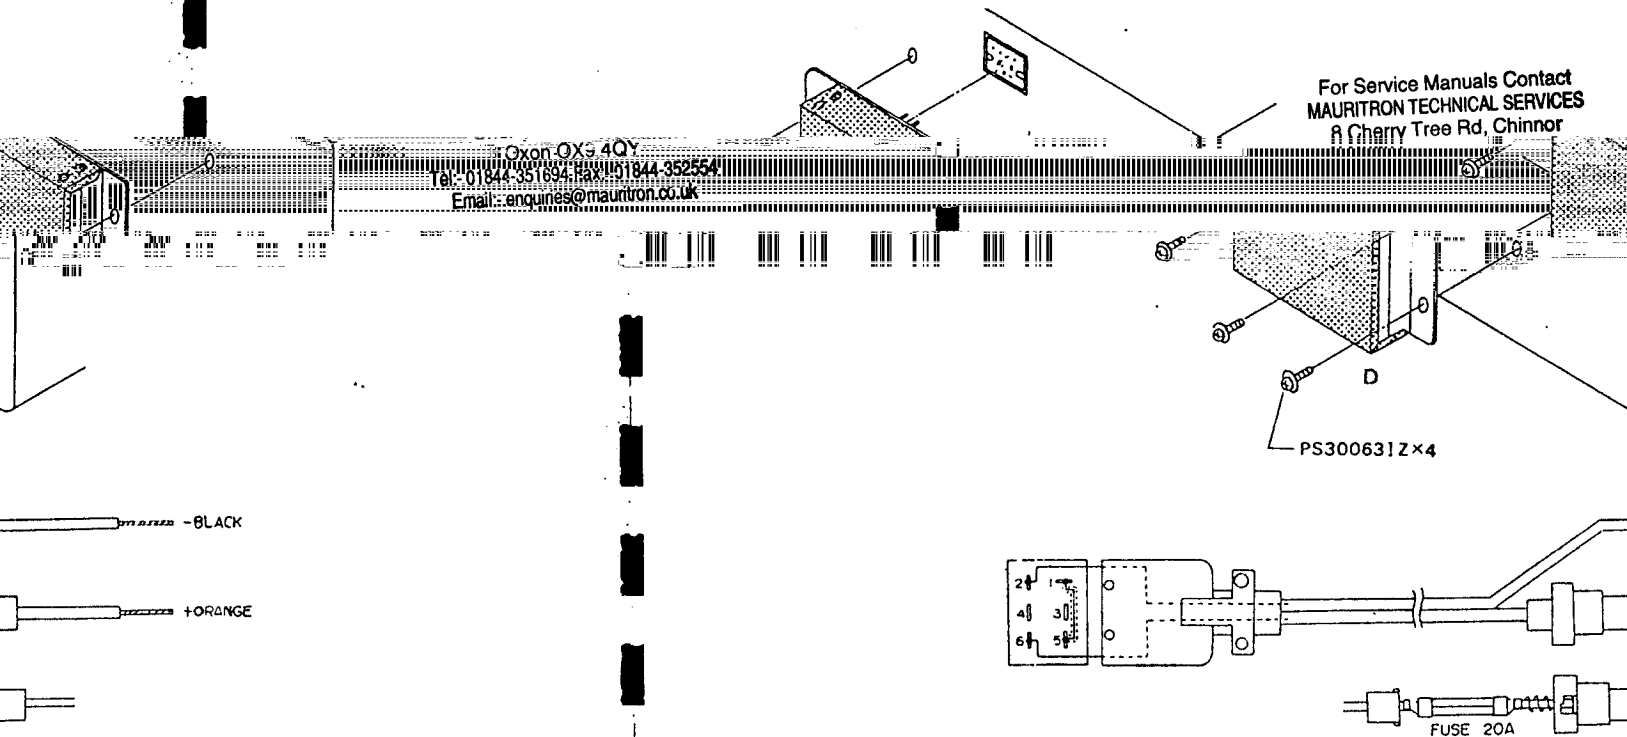


COOLING FAN INSTALLATION (OPTION)

The FT-101ZD cooling fan may be used with other models of Yaesu equipment. Installation is easily accomplished in minutes.

Hold the fan up to the rear panel in its proper location. Determine the proper length of the two-wire power lead to the motor. Solder the leads to the 2-pin plug supplied with the fan. The 4-pin plug is not needed for FT-101ZD installation.

Install the fan onto the rear panel of the transceiver, as shown in the drawing. Insert the power lead from the fan into the fan socket on the rear panel.

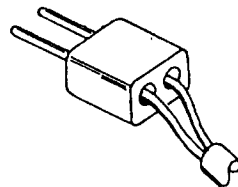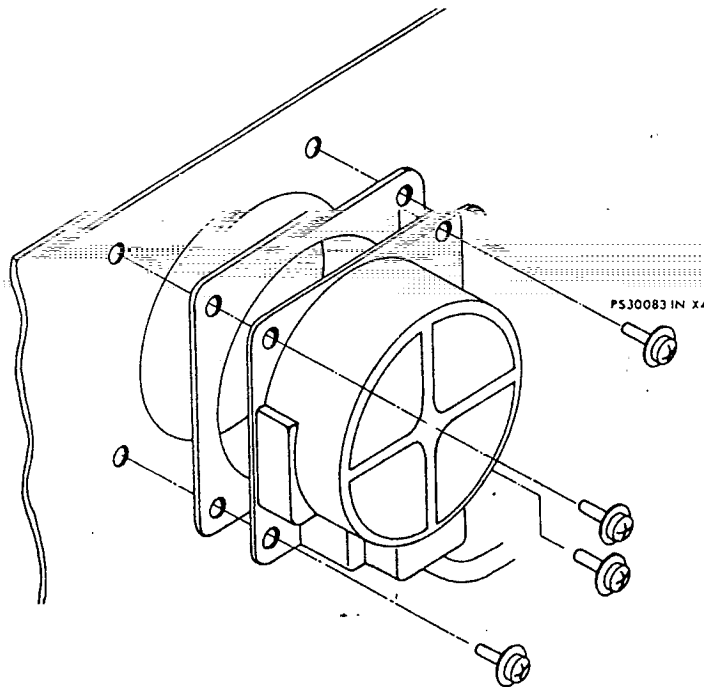

Fan. plug

COUNTER UNIT INSTALLATION ON FT-101Z

This section will deal with the installation of the COUNTER UNIT and digital display, which are optional equipment for the economy FT-101Z model.

PARTS NEEDED

Optical Filter with double-face tape	(1)
Counter Module	(1)
Guide Pins	(2)
Support Tower	(1)
Vinyl Tubes	(2)

(1) Remove the top cover of the transceiver, according to the drawing on page 17.

(2) Remove the screws marked "A" in Figure 1. These screws support the LED board.

(3) Remove the screws marked "B" in Figure 1, as well as the tension spring, and remove the analog display panel.

(4) Locate the analog display lamp. Cut the leads to this lamp, insert 1 lead each into the vinyl tube supplied with the counter kit, and position these leads out of the way of the VFO gears, etc.

(5) Install the orange optical filter on the inside of the front panel of the transceiver, in the position formerly occupied by the analog display panel. Be sure that it is correctly centered. The filter is held in place by the double-face tape included with the filter.

(6) Install the two guide pins into the holes previously occupied by the "A" screws. When doing this, install the LED board in its previous position. Install the support tower into the hole marked "C" in Figure 1.

(7) Remove the 820 ohm (Gray-Red-Brown) resistor from the terminal strip marked "E" in Figures 1 and 2.

(8) Install the COUNTER UNIT. The connection to the guide pins should not be forced. Use the screws previously installed at "A" for securing the counter module at points "C" (support) and "D" in Figure 1. Connect the COUNTER UNIT 9-pin plug into the 9-pin

socket on the transceiver at point "G" in the drawing. The coaxial cable from the COUNTER UNIT is connected to point "F" in Figure 1.

- (9) Close the transceiver. No alignment of the unit is necessary, unless some change in the preset carrier frequencies is required for a special application. In this case, refer to the section on the COUNTER UNIT in the ALIGNMENT chapter of this manual.


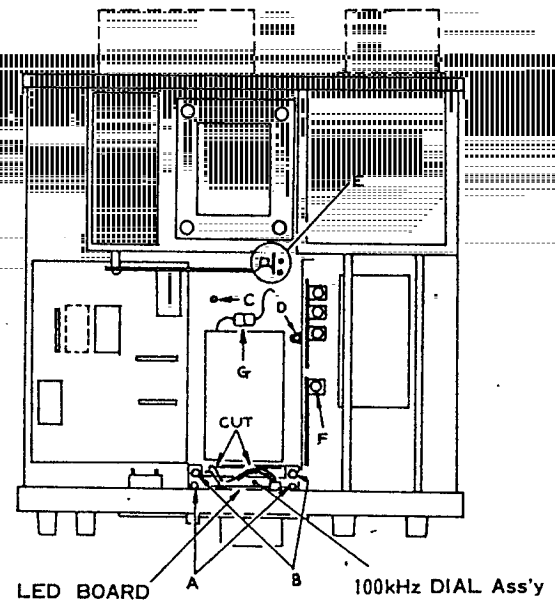


Figure 1

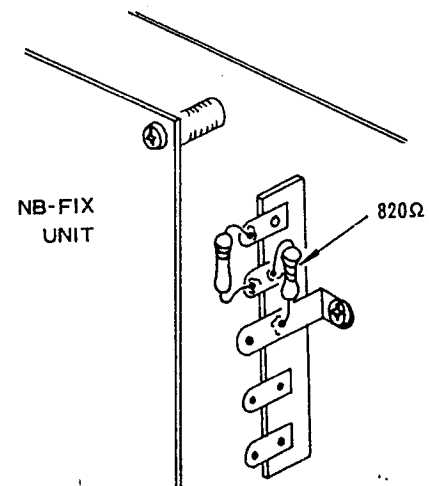

(Enlarged) Part E

Figure 2


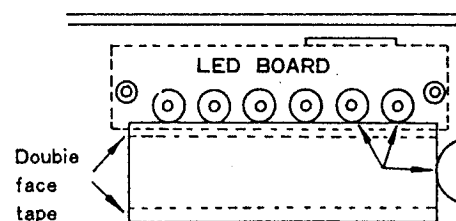


Figure 3

For Service Manuals Contact
MAURITRON TECHNICAL SERVICES
 8 Cherry Tree Rd, Chinnor
 Oxon OX9 4QY
 Tel: 01844-351694 Fax: 01844-352554
 Email: enquiries@mauritron.co.uk

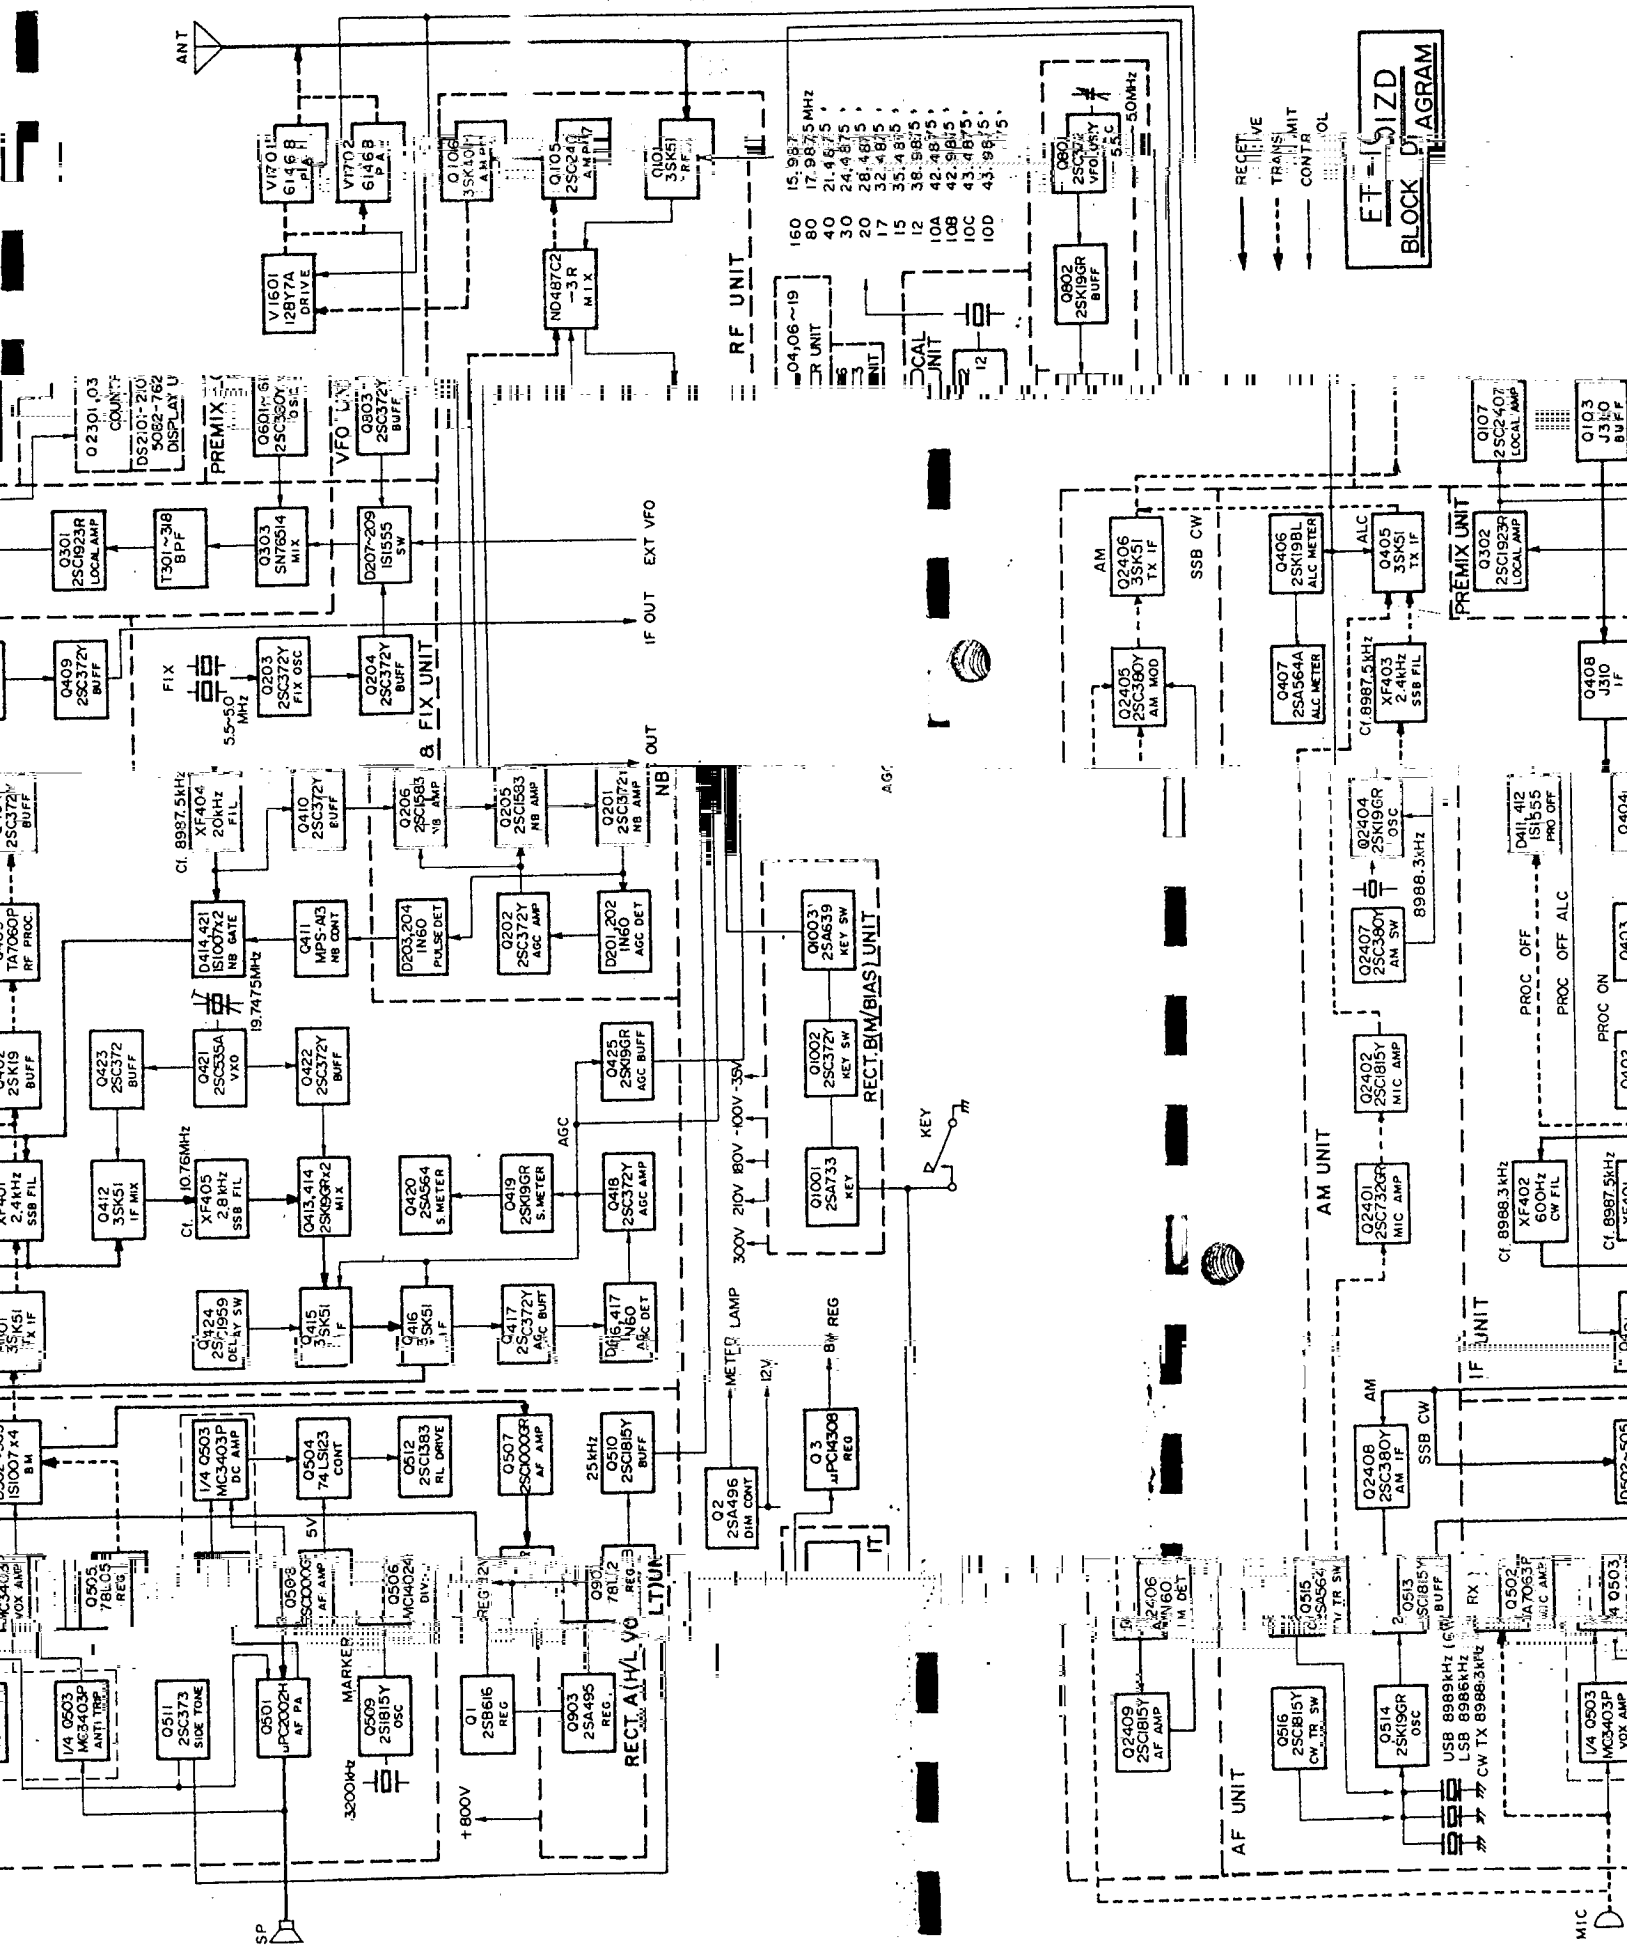

RECET
 TRANSMIT
 CONTR

ET-151ZD
 BLOCK DIAGRAM

RF UNIT

150	17.9875 MHz
80	21.4875
40	24.4875
30	28.4875
20	32.4875
17	35.4875
15	38.9875
12	42.9875
10A	46.9875
10B	50.9875
10C	54.9875
10D	58.9875

CAL UNIT

04.06 ~ 19	5.5 MHz
04.06 ~ 19	5.5 MHz

MIC

CIRCUIT DESCRIPTION

The block diagram and following circuit description will provide you with a better understanding of the design of this transceiver. The circuit description is tailored to the full-feature FT-101ZD, and the reader should note that the counter unit and digital display are optional features for the FT-101Z.

The FT-101ZD consists of a pre-mix-type single conversion system, using a 9 MHz IF for all modes of operation.

RECEIVER


The RF input signal from the antenna is fed through antenna relay RL₂, lamp fuse FH₂, attenuator switch S₂₀₀₄ (located on the LEVER SW unit, PB-1975), 9 MHz trap L₂₁₀₁ and C₁₂₀₇ (located on the TRIMMER A UNIT), and input transformer T₁ to pin 3 of the RF UNIT.

RF UNIT (PB-2154)

The incoming signal is amplified by the RF amplifier, Q₁₀₁ (3SK51-03), a dual-gate MOS FET with excellent rejection of cross modulation and intermodulation. The amplified signal is fed to the Schottky barrier diode module, Q₁₀₂ (ND487C2-3R), where the RF signal is mixed with a local signal delivered from Q₁₀₄ (2SC2407), resulting in a first IF of 8.9875 MHz. The IF signal is then amplified by Q₁₀₃ (J310) and fed to J₁₀₁.

IF UNIT (PB-1963)


The IF signal at pin 9 of J₄₀₃ is amplified by Q₄₀₈ (J310) and passed through a monolithic filter, XF₄₀₄, which has a ±10 kHz bandwidth. The monolithic filter provides early protection from IMD, while providing a wide-bandwidth point for noise blanking. The IF signal is then fed to noise blanker gate D₄₀₄ (1S1007), which functions as an ON/OFF switch controlled by noise blanker driver Q₄₁₁ (MPSA13).

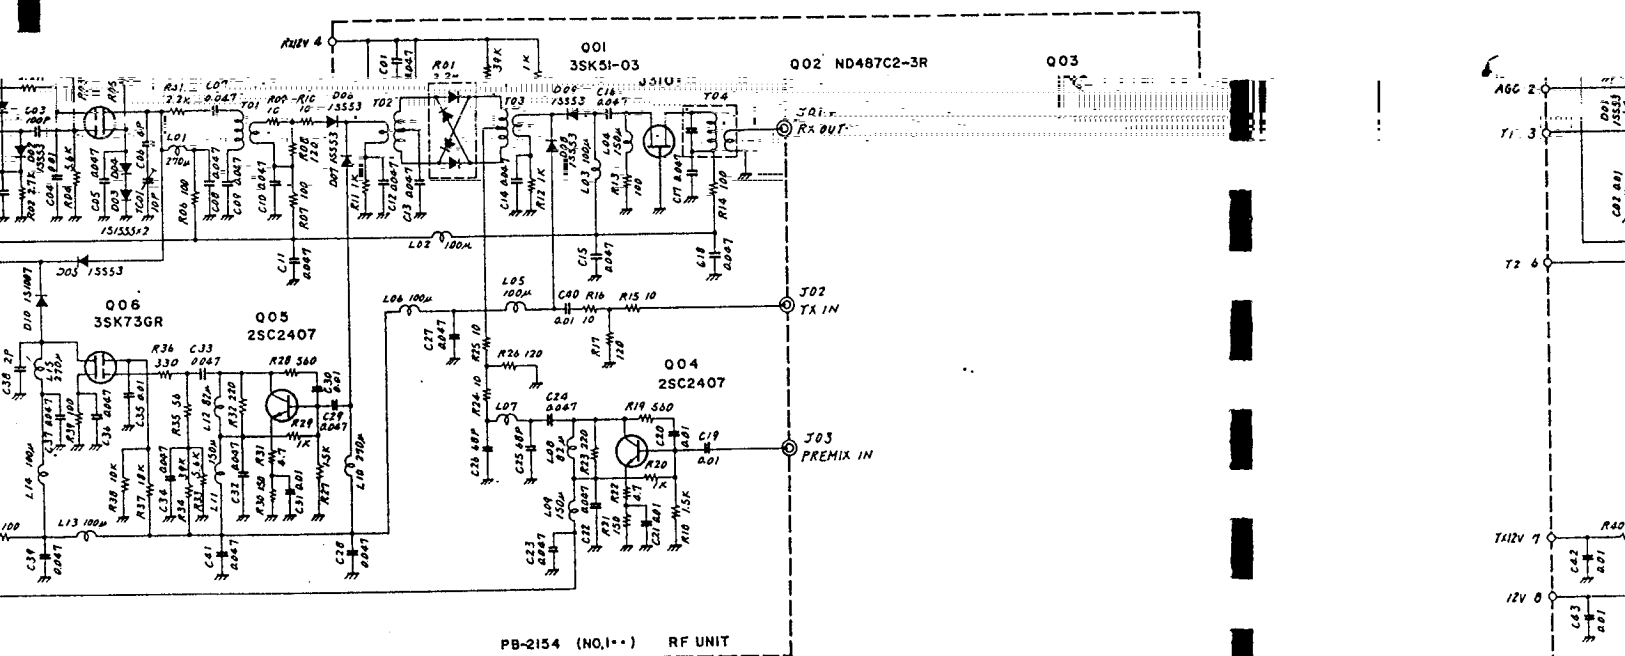


The IF signal is then passed through the SSB filter XF₄₀₁ (or optional CW filter XF₄₀₂). Selection of the filter to be used is made by diodes D₄₀₅ - D₄₀₈ (1S1007), depending on the mode of operation.

For use with the FV-101Z or FV-901DM scanning VFO, or other optional equipment, the AGC voltage is fed through buffer Q₄₂₅ (2SK19GR) and fed to the AGC OUT terminal on the EXT VFO jack, located on the rear panel.

On AM, the output signal from Q₄₁₆ is amplified by Q₂₄₀₈ (2SC380Y) and passed to the AM detector, D₂₄₀₆ (1N60). The resulting audio signal is amplified by Q₂₄₀₉ (2SC1815Y) and delivered to the final audio stage.

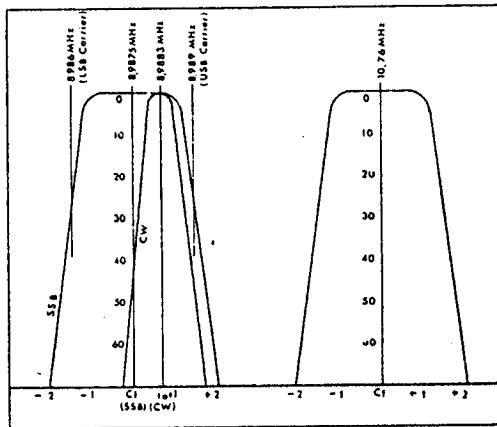

SSB, CW Filters WIDTH Filter

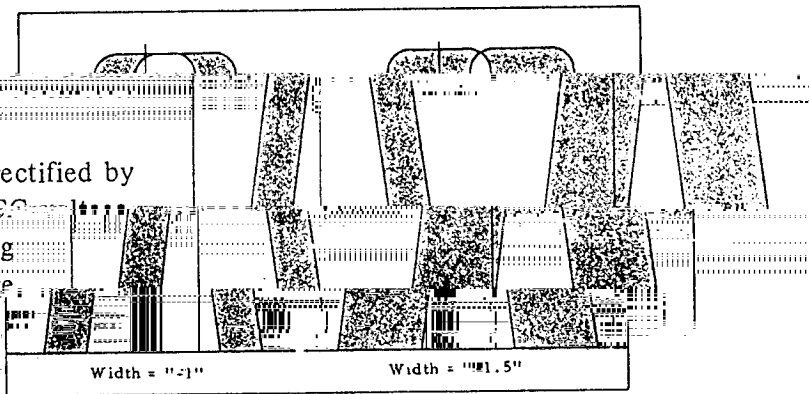

Width Control Action


The IF signal is then received by Q₄₁₂ (3SK51-03), where the signal is heterodyned with a 19.7475 MHz signal delivered from crystal oscillator and buffer amplifier Q₄₂₃ (2SC372Y), resulting in a signal of 10.76 MHz ± Δf.


The new 10.76 MHz ± Δf signal is passed through filter XF₄₀₅ to the IF second stage (2SK19GR), where the filtered signal is heterodyned with the 19.7475 MHz ± Δf signal from Q₄₂₂ (2SC372Y), resulting in a signal, the same as the original signal.

This process varies the IF signal of the second IF filter. The combination of the two filters, XF₄₀₁ and XF₄₀₅, provides a continuously variable width of the IF passband. The frequency of crystal oscillator varactor diode D₄₁₈ (1S2209) is varied by Q₄₂₁.

The output from the IF second stage is amplified by two-stage IF amplifier, consisting of Q₄₁₃ (3SK51-03) and delivered through diode switch D₄₀₁ (1S1555) to the AF UNITS.

The output from Q₄₁₆ is rectified by D₄₁₆ and D₄₁₇ (1N60) to produce an AGC voltage. The necessary buffering and applied to Q₄₁₇ (2SC372Y) provides the AGC voltage. The AGC voltage is amplified by Q₄₂₅ (2SK19GR) and applied to the AGC OUT terminal. The AGC voltage is also used for S-meter indication.

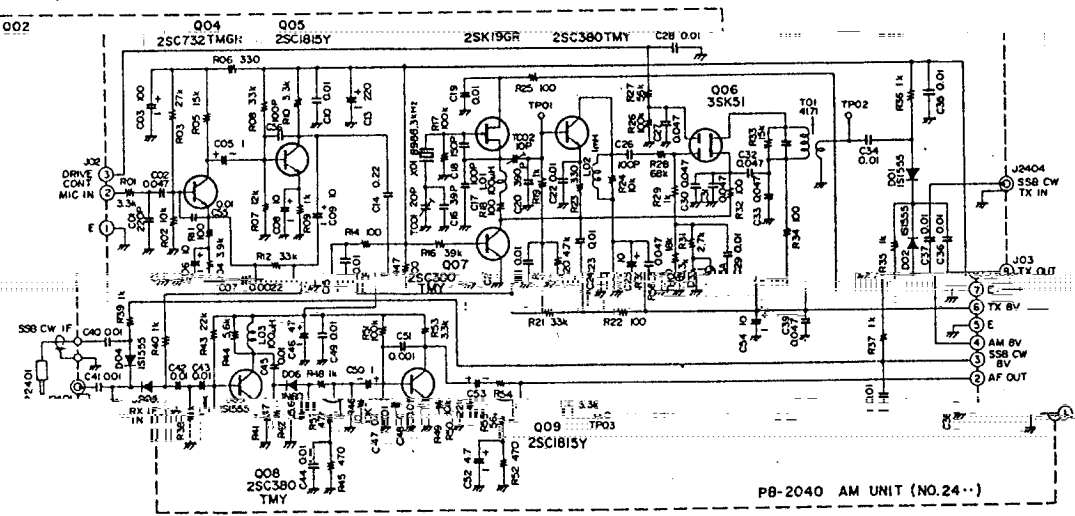

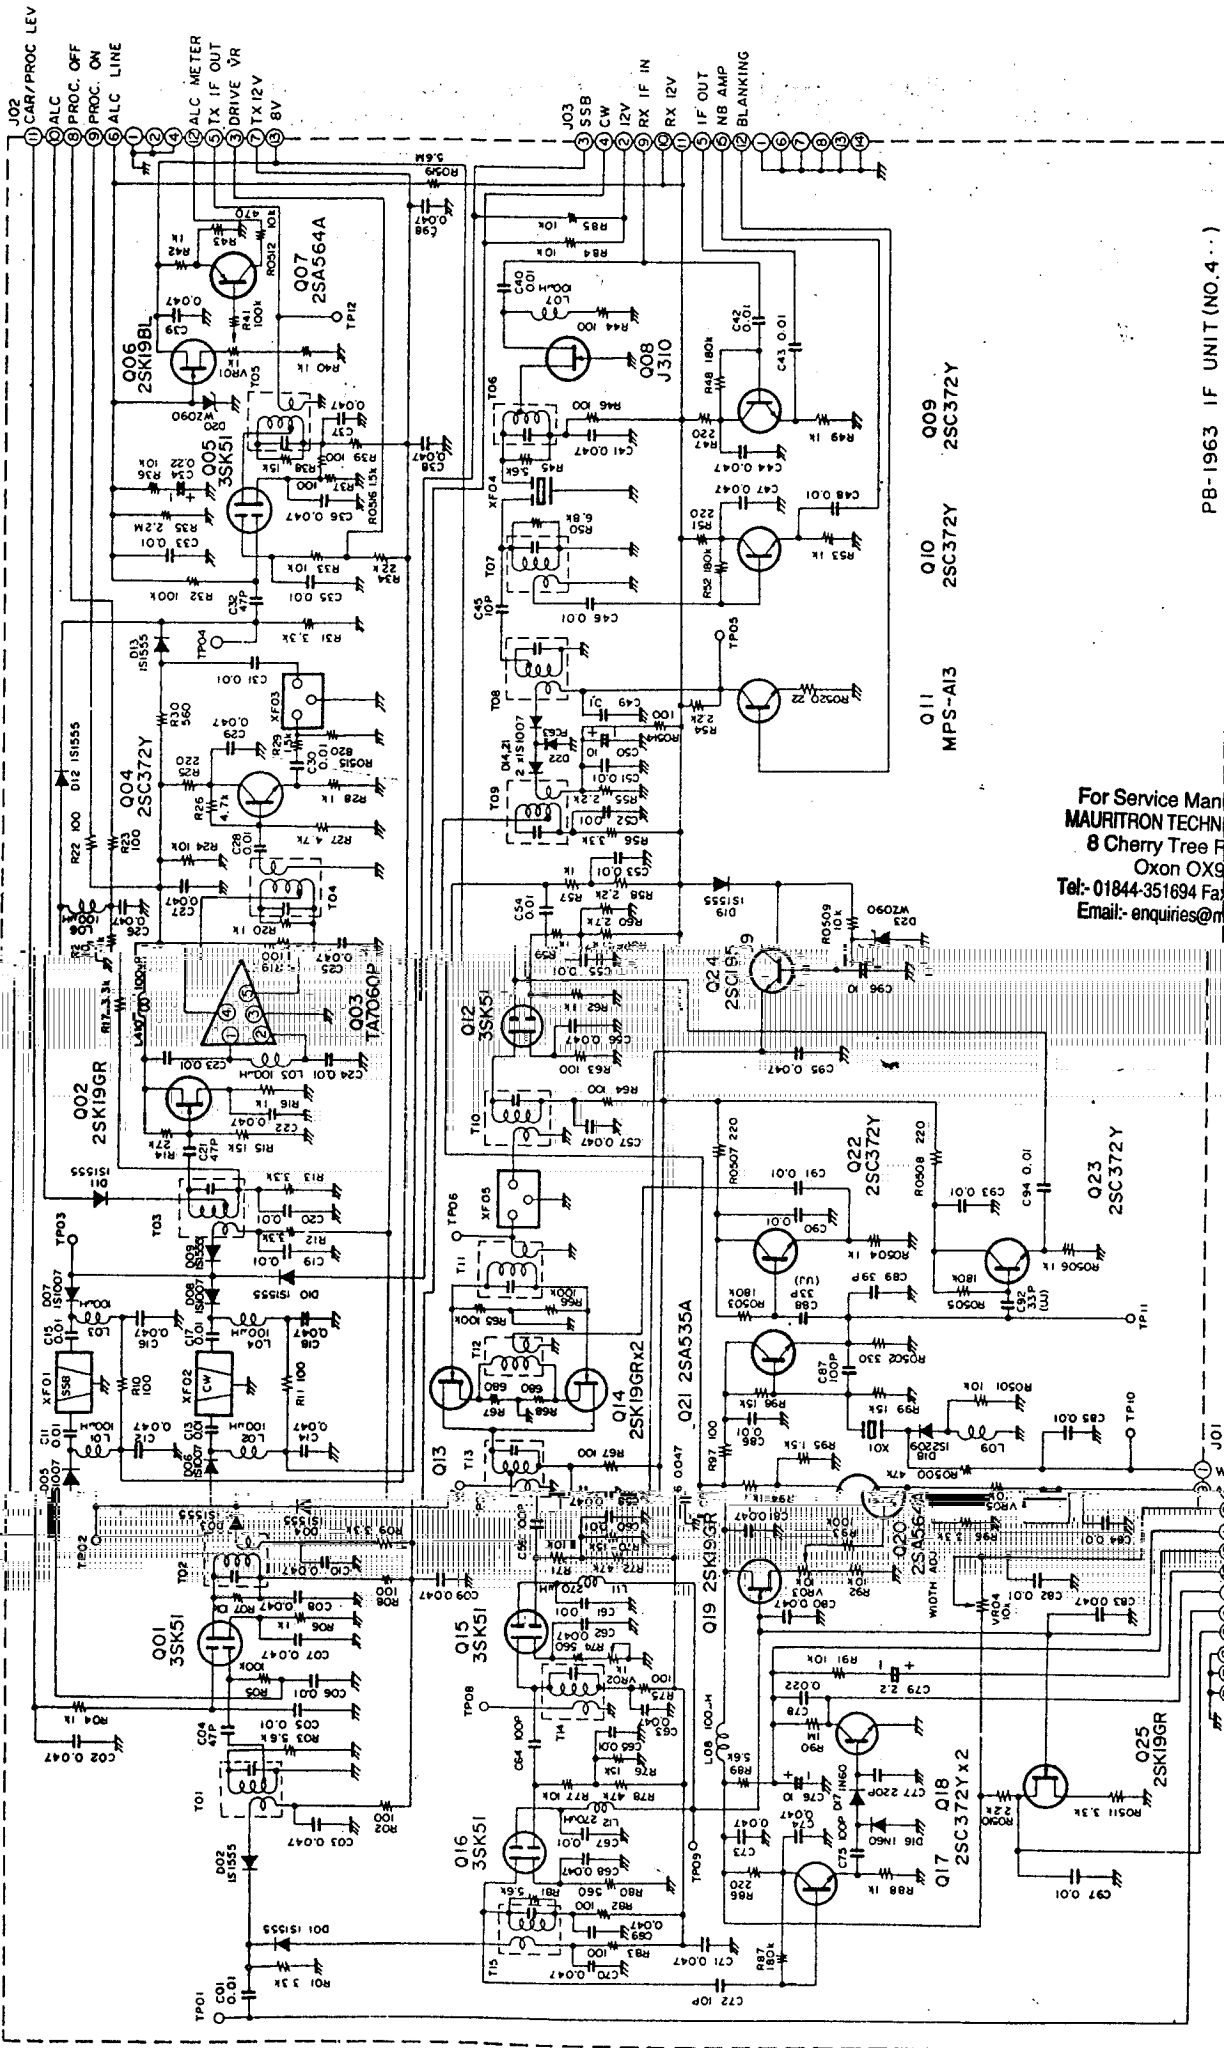

For Service Manuals Contact
MAURITRON TECHNICAL SERVICES
 8 Cherry Tree Rd, Chinnor
 Oxon OX9 4QY
 Tel: 01844-351694 Fax: 01844-352554
 Email: enquiries@mauritron.co.uk

PB-1963 IF UNIT (NO.4...)

NB-FIX UNIT (PB-1961)

A portion of the 8.9 MHz IF signal is fed through buffer Q₄₁₀ (2SC372Y) and amplified by Q₂₀₆ and Q₂₀₅ (2SC1583).

The IF signal is rectified by D₂₀₁ and D₂₀₂ (1N60), producing a DC voltage. This DC voltage is amplified by Q₂₀₂ (2SC372Y), which provides the AGC voltage for AGC purposes. The AGC voltage controls the gain of Q₂₀₆ and Q₂₀₅.

When a noise-free modulated signal is received, D₂₀₃ and D₂₀₄ (1N60) rectify the IF signal, producing a DC voltage which controls the NB switch Q₄₁₁.

When a noise pulse is received, but high because of the very slow time constant of the C₂₁₂/R₂₁₂ discharge path, AGC voltage is produced by these short-duration pulses. Transistors Q₂₀₆ and Q₂₀₅ operate at full gain, providing a high AGC voltage to the base of Q₄₁₁. When a desired signal is received, Q₄₁₁ biases D₄₁₄ to block the noise pulse.

When a desired signal and a noise pulse are received simultaneously, the AGC action is not impaired, because the amplitude difference between the desired signal and the noise pulse is still high. The front panel noise blanker level control varies the DC voltage applied to the base of Q₄₁₁.

AF UNIT (PB-1964)

The IF signal from pin 2 is fed through T₅₀₁ to the ring demodulator, consisting of D₅₀₂ - D₅₀₅ (1S1007), where the IF signal is demodulated into

audio, using the carrier signal derived from Q₅₀₃ (2SC1815Y). The carrier signal is generated by oscillator Q₅₁₄ (2SK19GR) and it oscillates at one of the following frequencies:


USB, CW-RX	8989 KHz
LSB	8986 KHz
CW-TX	8988.3 KHz


The audio signal is then amplified by audio amplifiers Q₅₀₇, Q₅₀₈ (2SC1000GR), and Q₅₀₉ (μPC2002), delivering 3 watts of audio output to the speaker.

The audio spectrum is shaped by an active low-pass filter of $f_0 = 2.7$ kHz, -12 dB/octave.

MARKER GENERATOR

A 25 kHz marker signal is provided, for alignment and testing purposes. Marker generator Q₅₀₉ (2SC1815Y) generates a basic 3200 kHz signal, which is divided into 25 kHz multiples by Q₅₀₆ (MC14024B), a binary counter.

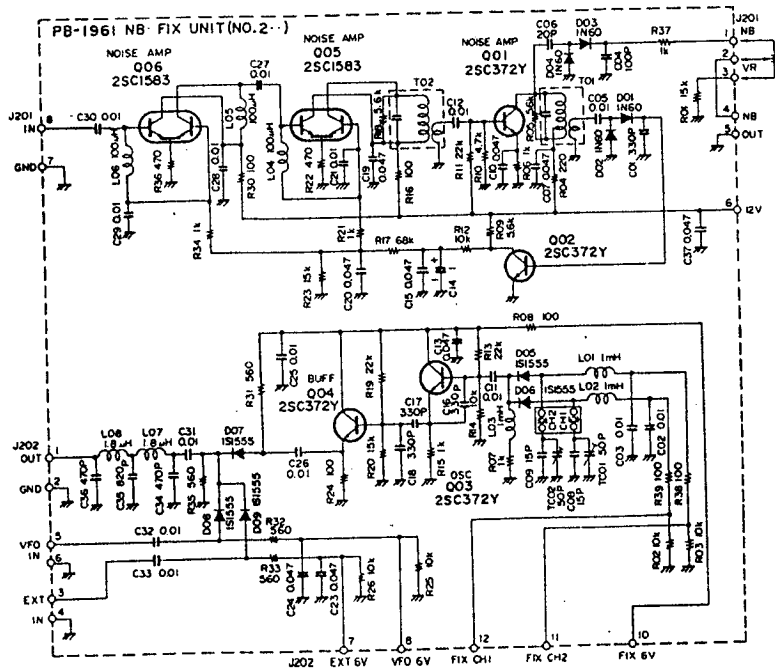

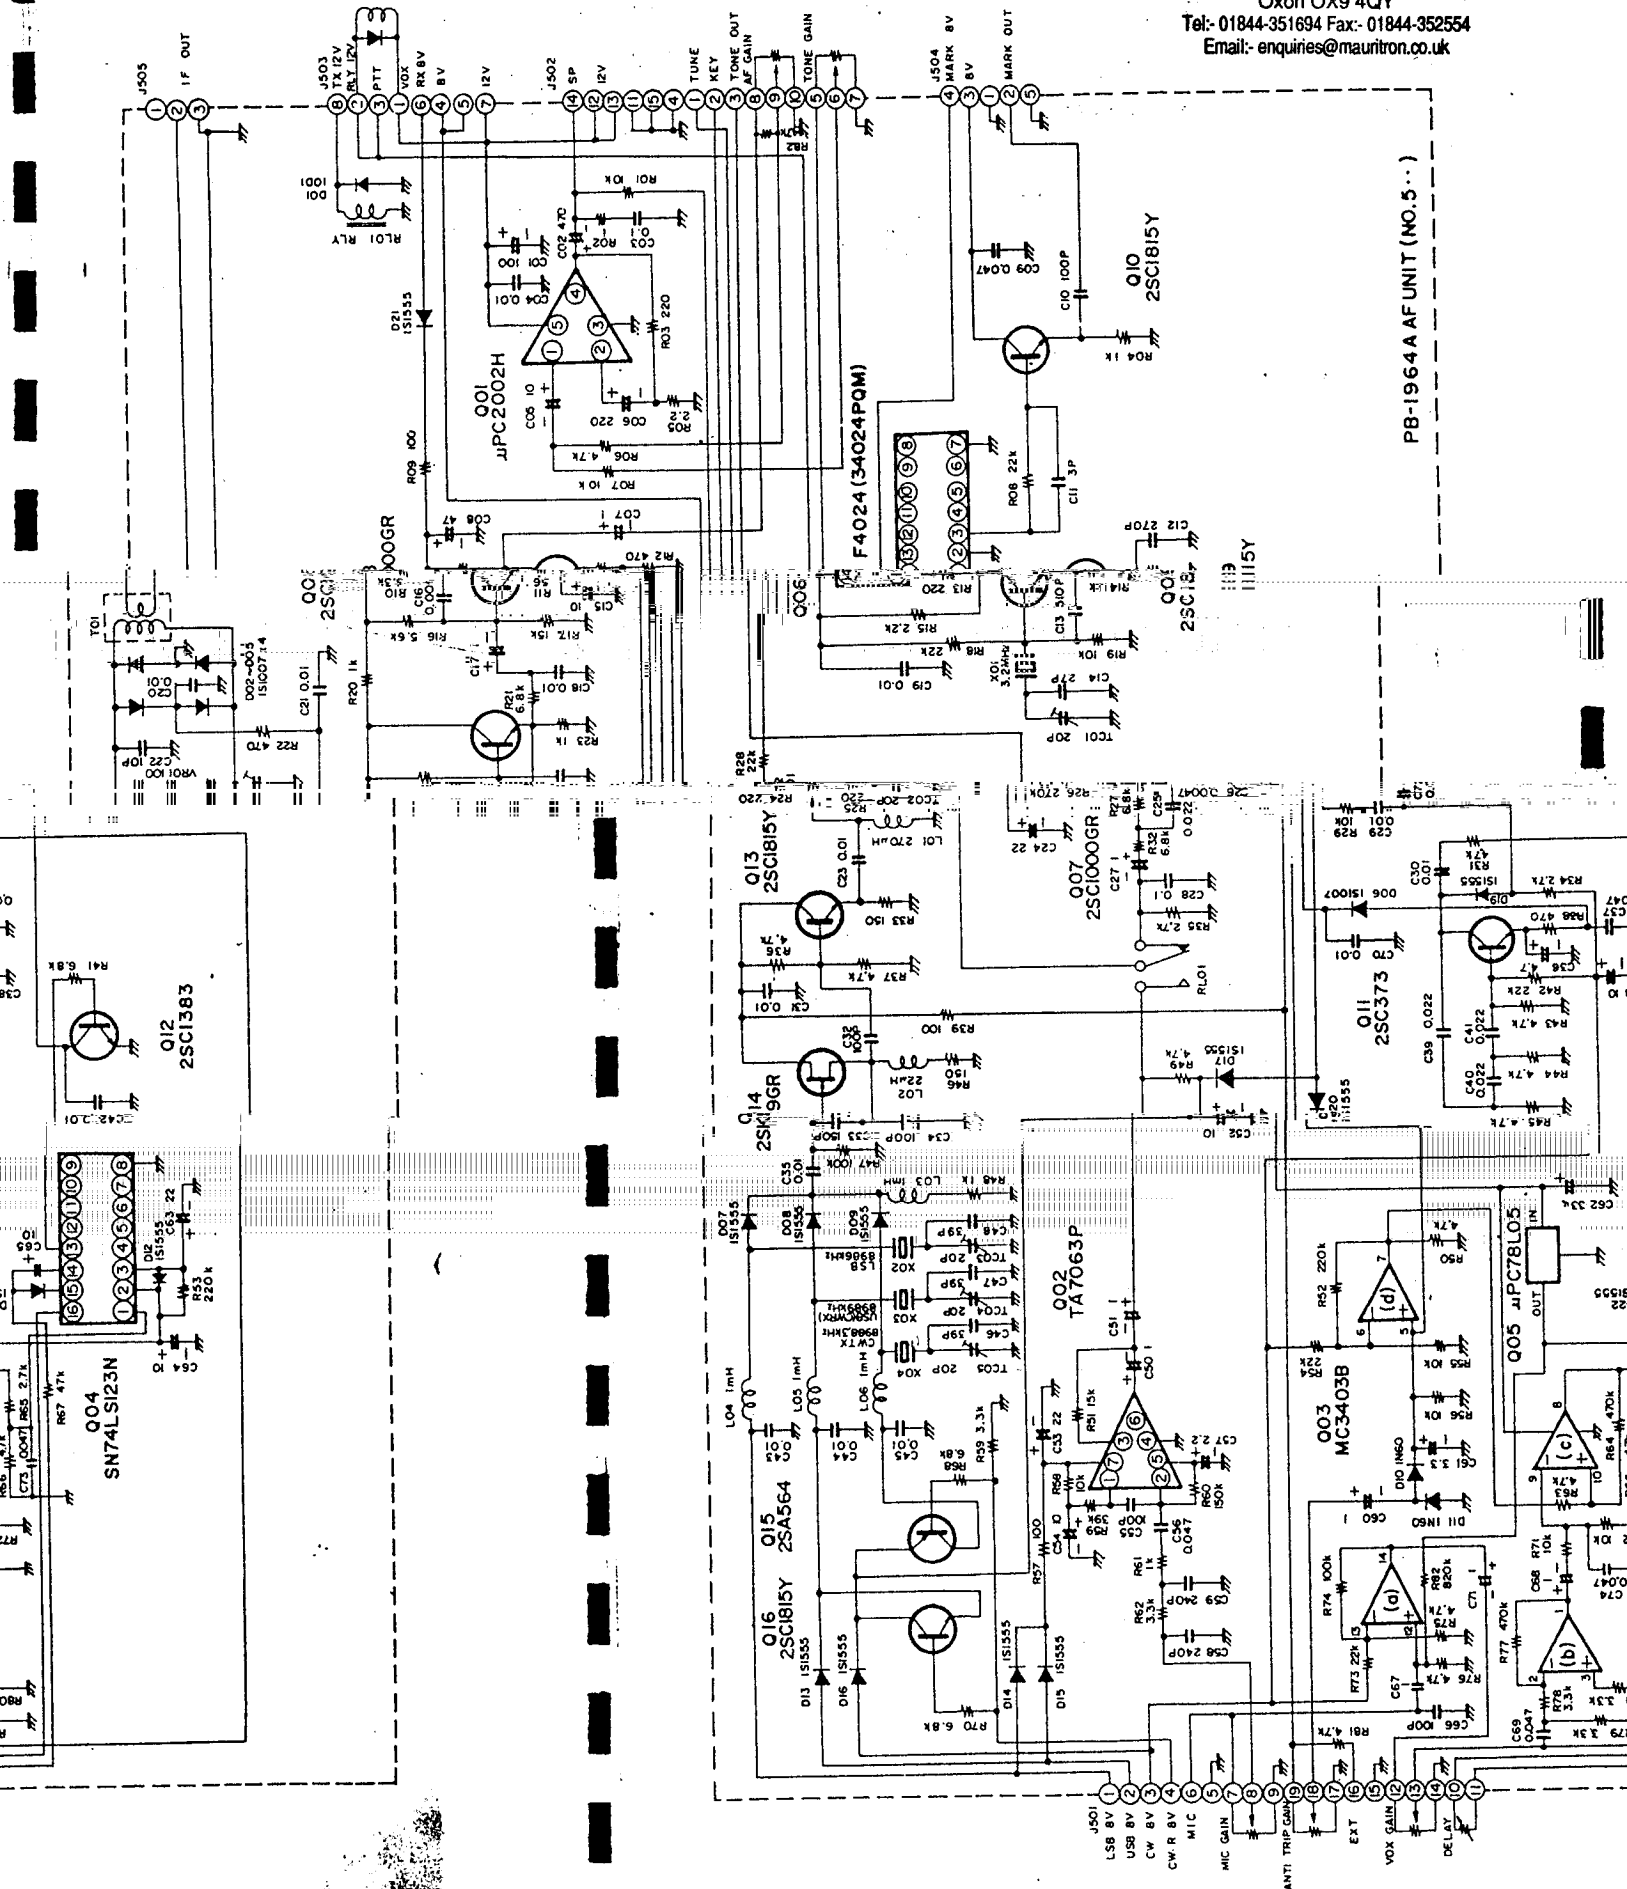

PB-1964A AF UNIT (NO.5...)

TRANSMIT CIRCUIT

SSB MODE

The output from microphone jack J₂ is fed through the MIC GAIN control VR₃ to pin 8 of the AF UNIT.

AF UNIT (PB-1964A)

The speech signal from pin 8 is amplified by microphone amplifier Q₅₀₂ (TA7063P) and fed through relay RL₅₀₁ to the ring modulator, D₅₀₂ - D₅₀₅, where the speech signal modulates the carrier signal delivered from Q₅₁₃. The resulting double sideband signal is fed to the IF UNIT.

IF UNIT (PB-1963)

The 8.9875 MHz double sideband signal is amplified by Q₄₀₁ (3SK51-03) and passed through sideband filter XF₄₀₁ by diode switches D₄₀₃, D₄₀₉ (1S1555), D₄₀₅, and D₄₀₇ (1S1007). Here the signal is converted to a single sideband signal by removal of the unwanted sideband.

The signal is then fed to buffer amplifier Q₄₀₂ (2SK19GR). When the RF speech processor is OFF, diode switches D₄₁₁ and D₄₁₂ (1S1555) feed the IF signal to IF amplifier Q₄₀₅ (3SK51-03).

When the RF speech processor is ON, the SSB signal is amplified by buffer amplifier Q₄₀₂ (2SK19GR) and further amplified by limiter Q₄₀₃ (TA7060P), where signals that exceed the preset

is applied through diode switch D₅₁₇ and relay RL₅₀₁, unbalancing the ring for CW operation. The carrier signal is fed to the IF UNIT. The signal path is that on SSB, up to the DRIVE UNIT.

DRIVE UNIT (PB-1714), PA UNIT (PB-1715)

the transmitter is accomplished by the bias voltage to the driver and final tubes. When "key up," the tubes are cut off by -35 volts to V₁₆₀₁ and -110 volts to V₁₇₀₂. These cutoff voltages are

controlling the gain of this stage. When the RF processor is off, ALC voltage is also fed to gate 1 of Q₄₀₁. Q₄₀₇ (2SA564) amplifies the ALC voltage for indication on the front panel meter.

RF UNIT (PB-2154)

The IF signal from J₁₀₂ is delivered to the Schottky barrier diode module Q₁₀₂ (ND487C2-3R), where the IF signal is mixed with a local signal delivered from Q₁₀₄ (2SC2407), producing the RF output signal. The RF signal is then amplified by Q₁₀₅ (2SC2407) and Q₁₀₆ (3SK40M), and fed through diode switch D₁₁₀ (1S1007) to the DRIVE UNIT.

DRIVE UNIT (PB-1714), PA UNIT (PB-1715)

The RF signal is amplified by driver V₁₆₀₁ (12BY7A), and delivered to PA UNIT final amplifier tubes V₁₇₀₁ and V₁₇₀₂ (6146B). The output from the final tubes is fed to the antenna jack.

A portion of the RF signal is coupled through C₁₄ to the cathode of the 12BY7A driver, for the purpose of improving the linearity of the final amplifier. This technique is known as RF negative feedback.

CW MODE

For CW, the 8.9883 MHz carrier is generated by oscillator Q₅₁₄ at the frequency set by X₅₀₄. The carrier signal is fed through buffer Q₅₁₃ and fed to the ring modulator. The same carrier frequency is

used in the tune mode. The SSB signal clipping level are sliced out.

This highly clipped SSB signal is amplified by buffer amplifier Q₄₀₄ (2SC372Y) and passed through a selective filter, XF₄₀₃, which removes RF harmonics that result from signal clipping. The signal is then fed to IF amplifier Q₄₀₅, and subsequently delivered to the RF UNIT. The front panel COMP LEVEL control, VR₄, controls the voltage at gate 2 of Q₄₀₁, thus setting the processor level.

The return of the grid circuit of the final amplifier tubes is fed to Q₄₀₆ (2SK19BL), which produces ALC voltage. This voltage is fed to gate 1 of Q₄₀₅,

DC voltage (1S1555) and modulator feedback. The signal is then fed to the PA UNIT, which is identical to the SSB mode.

DRIVE UNIT

Keying of the transmitter is accomplished by changing the bias voltage to the tubes. During CW application, the tubes are cut off by -35 volts to V₁₆₀₁ and -110 volts to V₁₇₀₂.

reduced to -0.1 volt and -60 volts, respectively,

amplifier, Q₅₀₁, for delivery to the speaker. The

VOX amplifier Q₅₀₃, providing semi-break-in operation for CW.

AM MODE

The speech signal from the microphone is amplified by Q₂₄₀₁ (2SC732GR) and Q₂₄₀₂ (2SC1815Y) and passed to modulator Q₂₄₀₅ (2SC380Y), where

the speech signal is modulated with the AM carrier signal at 8988.3 kHz delivered from Q₂₄₀₄ (2SK19GR).

The modulated signal is amplified by Q₂₄₀₆ (3SK51) and delivered to transmit mixer Q₁₀₅/Q₁₀₆.

COMMON CIRCUITS

VFO UNIT (PB-1440B-3420)

A modified Colpitts-type oscillator is used to generate a 5.0 - 5.5 MHz VFO signal, thus producing a 500 kHz tuning range. The oscillator signal

generated by Q₈₀₁ (2SC372Y) is varied by V₈₀₁, which is geared into a precision built dial tuning

mechanism. V₈₀₁ consists of two sections; the sub-blades compensate for the capacitance variation of the main blades, which may result from extreme temperature change.

Varactor diode D₈₀₁ (152209) may be varied by turning L₈₀₁, providing ±2.5 kHz offset from the dial frequency (clarifier).

The key is connected to the KEY 2 of the RECT B board, PB-1968. When closed, the base of Q₁₀₀₁ (2SA733) is causing Q₁₀₀₂ (2SC372Y) to conduct. Q₁₀₀₃ (2SA639) is thus set to 0 when it conducts. Under these circumstances, the voltage applied to V₁₆₀₁, V₁₇₀₁, and these tubes in the normal operating con-

VOX circuit

A portion of the microphone input signal is amplified by three stages of Q₅₀₃ (MC3015) which drive the VOX control gate, (SN74LS123N). The output from pin 13 of the timer is fed to the base of Q₅₁₂ (2SC1383), which switches the VOX relay on and off according to the presence or absence of a speech signal.



A portion of the speaker output is detected by D₅₁₀ and D₅₁₁ (1N60), providing a feedback signal which is fed to Q₅₀₃, preventing the speaker from tripping the VOX.

The VOX delay may be set by adjusting V₅₁₂ to the desired delay time.

CW SIDETONE

CW sidetone oscillator Q₇₁₁ (2SC373) is tuned at a frequency of approximately 800 Hz. The output from Q₇₁₁ is amplified by the transmit

VOX VFO UNIT (NO. 8...)

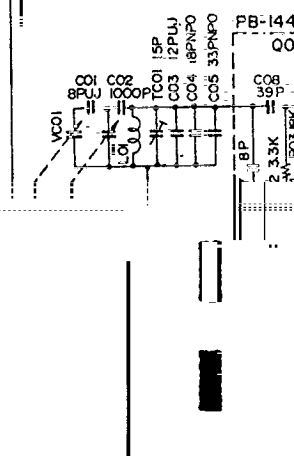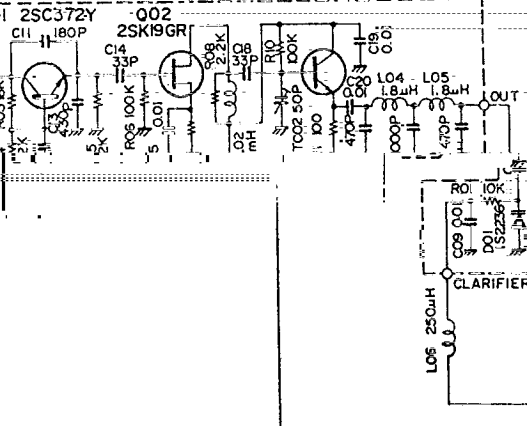

3 (SN76514N),
 e premix local
 th the VFO or
 premix output
 e premix signal
 301-T304, and
 (R). The ampli-
 UNIT, where the
 for delivery to

PREMIX OUT Frequency
~10.9875MHz
~12.9875MHz
~16.4875MHz
~19.4875MHz
~23.4875MHz
~27.4875MHz
~30.4875MHz
~33.9875MHz
~37.4875MHz
~37.9875MHz
~38.4875MHz
~38.9875MHz

The VFO signal is amplified by buffer amplifiers Q₈₀₂ (2SK19GR) and Q₈₀₃ (2SC372Y), and passed to the PREMIX UNIT.

TRANSCEIVER UNIT (PB-1961)

Two crystal-controlled channels are provided for operation with this transceiver. The oscillator signal is generated by Q₂₀₃ (2SC372Y) and amplified by Q₂₀₄ (2SC372Y), and delivered to the PREMIX UNIT. Crystals X₂₀₁ and X₂₀₂ oscillate in the 5.0 - 5.5 MHz range.

PREMIX LOCAL UNIT (PB-2153)

Crystal oscillators Q₆₀₁-Q₆₁₂ (2SC380Y) generate the premix local signal at the frequencies shown in Table 3. Diode switches D₆₀₁-D₆₁₂ (1S1555) select the proper local signal for the band in use. The local signal is then delivered to the PREMIX UNIT.




PREMIX UNIT (PB-2152)

The premix signal is produced at Q₃₀₁ a double-balanced mixer, where the signal from Q₆₀₁-Q₆₁₂ is mixed with a crystal controlled 5 MHz signal. The frequencies are shown in Table 3. The signal is passed through bandpass filter T₃₀₁ amplified by Q₃₀₁, Q₃₀₂ (2SC1923R). The amplified signal is then fed to the RF UNIT. The signal is further amplified by Q₁₀₇ in the transmitter and receiver mixers.

		XCO Frequency	PREMIX Frequency
160m	X ₆₀₁	15.9875MHz	10.4875
80m	X ₆₀₂	17.9875MHz	12.4875
40m	X ₆₀₃	21.4875MHz	15.9875
30m	X ₆₀₄	24.4875MHz	18.9875
20m	X ₆₀₅	28.4875MHz	22.9875
17m	X ₆₀₆	32.4875MHz	26.9875
15m	X ₆₀₇	35.4875MHz	29.9875
12m	X ₆₀₈	38.9875MHz	33.4875
10m A	X ₆₀₉	42.4875MHz	36.9875
10m B	X ₆₁₀	42.9875MHz	37.4875
10m C	X ₆₁₁	43.4875MHz	37.9875
10m D	X ₆₁₂	43.9875MHz	38.4875

12-16
 14-35
 14-50
 14-66

Table 3

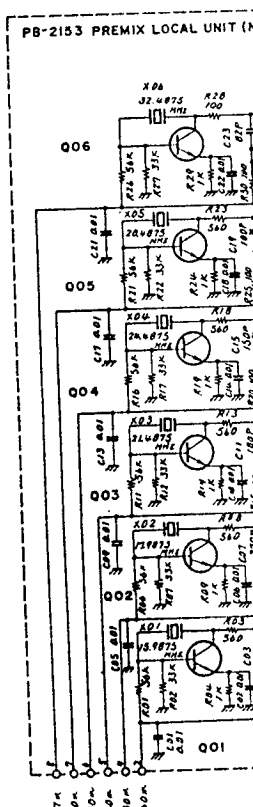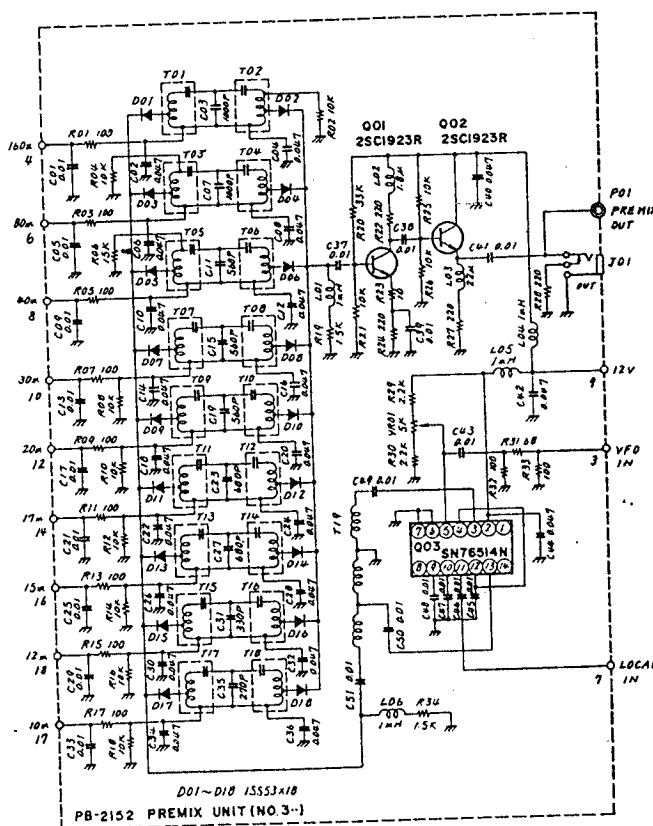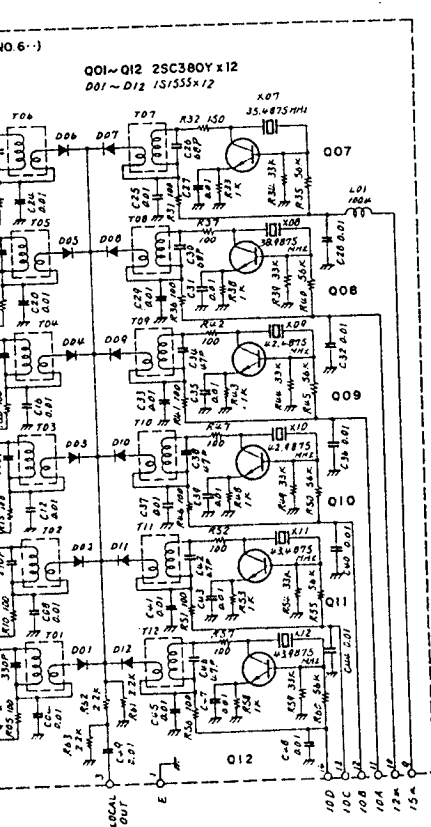

COUNTER UNIT (PB-2086A-3420/PB-2098)

The local oscillator signal is applied to Large-Scale Integrated Circuit (LSI) chip for display on the front panel digital display.

The premix signal as shown in Table 4 from the LOCAL Unit, is amplified by Q₂₃₀₁. The amplified signal is further amplified by Q₂₃₀₃ (2SC1674) and delivered to the LSI counter chip, Q₂₃₁₂ (MSM9520RS). A portion of the output from Q₂₃₀₃ is amplified by Q₂₃₀₄ (2SC1815Y) and fed to gate 2 of Q₂₃₀₁ controlling the gain of those amplifiers.


The output from the LSI is fed to the display. The output from pins 24 through 30 is delivered to segment drivers Q₂₃₁₃–Q₂₃₁₉ (2SA952L) and digit drivers Q₂₃₀₆–Q₂₃₁₁ (2SA952L) through a dynamic drive configuration. Display is performed by D₂₂₀₁–D₂₂₀₆ (HP5082-7623), seven-segment light-emitting diodes.

For Service Manuals Contact
MAURITRON TECHNICAL SERVICES
 8 Cherry Tree Rd, Chinnor
 Oxon OX9 4QY
 Tel: 01844-351694 Fax: 01844-352554
 Email: enquiries@mauritron.co.uk


	Nominal Premix Local Frequency	L S B	U S B	CW, AM
160m	10.4875–10.9875(MHz)	10.486–10.986(MHz)	10.489–10.989(MHz)	10.4883–12.9883(MHz)
80m	12.4875–12.9875	12.486–12.986	12.489–12.989	12.4883–12.9883
40m	15.9875–16.4875	15.986–16.486	15.989–16.489	15.9883–16.4883
30m	18.9875–19.4875	18.986–19.486	18.989–19.489	18.9883–19.4883
20m	22.9875–23.4875	22.986–23.486	22.989–23.489	22.9883–23.4883
17m	26.9875–27.4875	26.986–27.486	26.989–27.489	26.9883–27.4883
15m	29.9875–30.4875	29.986–30.486	29.989–30.489	29.9883–30.4883
12m	33.4875–33.9875	33.486–33.986	33.489–33.989	33.4883–33.9883
10m A	36.9875–37.4875	36.986–37.486	36.989–37.489	36.9883–37.4883
10m B	37.4875–37.9875	37.486–37.986	37.489–37.989	37.4883–37.9883
10m C	37.9875–38.4875	37.986–38.486	37.989–38.489	37.9883–38.4883
10m D	38.4875–38.9875	38.486–38.986	38.489–38.989	38.4883–38.9883

Table 4

HP5082 - 7623x6

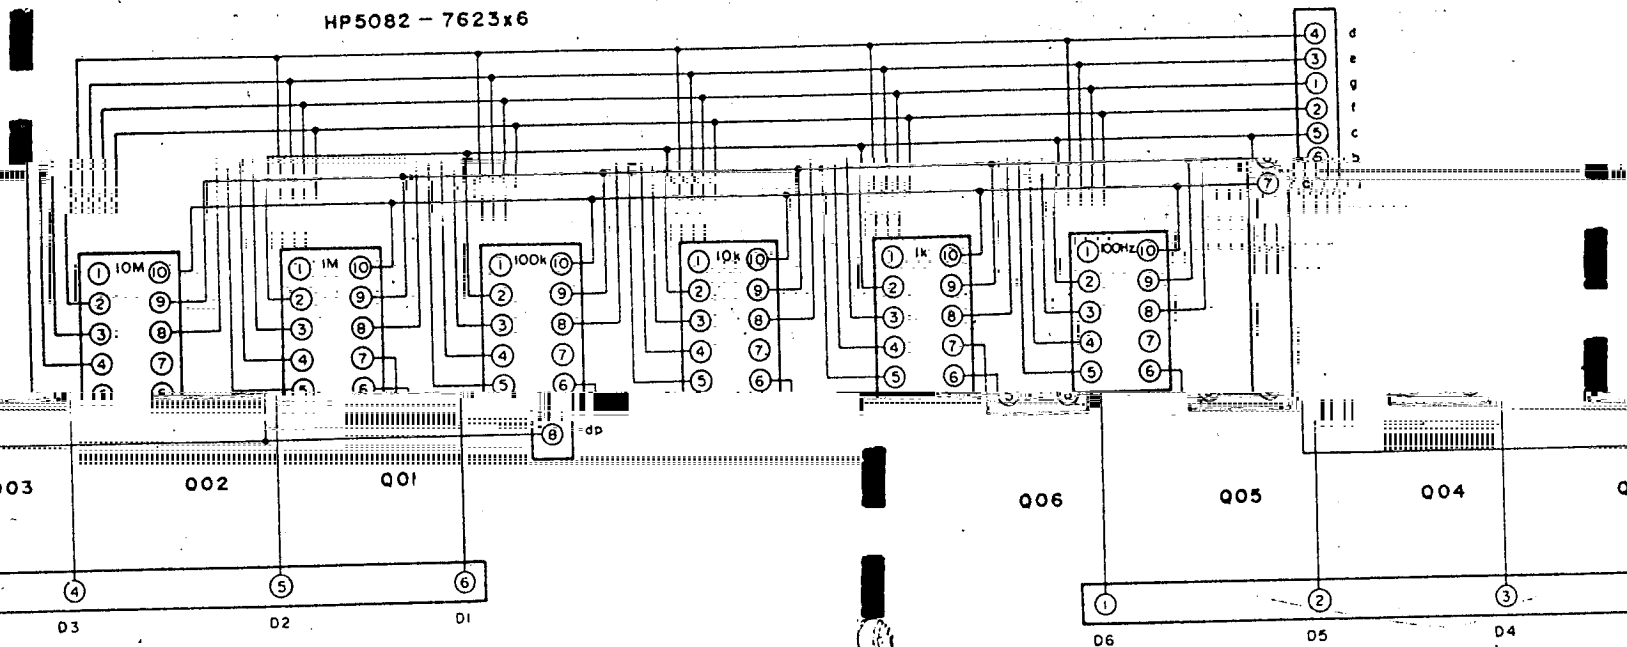


DISPLAY UNIT PB-2098

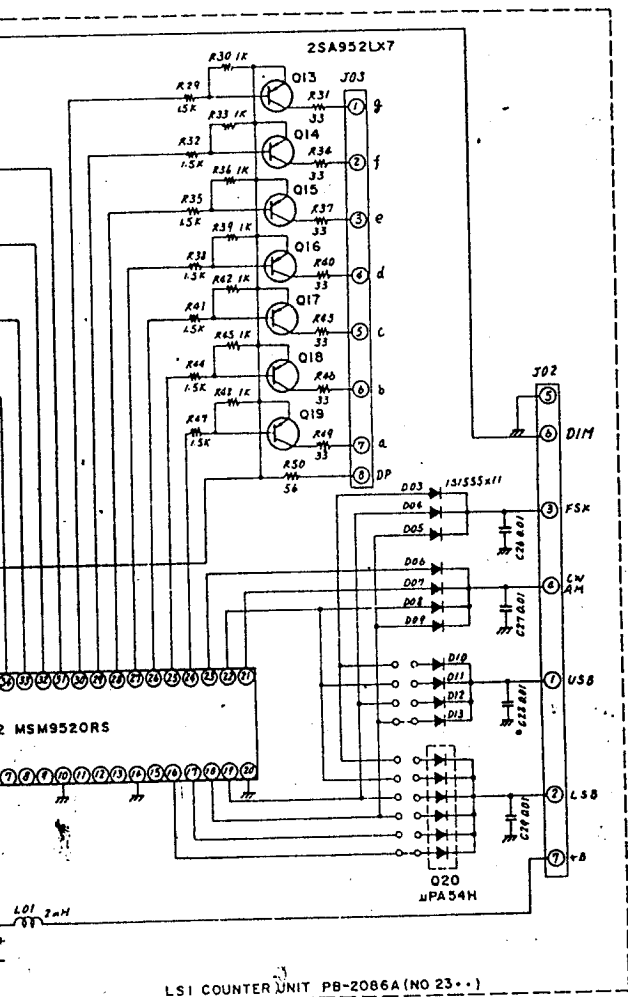

LSI COUNTER UNIT PB-2086A (NO 23-*)

COUNTER UNIT

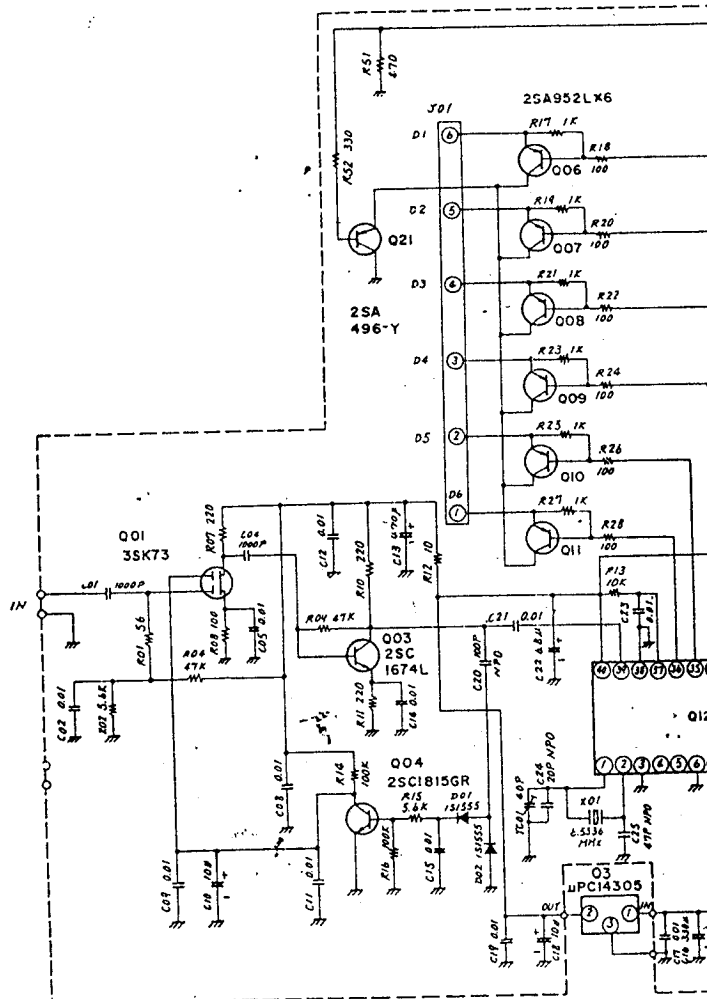


DISPLAY UNIT

POWER SUPPLY

The power supply is designed to operate from 100/110/117/200/220/234 volts AC. A DC-DC converter is an available option, providing operation from 13.5 volts DC. Insertion of the appropriate power plug into the rear panel receptacle makes the necessary connections for AC or DC operation.

When the transceiver is operated from a DC 13.5 volt power source, using the optional DC-DC converter, transistors Q₃₂₀₁ and Q₃₂₀₂ (T20A6) function as a low frequency oscillator, providing AC voltage at approximately 80 Hz to the power transformer. All of the tube heaters receive their power through the HEATER switch on the front panel. When the HEATER switch is OFF, voltage is still supplied to the receiver section, thus allowing continuous reception with reduced power consumption. The heaters of the two 6146B are connected in series to operate at 12 volts DC.

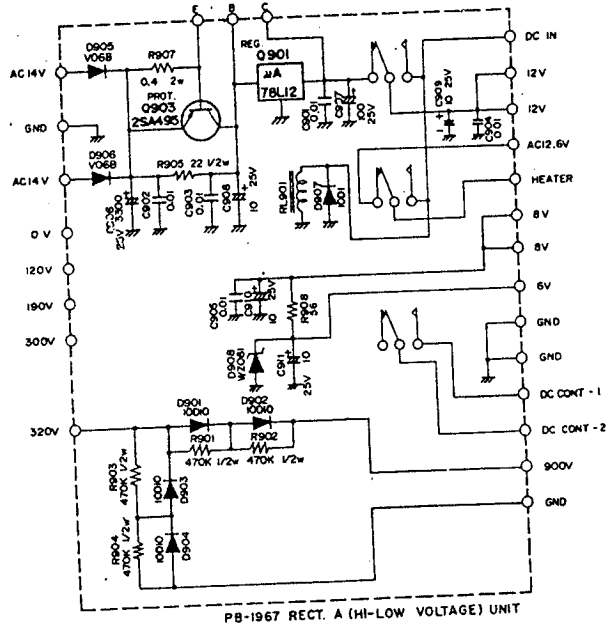


For Service Manuals Contact
MAURITRON TECHNICAL SERVICES
 8 Cherry Tree Rd, Chinnor
 Oxon OX9 4QY
 Tel: 01844-351694 Fax: 01844-352554
 Email: enquiries@mauritron.co.uk

The 14 volt AC power delivered from the secondary winding of the power transformer is rectified by D₉₀₅ and D₉₀₆ (V06B). Voltage regulators Q₁ (2SB616), Q₉₀₁ (78L12), and Q₉₀₃ (2SA495) stabilize the DC supply at 12 volts. The supply voltage is further stabilized at 8 volts by Q₃ (μ PC14308) for delivery to the counter, AF, and other units. The 6 volt supply for the VFO is provided through zener diode D₉₀₈ (WZ061), while the 5 volt supply for the TTL integrated circuits is provided by Q₅₀₅ (78L05).

The power amplifier plate voltage of +800 volts is supplied from the bridge-controlled doubler, located on the RECT. A UNIT, and consisting of D₉₀₁ - D₉₀₄ (10D10).

AC 190 volts is rectified by D₁₀₀₂ (10D10), producing 210 volts for the screen grid supply of the power amplifier tubes. The screen grid voltage for the driver tube is obtained by rectifying 250 volts AC at D₁₀₀₁ (10D10), producing 300 volts. This voltage is dropped to 180 volts by a resistor for delivery to the driver tube screen grid.

The 120 volt AC power from the transformer secondary winding is rectified by D₁₀₀₃ (10D10) in order to obtain -140 volts for the driver and final amplifier tube grid bias.

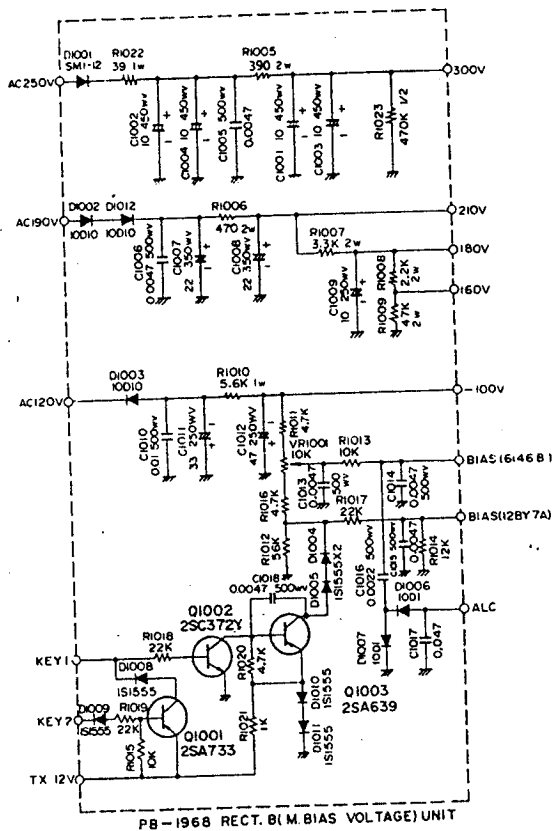

F4F-33000-100000-100000-100000

CAPACITOR BOARD
(PB-1969)

DC-DC CONVERTER
(OPTION)

BIAS SE
VR1001

RECT B BOARD
(PB-1968)

NB FIX UNIT
(PB-1961)

IF UNIT
(PB-1963)

COUNTER UNIT
(PB-2086A)

AM UNIT
(PB-2040)

VFO UNIT
(PB-1100-2100)


TC1

DRIVE BOARD
(PB-1714)

RF UNIT
(PB-2154)

PREMIX LOCAL UNIT
(PB-2152)

PREMIX UNIT

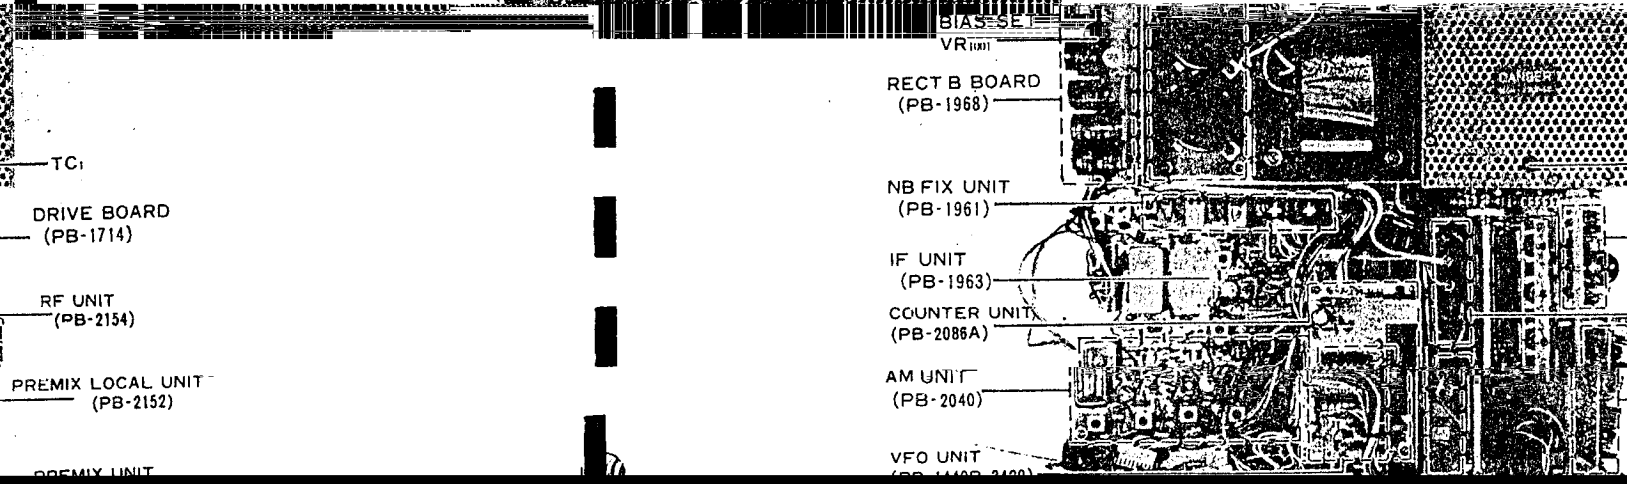

MAINTENANCE AND ALIGNMENT

WARNING

DANGEROUS VOLTAGES ARE PRESENT WITHIN THIS TRANSCEIVER. USE EXTREME CAUTION WHEN WORKING ON THE TRANSCEIVER WITH THE COVERS REMOVED. DISCHARGE ALL CAPACITORS BY SHORTING THEM TO GROUND WITH AN INSULATED SCREWDRIVER AFTER POWER HAS BEEN REMOVED. OBSERVE NORMAL SAFETY PRECAUTIONS AT ALL TIMES.

CAUTION

Never operate this transceiver in the transmit mode

AF UNIT ALIGNMENT

VOX Circuit

Anti-Inductance

1. Tune in a signal on the FT-101ZD receiver, and adjust the AF GAIN control for a normal listening level. Position the microphone near the speaker, with the MODE switch in the SSB mode. Increase the VOX GAIN control on the front panel until the speaker output causes the VOX relay to switch the trans-

ceiver to transmit. Set the ANTITRIP control VR₉, located on the rear apron, to the point that will just prevent the speaker output from tripping the VOX relay.

2. Now place the microphone in the normal operating position, and speak into the microphone to see if your voice will activate the VOX relay. If not, VR₉ may be advanced too far.

VOX relay delay setting

1. Adjust the DELAY control VR_{2b}, located on the front panel, for the desired delay time. This may require a different setting for phone and CW operation, owing to differing operating techniques. For CW or phone operation using a footswitch, the VOX GAIN control may be rotated fully counter-clockwise to the PTT position.

- (2) Vacuum Tube Voltmeter (VTVM): Hewlett-Packard Model 410B or equivalent, with an RF probe good to 40 MHz.
- (3) Dummy Load: Yaesu Model YP-150 or equivalent, with 50 ohm non-reactive load impedance, rated to 150 watts average power.
- (4) AF Signal Generator: Hewlett-Packard Model 200AB or equivalent.
- (5) A general coverage receiver covering 3 to 30 MHz, with a 100 kHz crystal calibrator.
- (6) A frequency counter, Yaesu Model YC-500 or equivalent, with resolution to 0.01 kHz and frequency coverage to 30 MHz.
- (7) An oscilloscope, Hewlett-Packard Model 1740A or equivalent.

without a matched antenna or dummy load connected to the antenna receptacle on the rear panel. It is possible to damage the final amplifier tube and the pi network components if the transmitter is operated without the proper load termination.

GENERAL

This transceiver has been carefully aligned and tested at the factory. With normal use, it should not require other than the usual attention given

to electronic equipment. Service or realignment of a major component may require substantial adjustment; under no circumstances, though, should realignment be attempted unless the operation of the transceiver is fully understood, the malfunction has been carefully analyzed, and the fault has definitely been traced to misalignment. Sudden difficulties are almost always caused by component failure rather than misalignment.

Service work should only be performed by experienced personnel, using the proper test equipment.

EQUIPMENT REQUIRED

- (1) RF Signal Generator: Hewlett-Packard Model 606A or equivalent, with one volt output at 50 ohms, and frequency coverage to 30 MHz.

CW Sidetone

1. The CW sidetone level may be adjusted by means of VR₁₀, located on the rear apron.

Marker Frequency setting


1. Preset the controls as follows:
BAND 30 m
DIAL 10 MHz
PRESELECT . Peaked for maximum response
MODE TUNE
2. Place the NB/MARK switch in the MARK position. Tune in the WWV or JJY signal, and adjust TC₅₀₁ for an exact zero beat with the carrier of the incoming signal.

Carrier Frequency Adjustment

A. SSB Carrier Point

1. Tune up the transmitter on 20 meters, LSB mode, into a dummy load. Apply a 1 kHz audio signal to the microphone input, and adjust the audio generator output until the transmitter power output is 60 watts, as indicated on the dummy load wattmeter.
2. Shift the audio generator output frequency to 300 Hz, without changing the output level. Adjust TC₅₀₃ for a power output reading of 15 watts on the wattmeter.
3. Shift the MODE switch to USB. Adjust TC₅₀₄ for an identical 15 watt reading on the wattmeter.

For Service Manuals Contact
MAURITRON TECHNICAL SERVICES
8 Cherry Tree Rd, Chinnor
Oxon OX9 4QY
Tel:- 01844-351694 Fax:- 01844-352554
Email:- enquiries@mauritron.co.uk

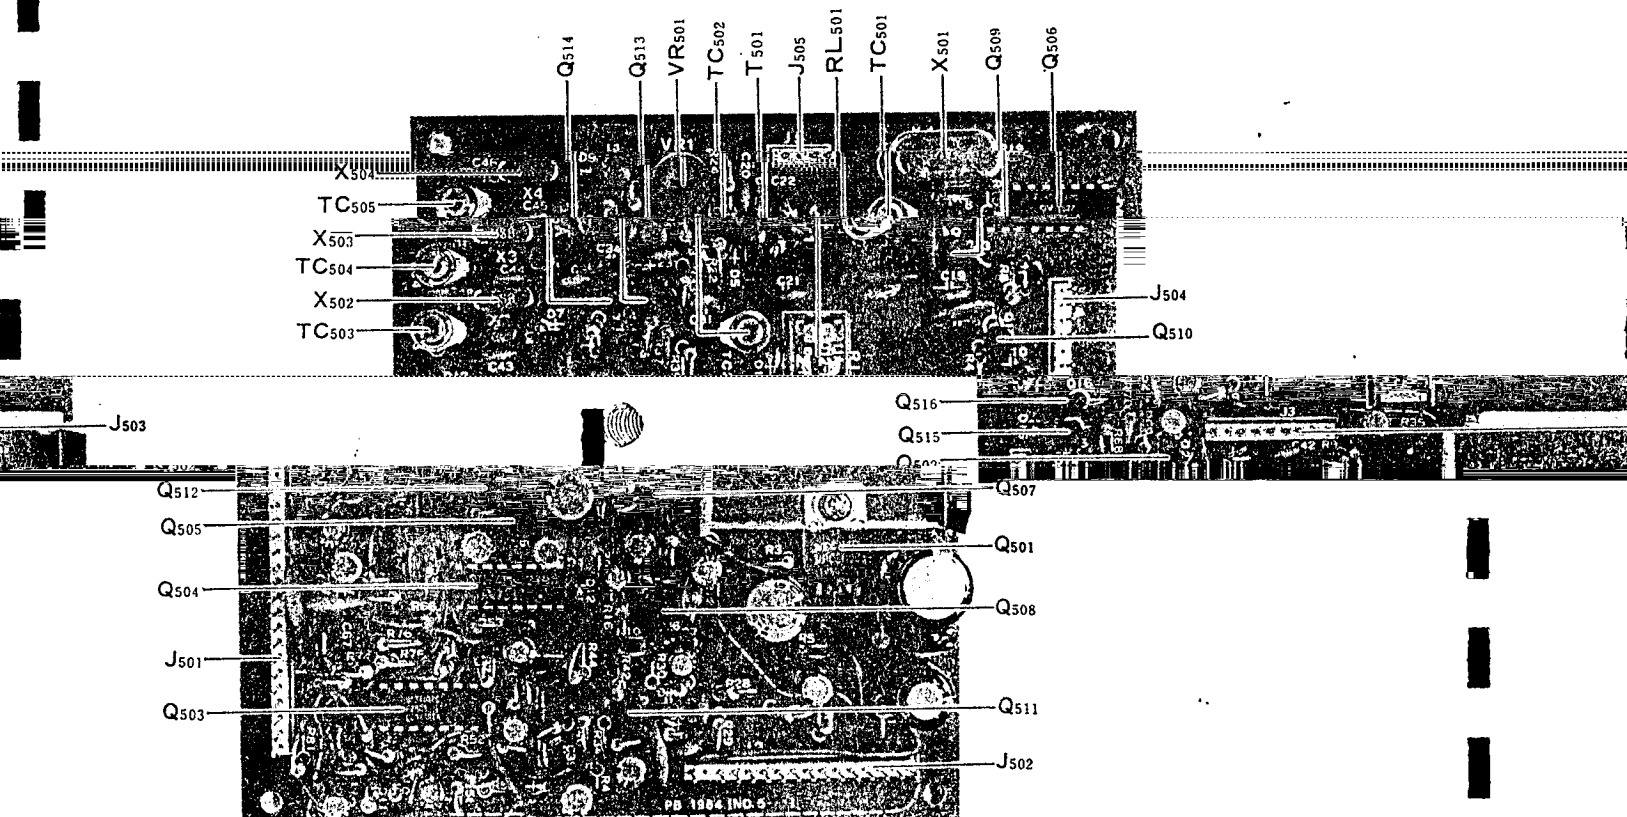

AF UNIT (PSE 19629)

4. Recheck the LSB adjustment, as well as the carrier balance adjustment, after performing the carrier point alignment. The background noise, when switching between USB and LSB, should not change.

monitor receiver, tuned to the transmitter frequency, and adjust VR₅₀₁ and TC₅₀₂ for a minimum S-meter reading on the external receiver.

4. This adjustment should be repeated several times on LSB and USB, in order to ensure complete carrier nulling.

Carrier Balance:

Turn up the transceiver or 20 meters, USB mode, into a dummy load. Set the main tuning dial to 14.250 MHz. Connect the RF probe of the VTVM to the antenna jack. Disconnect all microphones, etc., from the microphone jack.


Activate the transmitter by placing the VOX MAIN control into the MOX position. Adjust VR₅₀₁ and TC₅₀₂ for a minimum VTVM reading.

If a VTVM is unavailable, use an external

C. CW Carrier Point

1. Connect a frequency counter to TP₄₀₂, located on the IF UNIT. Place the MODE switch in the TUNE position.
2. Adjust TC₅₀₅ for a frequency counter reading of exactly 8988.3 kHz.
3. When using the optional CW filter; a substantial loss on transmit, when in the CW-N position, may indicate the need for adjustment as indicated in steps 1 and 2.

- B. Ca
1. Tu
- m
- tu
- pr
- D
- m
2. A
- G
- V
- re
3. If

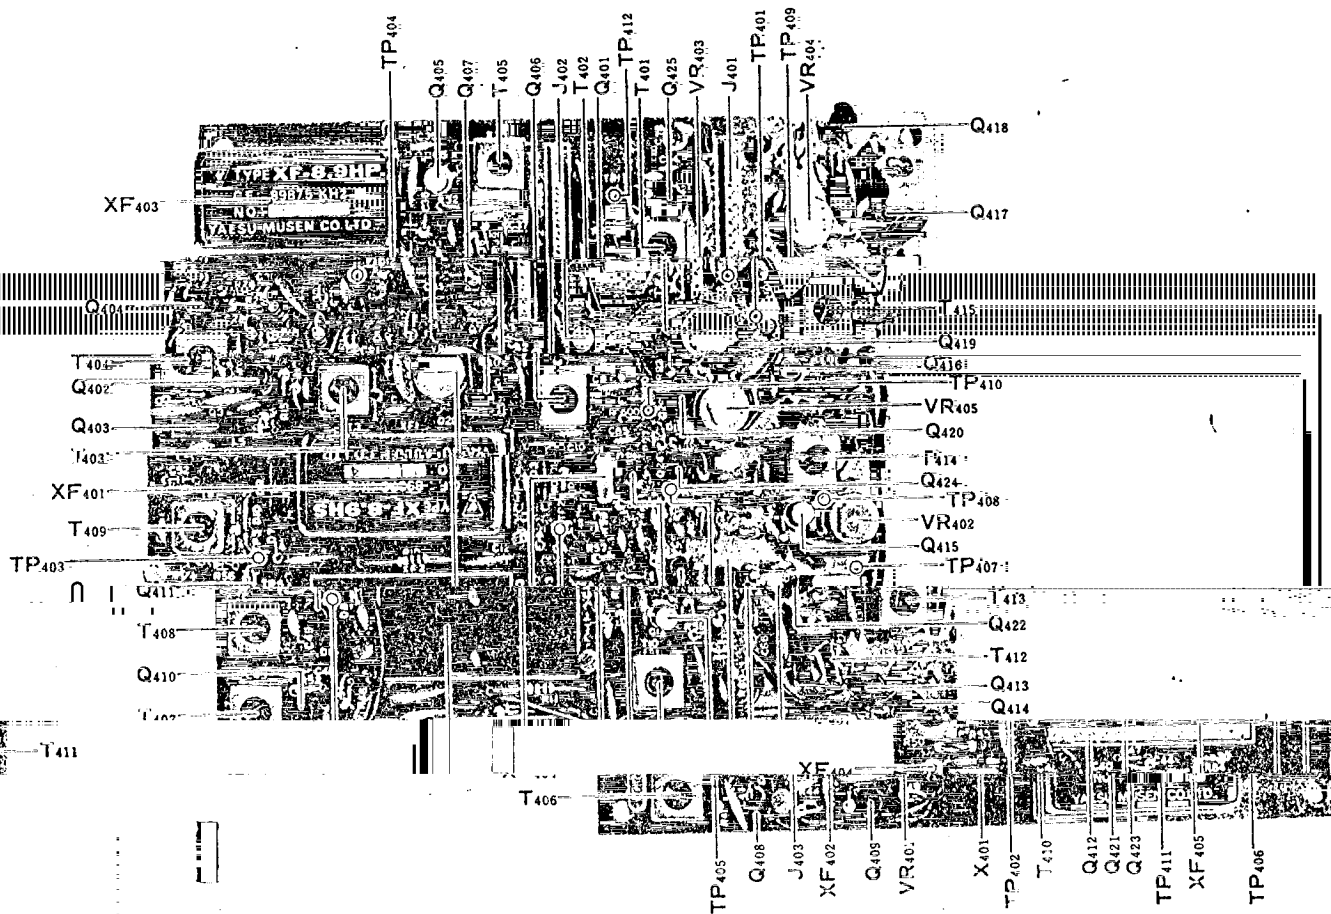

IF UNIT (PB-1963)

IF UNIT ALIGNMENT

S-Meter Sensitivity Adjustment

1. Set the BAND switch to 20 meters, the main

dial to 14.250 MHz, and set the RF GAIN

fully clockwise.

2. Set the signal generator to 14.250 MHz, and set its output to 6 dB. Tune the signal generator signal on the receiver, and peak the preselector for maximum signal strength. The S-meter should just begin to move with the 6 dB input.

3. Adjust VR₄₀₃ for a reading of 0 on the S-meter.

4. Set the generator output to 100 dB, and adjust VR₄₀₅ for a reading of S9 + 60 dB on the S-meter. Confirm that the preselector is peaked.

5. Return the signal generator output to 6 dB, and recheck the adjustment of VR₄₀₂.

Variable IF Bandwidth Alignment

1. Set the controls as follows:

BAND 20 m

DIAL 14.200 MHz

RF GAIN Fully clockwise

WIDTH switch .. OFF

MODE USB

Peak the preselector for maximum response against the marker signal or background noise.

2. Connect the frequency counter to TP₄₁₁. Adjust VR₁₅₀₁ for a reading of exactly 19.7475 MHz.

3. Place the WIDTH switch ON. Make sure that the WIDTH control is exactly in the 12 o'clock position. Adjust VR₄₀₄ for a reading of exactly 19.7475 MHz on the frequency counter.

BAND WIDTH CONTROL UNIT (PB-1972) VR1501


RECTIFIER B UNIT

Bias Adjustment

1. Set the MODE switch to USB or LSB, and set the MIC GAIN control fully counterclockwise.

2. Place the METER switch in the IC position, and set the VOX GAIN control to VOX. Adjust the BIAS control located on the RECT, B UNIT (PB-1968) VR₁₀₀₁, for a reading of 50 mA. For 10 watt models, the correct meter reading is 25 mA.

VR1001

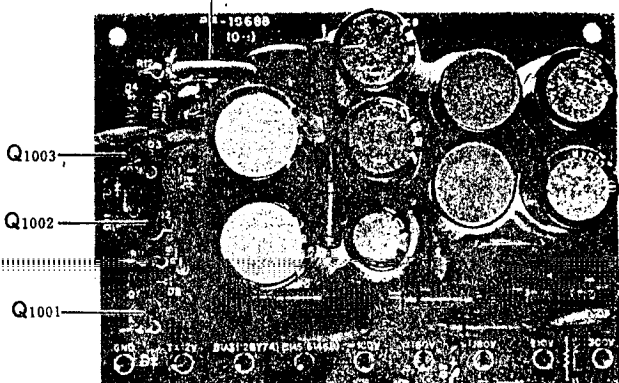

switch between USB and LSB, and observe background noise. If there is any difference, adjust VR₁₀₀₁ until the background noise is the same.

RECT B UNIT (PB-1968)

ALC Meter Alignment

In any band, set the MODE switch to USB. Set the meter switch to ALC.

With no speech input, activate the transmitter. Adjust VR₄₀₁ for a 0 reading on the ALC meter scale.

For Service Manuals Contact
MAURITRON TECHNICAL SERVICES
8 Cherry Tree Rd, Chinnor
Oxon OX9 4QY
Tel: 01844-351694 Fax: 01844-352554
Email: enquiries@mauritron.co.uk

ALC Meter

1. On the Set
2. With Ad me

VFO UNIT

counter to the transmitter output. A 1-turn loop


is usually sufficient to provide indication on the counter.

UNIT is very critical in its adjustment. This is not an area which should ever be traced to other areas of the transmitter (e.g., stability in the supply voltage, etc.). For all cases regarding VFO repair should be referred to an experienced service technician.

Following components are of interest from a standpoint:

- TC₃₀₁ is the band set trimmer.
- TC₃₀₂ is the VFO level set trimmer.

To insure proper VFO injection, connect the probe to the VFO output. Adjust TC₃₀₂ for a reading of 100 mV.

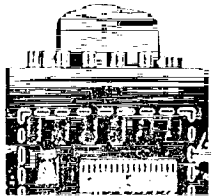

SELECT SWITCH

If you have never adjusted a bandpass filter previously, this may take some practice. Perform the adjustments on each band, according to the chart.

BAND	TRANSFORMER	PASSBAND
160m	T ₃₀₁ , T ₃₀₂	10.4-11.0(MHz)
80m	T ₃₀₃ , T ₃₀₄	12.4-13.0
40m	T ₃₀₅ , T ₃₀₆	15.9-16.5
30m	T ₃₀₇ , T ₃₀₈	18.9-19.5
20m	T ₃₀₉ , T ₃₁₀	22.9-23.5
17m	T ₃₁₁ , T ₃₁₂	26.9-27.5
15m	T ₃₁₃ , T ₃₁₄	29.9-30.5
12m	T ₃₁₅ , T ₃₁₆	33.5-34.0
10m A	T ₃₁₇ , T ₃₁₈	36.9-39.0

Table 7

AM UNIT

1. Set the BAND switch to 40, the MODE switch to AM, and the DRIVE control to the 3 o'clock position. Tune up the transmitter in the usual fashion. Now adjust the core of T₂₄₀₁ for maximum power output into the dummy load/wattmeter.

Connect a frequency counter to TP₂₄₀₂. Adjust TC₂₄₀₁ for a counter reading of exactly 8988.3 kHz while transmitting.

Connect the RF probe of the VTVM to TP₂₄₀₁, and adjust TC₂₄₀₂ for a reading of 50 mV while transmitting.

PREMIX LOCAL UNIT


Premix Local Alignment

1. Connect the RF probe of the VTVM to the output of MJ₃.
2. Refer to Table 6, and adjust the appropriate transformer for a level of 300 mV for each band and crystal, as shown in the table.

PREMIX UNIT

For this alignment, a wideband (not peak) sweep generator, as well as an oscilloscope, should be used.

1. Press the EXT select switch. Apply 5.0 - 5.5 MHz sweep output to the VFO output terminal at the rear apron external VFO jack. Connect a high-impedance probe of an oscilloscope to J₃₀₁.
2. Adjust the transformers shown in Table 7 for a flat response across the entire passband.

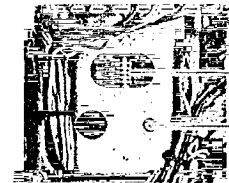

BOARD

VC₈₀₁

TC₈₀₁

BAND	CRYSTAL	FREQUENCY	TRANSFORMER
160m	X ₆₀₁	15.9875MHz	T ₆₀₁
80m	X ₆₀₂	17.9875	T ₆₀₂
40m	X ₆₀₃	21.4875	T ₆₀₃
30m	X ₆₀₄	24.4875	T ₆₀₄
20m	X ₆₀₅	28.4875	T ₆₀₅
17m	X ₆₀₆	32.4875	T ₆₀₆
15m	X ₆₀₇	35.4875	T ₆₀₇
12m	X ₆₀₈	38.9875	T ₆₀₈
10m A	X ₆₀₉	42.4875	T ₆₀₉
10m B	X ₆₁₀	42.9875	T ₆₁₀
10m C	X ₆₁₁	43.4875	T ₆₁₁
10m D	X ₆₁₂	43.9875	T ₆₁₂

Table 6


NB-FIX UNIT

Fixed Channel Frequency Alignment


When the optional fixed channel crystals are being used, they may be placed exactly on the correct frequency by adjusting TC₂₀₁ (for channel 1) and TC₂₀₂ (for channel 2). Confirmation of the correct frequency may be made with an external receiver or by loosely coupling a probe from the frequency

The VFO As well, require al usually ca cise (in this reaso be referre The follo service st TC₈ TC₈ To conf VTVM t reading o


For Service Manuals Contact
MAURITRON TECHNICAL SERVICES
 8 Cherry Tree Rd, Chinnor
 Oxon OX9 4QY
 Tel: 01844-351694 Fax: 01844-352554
 Email: enquiries@mauritron.co.uk

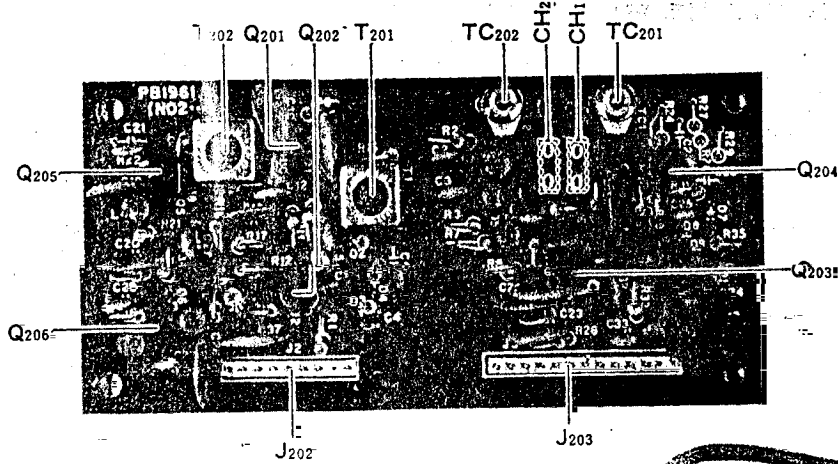


NB-FIX UNIT (PB-1961)

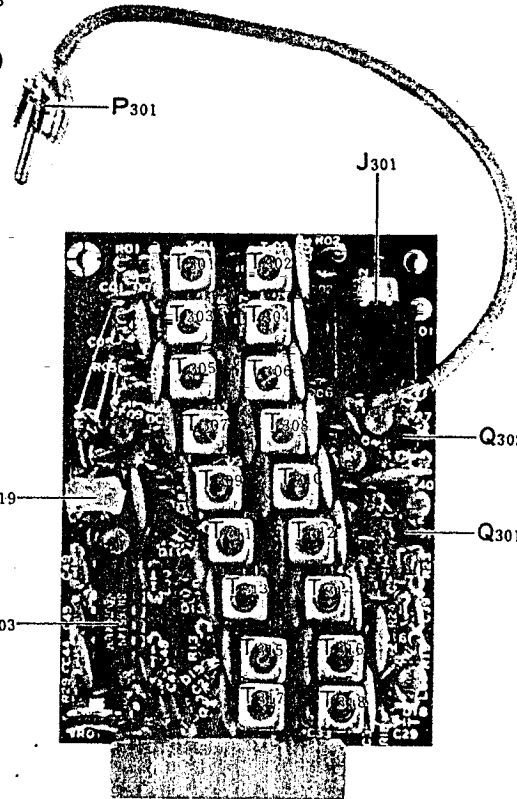

PREMIX UNIT (PB-2152)

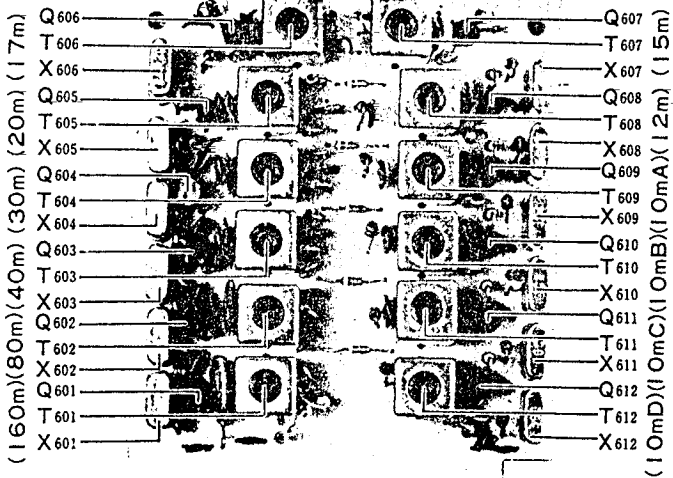


PREMIX LOCAL (XTAL) UNIT (PB-2153)

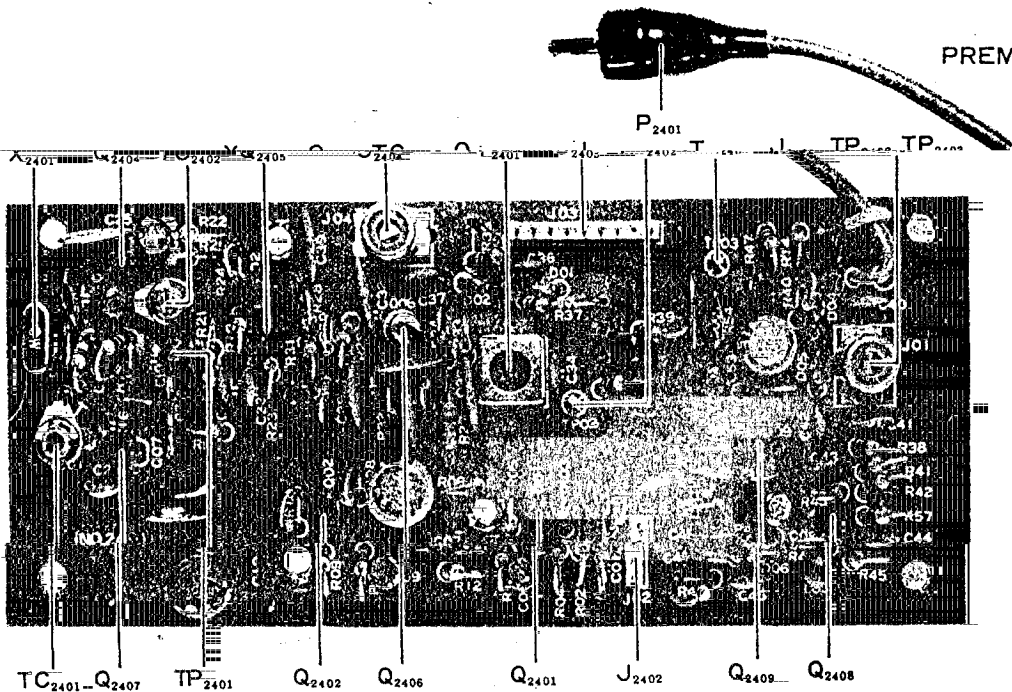

AM UNIT (PB-2040)

TRANSMIT RF/IF TRANSFORMER ALIGNMENT

- (1) Connect a dummy load to the antenna jack, and connect an audio signal generator to the microphone input. Tune up the transmitter at 14.2 MHz, and adjust the audio generator output for approximately 50 watts output into the dummy load, single-tone, SSB mode.
- (2) Peak T₄₀₁ - T₄₀₃ and T₄₀₅ (IF UNIT) for maximum power output. Switch the RF processor on, and adjust the COMP LEVEL control for approximately 50 watts output. Peak T₄₀₄ for maximum power output.

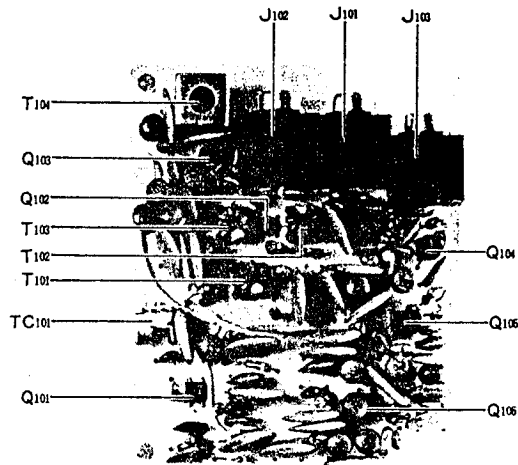


RF UNIT (PB-2154)

RECEIVER RF/IF/NB TRANSFORMER ALIGNMENT

- (1) Tune in the marker generator signal at 14.2 MHz, with a dummy load connected to the antenna jack. Peak the preselector for maximum S-meter indication.
- (2) Peak T₁₀₄ (RF UNIT) for maximum S-meter indication.
- (3) Peak T₄₀₆ - T₄₁₁ and T₄₁₃ - T₄₁₅ for maximum S-meter indication.
- (4) Connect the RF probe of a VTVM to the collector of Q₂₀₂ (NB-FIX UNIT). Reduce the RF GAIN control somewhat, and tune T₂₀₁ and T₂₀₂ for a dip in the VTVM indication. If no dip is observed, reduce the RF GAIN control further.


CLARIFIER ALIGNMENT

1. Tune in the marker generator signal on any band, and peak the preselector on the marker signal.
2. With the CLARIFIER control OFF, make sure that the CLARIFIER knob is exactly at the 12 o'clock position. Note the tone of the marker signal.
3. Switch the RX CLARIFIER to ON, and observe the tone of the marker signal. If it is different from when the clarifier was turned off, adjust VR₁₈₀₁ for an identical tone with the CLARIFIER knob exactly on the zero mark.

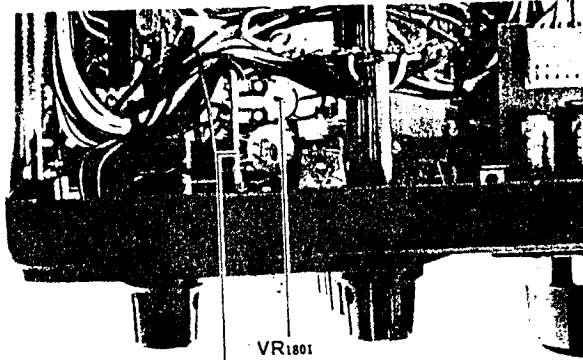

CLARIFIER
CONTROL UNIT
(PB-1973)

For Service Manuals Contact
MAURITRON TECHNICAL SERVICES
8 Cherry Tree Rd, Chinnor
Oxon OX9 4QY
Tel: 01844-351694 Fax: 01844-352554
Email: enquiries@mauritron.co.uk

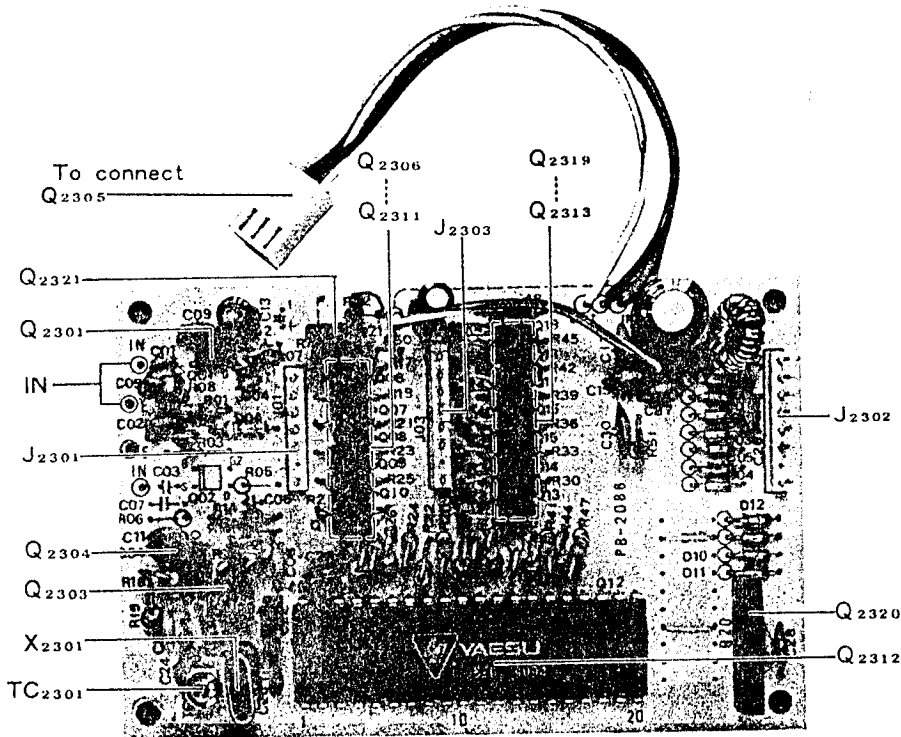

COUNTER UNIT (PB-2086A)

MAIN CHASSIS			C5	K30279062	Dipped mica 500 WV 3000 pF (DM19-302K5)
Symbol No.	Parts No.	Description			
		IC, TRANSISTOR	C59, 66	K31306800	Moulded mica 1 KWV 80 pF
Q2	G3104960Y	TR 2SA496(Y)	C17	K02279001	Ceramic 500 WV 1 pF
Q1	G3206160R	" 2SB616R(S)	C10	K02279002	" " 5 pF
Q4	G34023500	" 2SD235(O)	C18	K02279003	" " 47 pF
Q3	G1090070	IC μ PC14308	C11	K00279001	" " 200 pF
Q5	G1090080	" μ PC78L08	C20	K00279002	" " 470 pF
			C16	K0030003	" 1 KV 3 pF
			C15	K02309002	" " 5 pF
			C14	K02309003	" " 100 pF
		DIODE	C14	K00329002	" 1.5 KWV 460 pF
D1	G2090029	Ge 1N60	C3	K00359001	" 3 KV 100 pF
D2-5	G2015550	Si 1S1555	C9	K12359001	" " 1000 pF
D6	G2090001	" 10D1	C1	K13170102	" " 50WV 0.001 μ F
			C73-75	K13170103	" " 50 WV 0.01 μ F
			C29, 34, 35, 41, 64		
		RESISTOR	C12, 22-24, 39, 40, 56, 58, 60, 68,	K13170473	" " 0.047 μ F
R22, 24	J01245220	Carbon film 1/4W TJ 22 Ω			
R23	J00245330	" " " VJ 33 Ω			

R14	J01245560	" " " " 100 Ω	C27, 28, 36	K12279004	" " 500 WV 0.0047 μ F
R7, 11	J01245101	" " " " 820 Ω	C30,32,33,54, 55, 61	K12279002	" " 0.01 μ F
R18	J01245821	" " " " 1 k Ω			
R4, 5	J01245102	" " " " 1.5 k Ω	C2, 25, 26	K12329002	" 1.4 KV 0.0047 μ F
R6	J01245152	" " " " 1.8 k Ω	C31, 37	K12329001	" " 0.01 μ F
R19	J01245182	" " " " 2.2 k Ω	C42-51	K21270002	Feed thru 500 WV 0.001 μ F (ECK-L2H102PE)
R17	J01245222	" " " " 470 k Ω			
R20	J01245474	" " " " 10 Ω	C63	K40120476	Electrolytic 16 WV 47 μ F
R2	J10276100	Carbon composition 1/2W GK 1W " 56 Ω	C72	K40120107	" 50WV 100 μ F
R9, 10 (with L5, L6)	-	" " " " 100 Ω	C65	K40120337	" " 330 μ F
R3	J10276101	" " " " 2.2 k Ω	C70	K40120106	" " 10 μ F
R1	J10276222	" " " " 2.2 k Ω	C67	K40100336	" 10 WV 33 μ F
R25	J30356150	Cement 3W 15 Ω	C71	K50177104	Mylar 50 WV 0.1 μ F
		POTENTIOMETER			VARIABLE CAPACITOR
VR1	J60800035	VM11AB06A5M1112 10 k Ω B	VC1	K90000026	YB-250 250 pF
VR2	J62800032	DM10A039A 500 k Ω B/20 k Ω B	VC2	K90000016	C134E125
VR3	J62800033	DM10A039A 5 k Ω A/5 k Ω B			
VR4	J60800043	VM10A592A 5 k Ω A			TRIMMER CAPACITOR
VR5, 6	J60800036	VM10A592A 5 k Ω B	TC1	K91000007	TSN120C 10P x 2
VR7	J62800034	DM10A39A 5 k Ω B/5 k Ω A			
VR8	J60800037	VM10A654A 1 k Ω B			
VR9, 10	J60800038	VM10A654A 5 k Ω B			
VR11	J60800039	VM10AB08A 5 k Ω B			INDUCTOR
			L1	L0020534C	
			L2	L0020611	
			L3	L1020065	
			L4	L1020064	
		CAPACITOR	L5, L6 (R9, R10)	L1020308A	
C13, 19, 21	K30276271	Dipped mica 500 WV 5 pF " " " 270 pF (LCQ1727271K5)	L7	L1190001	EL0710-251K 250 μ H
C8	K30276331	" " 500 WV 330 pF (DM-15-331K5)	L8	L1190017	FL-5H-102J 1 mH
C7	K30276621	" " 500 WV 620 pF (DM19D621K5)	L9	L0020705	
C6	K30279052	" " 500 WV 1100 pF (DM19-112K5)			

		TRANSFORMER			
T1	L0020544				
T2, T3	L0020074				
		For Service Manuals Contact MAURITRON TECHNICAL SERVICES 8 Cherry Tree Rd. Chinnor Oxon OX9 4QY Tel: 01844-351694 Fax: 01844-352554 Email: enquiries@mauritron.co.uk			
					MULTI JACK
			MJ1	P4090001	121S-10B-105A
			MJ2	P4090007	220D-20B-205A
			MJ3	P4090002	121S-14B-105A
		METER			
M1	M0090002	Y-45-02			
					PLUG
			P1	P1090079	5047-12A (with wire T9201410B)
		SPEAKER	P2	P1090080	5047-13A (" " T9201300D)
SP1	M4090005	SA-92Y 4 Ω 3 W	P3	P1090082	5047-15A (" " T9201310D)
			P4	P1090086	5047-19A
			P5	P1090082	5047-15A (with wire T9201330C)
			P6	P1090075	5047-08A
		POWER TRANSFORMER	P7	P1090072	5047-05A (with wire T9201350A)
PT1	L3030028	52-74	P8	P1090082	5047-08A
			P9	P1090079	5047-12A (" " T9201310C)
			P10	P1090083	5047-16A
			P18	P1090070	5047-03A (with wire T9201420A)
		RELAY	P11, 14, 22	P0090045	SQ4052

***** LED B BOARD *****					CAPACITOR		
PB-1390	F0001390	P.C. Board	C138	K02179003	Ceramic	50WV CH	2 pF
D9	G2090060	GD4-203-SR	C106	K02172040	"	"	4 pF
			C125, 126	K00175680	"	SL	68 pF
			C103	K00175101	"	"	100 pF
			C102, 104, 116, 119- 121, 130, 131, 135, 140	K13170103	"	"	0.01 μF
			C101, 105,	K13170473	"	"	0.047 μF

Symbol No.	Parts No.	Description						
PB-2154	F0002154	Printed Circuit Board						
	C0021540	P.C.B. with components						
		IC, FET & TRANSISTOR						
Q102	G2090135	IC (Ring Module) ND487C2-3R					TRIMMER CAPACITOR	
Q106	G4800400M	FET 3SK40M	TC101	K91000019			ECV-1ZW 10 x 40	
Q101	G4800510C	" 3SK51-03						
Q103	G3090019	" J310					INDUCTOR	
Q104, 105	G3324070	TR 2SC2407	L107	L0020491				
				L108, 112	L1190033			FL5H-820K
				L102, 103, 105, 106, 113, 114	L1190016			FL5H-101K
		DIODE		L104, 109, 111	L1190020			FL5H-151K
D110	G2010070	Ge 1S1007	L101, 110, 115	L1190038			FL5H-271K	
D103, 104	G2015550	Si 1S1555						
D101, 102, 105-109	G2090027	" 1SS53						
								TRANSFORMER
				T101-103	L0020788A			
				T104	L0020221			
		RESISTOR						
R122, 131,	J00245479	Carbon film 1/4W VJ 4.7 Ω					JACK	
R109, 110, 115, 116, 124, 125		" " " " 10 Ω	J101-103	P1090018			SQ-3081	
				NB-FIX UNIT				
R135	J00245560	" " " " 56 Ω	Symbol No.	Parts No.	Description			
R106, 107, 113, 114, 139, 140	J00245101	" " " " 100 Ω			NB-FIX unit with com			
R108, 117, 126	J00245121	" " " " 120 Ω	PB-1961B	F0001961B	P.C. Board			
R121, 130	J00245151	" " " " 150 Ω			TRANSISTOR			
R123, 132	J00245221	" " " " 220 Ω	Q201-204	G3303720Y	2SC372Y			
R136	J00245331	" " " " 330 Ω	Q205, 206	G3315830	2SC1583			
R119, 128	J00245561	" " " " 560 Ω			DIODE			
R105, 111, 112, 120, 129	J00245102	" " " " 1 kΩ	D201-204	G2090029	Ge		1N60	
R118, 127	J00245152	" " " " 1.5 kΩ	D205-209	G2015550	Si		1S1555	
R141	J00245222	" " " " 2.2 kΩ			RESISTOR			
R104, 134	J00245562	" " " " 3.6 kΩ	R208, 216, 224, 230, 238, 239,	J00245101	Carbon film 1/4W V			
R138	J00245103	" " " " 10 kΩ						
R137	J00245183	" " " " 18 kΩ						
R103, 133	J00245393	" " " " 39 kΩ						
R101	J00245225	" " " " 2.2 MΩ						
R222, 236	J00245471	" " " " 470 Ω						
R231-233, 235	J00245561	" " " " 560 Ω						
R206, 215, 221, 234, 237	J00245102	" " " " 1 kΩ						
R207	J00245222	" " " " 2.2 kΩ						

10 pF
0.32 μH
82 μH
100 μH
150 μH
270 μH
100 Ω
220 Ω
470 Ω
560 Ω
1 kΩ
2.2 kΩ

R210, 240	J00245472	Carbon film	1/4W VJ	4.7 kΩ					RESISTOR
R205,209,218	J00245562	" "	" "	5.6 kΩ	R323	J00245100	Carbon film	1/4W VJ	10 Ω
R202,203,212, 214,225,226	J00245103	" "	" "	10 kΩ	R331	J00245680	" "	" "	68 Ω
R201,220,223	J00245153	" "	" "	15 kΩ	R301, 303, 305, 307, 309, 311, 313, 315, 317, 332, 333	J00245101	" "	" "	100 Ω
R211,213,219	J00245223	" "	" "	22 kΩ					
R217	J00245683	" "	" "	68 kΩ					
		CAPACITOR							
C201,216-218	K30176331	Dipped mica	50WV	330 pF	R322, 324, 327, 328	J00245221	" "	" "	220 Ω
C234, 236	K30176471	" "	" "	470 pF	R319, 334	J00245152	" "	" "	1.5 kΩ
C235	K30176821	" "	" "	820 pF	R329, 330	J00245222	" "	" "	2.2 kΩ
C208, 209	K02175150	Ceramic	50WV NPO	15 pF	R302, 304, 308, 310, 312, 314, 316, 318, 321, 325, 326	J00245103	" "	" "	10 kΩ
C206	K00179005	" "	" SL	20 pF					
C204	K00175101	" "	" "	100 pF					
C202,203,205, 211,212,221, 225-227, 229-233	K13170103	" "	" "	0.01 μF					
C207,210,213, 215,219,220, 223,224,228, 237	K13170473	" "	" "	0.047 μF	R306	J00245153	" "	" "	15 kΩ
					R320	J00245333	" "	" "	33 kΩ
							POTENTIOMETER		
					VR301	J50710502	V10K-8-1-2		5 kΩB
							CAPACITOR		
C214	K40170105	Electrolytic	50WV	1 μF	C335	K30176271	Dipped mica	50WV	270 pF
C238	K40140475	" "	10WV	4.7 μF	C331	K30176331	" "	" "	330 pF
		TRIMMER CAPACITOR			C311, 315, 319	K30176561	" "	" "	560 pF
TC201, 202	K91000016	ECV-1ZW	50 x 32	50 pF	C323, 327	K30176680	" "	" "	680 pF
					C301, 305,	K13170103	Ceramic	" "	0.01 μF

L207, 208	L1190007	FL-4H 1R8K	1.8 μH	309, 313, 317, 321, 325, 329, 333, 337-339, 341, 343, 345-351					
L204-206	L1190016	FL-5H 101K	100 μH						
L201-203	L1190017	FL-5H 102K	1 mH						
		TRANSFORMER							
T201, 202	L0020140	R12-4170							
					C302, 304, 306, 308, 312, 314, 316, 318, 320, 322, 324, 326, 328, 330, 332, 334, 336, 340, 342, 344	K13170103	Ceramic	50WV 0.047 μF	
							CRYSTAL SOCKET		
XS201	P3090025	S-14	2P						
							MINI CONNECTOR		
J201	P0090037	5048-08A							
J202	P0090038	5048-12A							
					C303, 307	K50177102	Mylar	" "	0.001 μF
							INDUCTOR		
					L302	L1190007	FL4H-1R8M		1.8 μH
					L303	L1190023	FL5H-220K		22 μH
					L301, 304-306	L1190017	FL5H-102K		1 mH
							TRANSFORMER		
					T301, 302	L0020500			
					T303, 304	L0020501			
					T305, 306	L0020502			
					T307, 308	L0020835			
							DIODE		
D301-318	G2090027	Si	1SS53						

T309, 310	L0020504		XF403	H1100890	XF8.9HP
T311, 312	L0020836		XF404	H1100470	8.9M20A
T313, 314	L0020837		XF405	H1100900	XF10GS (XF-10HW)
T315, 316	L0020838				THERMISTOR
T317, 318	L0020839		TH401	G9090003	D-33A
T319	L0020210				RESISTOR
			R0517, 0518, 0520	J00245220	Carbon film 1/4W VJ 22 Ω
		JACK			
J301	P1090018	SQ3081	R410, 411	J01245101	" " " TJ 100 Ω
P301	P0090045	SQ4052	R402,408,422, 423,437,439, 444,446,463, 464,469,475, 482,483,497	J00245101	" " " VJ 100 Ω
			R419,425,447, 451,486, 0507,0508	J00245221	" " " " 220 Ω
IF UNIT					
Symbol No.	Parts No.	Description			
	C0019630	IF unit with components	R0502	J00245331	" " " " 330 Ω
PB-1963C	F0001963C	P.C. Board		J00245391	390 Ω
			R443	J00245471	" " " " 470 Ω
			R474,480,0522	J00245561	" " " " 560 Ω
			R467, 468	J00245681	" " " " 680 Ω
				J00245821	" " " " 820 Ω
		IC, FET, TRANSISTOR		J00245102	" " " " 1 kΩ
Q403	G1090063	IC TA7060P	R406,416,428, 437,440,442,		
Q406	G3800190B	FET 2SK19BL	449,453,457,		
Q402,413,414, 419, 425	G3800190G	" 2SK19GR	459,462,488, 494,0504,		
Q401,405,412, 415, 416	G4800510C	" 3SK51-03	0506,0515		

For Service Manuals Contact
MAURITRON TECHNICAL SERVICES
8 Cherry Tree Rd. Chinnor
Oxon OX9 4QY
Tel: 01844-351694 Fax: 01844-352554
Email: enquiries@mauritron.co.uk

Q408	G3090019	3310	R495	J00245152	" " " " 1.5 kΩ
Q407, 420	G3105641	TR 2SA564A	R0516	J01245152	" " " " 1.5 kΩ
Q404, 409, 410, 417, 418, 422-424	G3303720Y	2SC372Y	R454,455,458, 0510	J00245222	" " " " VJ 2.2 kΩ
Q421	G3305350A	" 2SC535A	R460	J00245272	" " " " 2.7 kΩ
Q411	G3090005	" MPSA13	R401,409,412, 413,431,456, 496,0511	J00245332	" " " " 3.3 kΩ
			R426,427,476	J00245472	" " " " 4.7 kΩ
		DIODE	R403,445,478, 489	J00245562	" " " " 5.6 kΩ
D416, 417	G2090029	Ge 1N60	R434, 450	J00245682	" " " " 6.8 kΩ
D405-408, 414, 421	G2010070	" (GB) 1S1007	R404,407,420, 421,424,436, 471,477,481, 484,485,491, 492, 0501, 0509, 0512	J00245103	" " " " 10 kΩ
D401-404, 409-413, 419, 424	G2015550	Si 1S1555			
D418	G2022090	Varactor 1S2209			
D422	G2090040	" FC63			
			R433	J01245103	" " " " TJ 10 kΩ
			R470	J00245123	" " " " VJ 12 kΩ
			R415,498,499	J00245153	" " " " 15 kΩ
		CRYSTAL	R414	J00245273	" " " " 27 kΩ
H0100431	HC-18/U 19.7475 MHz		R461,472 0500	J00245473	" " " " 47 kΩ
			R405,465,466	J00245104	" " " " 100 kΩ
			R493	J00245154	" " " " 150 kΩ
			R484,485,487	J00245184	" " " " 180 kΩ
			0503, 0505		
				J00245334	" " " " 330 kΩ
01	H1100860	XF8.9HS			
02 (Option)	H1100880	XF8.9HC			

MINI CONNECTOR				CAPACITOR		
J501	P0090043	5048-19A	C607	K30176271	Dipped mica 50WV	270 pF
J502	P0090040	5048-15A	C603	K30176331	" " "	330 pF
J503	P0090037	5048-08A	C634, 638, 642, 646	K02175470	Ceramic " CH	47 pF
J504	P0090042	5048-05A				
J505	P0090041	5048-03A	C626, 630	K02175580	" " "	68 pF

R0042800	HEAT SINK	C619	K02175101	100 pF
		C615	K02175151	150 pF
		C611	K02179023	180 pF
		C601, 602	K13170103	0.01 μF
PREMIX LOCAL UNIT				
Symbol No.	Parts No.	Description		
	C0021530	PREMIX LOCAL unit with components		
PB-2153	F0002153	P.C. Board		
		TRANSISTOR		
Q601-612	G3303800Y	2SC380TMY		
		DIODE		
D601-612	G2015550	Si	1S1555	
			CRYSTAL	
		X601	H0100411	HC-18/U 15.9875 MHz
		X602	H0101480	" 17.9875 MHz
				CRYSTAL
		X601	H0100411	HC-18/U 15.9875 MHz
		X602	H0101480	" 17.9875 MHz

For Service Manuals Contact
MAURITRON TECHNICAL SERVICES
 8 Cherry Tree Rd, Chinnor
 Oxon OX9 4QY
 Tel:- 01844-351694 Fax:- 01844-352554
 Email:- enquires@mauritron.co.uk

R605-610	J00245101	Carbon film 1/4W 5% 100Ω	X603	H0101400	" 21.4875 MHz
613, 620,			X604	H0102294A	24.4875 MHz
625, 628,			X605	H0101500	" 28.4875 MHz
630, 631,			X606	H0102295A	" 32.4875 MHz
636, 637,			X607	H0101510	" 35.4875 MHz
641, 642,			X608	H0102296A	" 38.9875 MHz
646, 647,			X609	H0101520	" 42.4875 MHz
651, 652					

0101530	43.9875 MHz
0101540	43.4875 MHz
0101550	43.9875 MHz

R632	J00245151	" " " " 150 Ω	X611	HO
R605, 608,	J00245561	" " " " 560 Ω	X612	HO
613, 618,				
623				
R604, 609,	J00245102	" " " " 1 kΩ	T601-612	L0
614, 619,				
624, 629,				
633, 638,			L601	L1
643, 648,				
653, 658				
R661-663	J00245222	" " " " 2.2 kΩ	Symbol No.	Pa
R602, 607,	J00245333	" " " " 33 kΩ		CC
612, 617,			PB-1966C	FC
622, 627,				
634, 639,			D701	G2
644, 649,				
654, 659				
R601, 606,	J00245563	" " " " 56 kΩ	RL701	MI
611, 616,				
621, 626,				
635, 640,				
645, 650,				
655, 660			S701	MA

TRANSFORMER	
020017	
INDUCTOR	
190016	FLSH-101K 100 μH

SELECT SWITCH UNIT	
Parts No.	Description
0019660	SELECT SW unit with components
0001966C	P.C. Board
DIODE	
090001	Si 10D1
RELAY	
190002	FBR211A D012M
SWITCH	
090006	6B0003CC2060

C906	K41140338	Electrolytic 25WV	3300 μ F			CAPACITOR	
				C1017	K13170473	Ceramic	50WV 0.047 μ F
				C1016	K12279003	"	500WV 0.0022 μ F
				C1005, 1006, 1013-1015, 1018	K12279004	"	" 0.0047 μ F
		RELAY					
RL901	M1190003	FRL-264 D012/04CS-01		C1010	K12279002	"	" 0.01 μ F
				C1009	K40240106	Electrolytic	250WV 10 μ F
	Q5000011	Wrapping terminal C		C1011	K40240336	"	" 33 μ F
	Q5000004	Test point D		C1012	K40240476	"	" 47 μ F
				C1001-1004	K40270106	"	450WV 10 μ F
				C1007, 1008	K40260226	"	350WV 22 μ F
RECT. B UNIT							
Symbol No.	Parts No.	Description					
	C0019680	RECT. B unit with components			Q5000011	Wrapping terminal C	
PB-1968B	F0001968B	P.C. Board					
		TRANSISTOR					
Q1003	G3106390	2SA639		CAPACITOR UNIT			
Q1001	G3107330	2SA733		Symbol No.	Parts No.	Description	
Q1002	G3303720Y	2SC372Y			C0019690	CAPACITOR unit with components.	
				PB-1969A	F0001969A	P.C. Board	
		DIODE				RESISTOR	
D1004, 1005, 1008-1011	G2015550	Si	1S1555	R1101, 1102	J10276474	Carbon composition 1/2W GK 470k Ω	
D1002, 1003, 1012	G2090002	"	10D10				
D1006, 1007	G2090001	"	10D1				
D1001	G2090081	"	SM1-12			CAPACITOR	
				C1101, 1102	K43270003	Electrolytic	500WV 200 μ F (CE-62LW)
		RESISTOR					
R1021	J00245681	Carbon film 1/4W VJ 680 Ω					
R1011, 1016, 1020	J00245472	"	" " " " 4.7 k Ω				
R1013, 1015	J00245103	"	" " " " 10 k Ω	TRIMMER A UNIT			
R1014	J00245123	"	" " " " 12 k Ω	Symbol No.	Parts No.	Description	
R1017-1019	J00245223	"	" " " " 22 k Ω		C0019700	TRIMMER A unit with components	
R1012	J00245563	"	" " " " 56 k Ω	PB-1970	F0001970	P.C. Board	
R1010	J20306562	Metallic film 1W 5.6 k Ω					
R1022	J20306390	"	" " " " 39 Ω				
R1005	J20336391	"	" " 2W 390 Ω				
R1006	J20336471	"	" " " " 470 Ω			CAPACITOR	
R1008	J20336222	"	" " " " 2.2 k Ω	C1203	K30176271	Dipped mica	50WV 270 pF
R1007	J20336332	"	" " " " 3.3 k Ω	C1208	K30176391	"	" " 390 pF
R1009	J20336473	"	" " " " 47 k Ω	C1202	K30176651	"	" " " 650 pF
R1023	J10276474	Carbon composition 1/2W GK 470 k Ω		C1207	K30209001	"	" " " 1000 pF
				C1201	K30209003	"	" " " 1500 pF
				C1206	K02173100	Ceramic	50WV CH 10 pF
				C1205	K02179012	"	" " " 30 pF
		POTENTIOMETER		C1204	K02175820	"	" " " 82 pF
VR1001	J50708103	V18K3-2	10 k Ω B				

		RESISTOR		CAPACITOR	
R1605	J10276470	Carbon composition	1/2W GK 47 Ω	C1703	K12279001 Ceramic disc 500WV 0.001 μ F
R1602, 1604	J10276560	" " " "	56 Ω	C1704, 1710	K12279002 " " " 0.01 μ F
R1603	J10276101	" " " "	100 Ω	C1705-1709, 1711, 1712	K13170473 " " 50WV 0.047 μ F
R1601	J10276473	" " " "	47 k Ω	C1701	K31306102 Moulded mica 1kWV 1000 pF
				C1702	K30273050 Dipped mica 500WV 5 pF
		CAPACITOR			

C1601, 1602	K12279002	Ceramic disc	500WV 0.01 μ F		
		C1603, 1604	K13170473	50WV 0.047 μ F	
		1606			L1701 L1190020 Micro inductor
		C1605	K30279051	Dipped mica 500WV 1000 pF	L1704 L1190039 " "
					L1702, 1703 L1020307 RF choke #
					(R1701, 1702)

150 μ H
560 μ H
220307

INDUCTOR	
L1701	L1190020 Micro inductor
L1704	L1190039 " "
L1702, 1703	L1020307 RF choke #
	(R1701, 1702)

L1190020
L1020029
#220029
Q5000011
Wrapping terminal C

INDUCTOR	
L1190020	Micro inductor #15H 150 μ H
L1020029	#220029
Q5000011	Wrapping terminal C

L1601
L1602

CLARIFIER CONTROL UNIT

Symbol No.	Parts No.	Description
	C0019730	CLAR. CONT. unit with components
PB-1973B	F0001973B	P.C. Board

FINAL BOARD

Symbol No.	Parts No.	Description
	C0017151	Final board
PB-1715B	F0001715B	P.C. Board
		VACUUM
V1701, 1702	G6090001	
		VACUUM
VS1701, 1702	P3090024	
		DIODE
D1701	G2090002	Si
		RESISTOR
R1701, 1702 (L1702, 1703)	J10276560	Carbon
R1703, 1704, 1705	J10276101	"
R1706	J31333010	Meter socket

DIODE	
D1801	G2090001 Si 10D1
D1802	G2090060 LED GD4-203SRD
RESISTOR	
R1803	J00245102 Carbon film 1/4W VJ 1 k Ω
R1804, 1805	J00245152 " " " " 1.5 k Ω
R1802	J00245332 " " " " 3.3 k Ω
R1801	J00245472 " " " " 4.7 k Ω
POTENTIOMETER	
VR1801	J50710501 V10K8-1-2 500 Ω B
CAPACITOR	
C1801-1803	K13170473 Ceramic 50WV 0.047 μ F
RELAY	
RL1801	M1190002 FBR211A D012M

SWITCH			PLUG		
SW1801	N4090011	2B0005FC206	P2201	P1090073	5047-06 (with wire T9202430)
			P2202	P1090075	5047-08 (" " T9202440A)
COUNTER UNIT (3420)					
LED BOARD			Symbol No.	Parts No.	Description
Symbol No.	Parts No.	Description	PB-2086A	F0002086A	Printed Circuit Board
	C0019740	LED board with components		C0020862	P.C.B. with components
PB-1974A	F0001974A	P.C. Board			
IC, FET & TRANSISTOR					
			Q2312	G1090249	IC MSM9520RS
			Q2320	G1090079	" μ PA54H
D1901-1906	G2090060	GD4-203SRD	Q2305	G1090299	" μ PC7805H
			Q2301	G4800730	FET 3SK73
			Q2321	G3104960Y	TR 2SA496Y
			Q2306, 3311	G31095201	" 2SA952L

RESISTOR			2313-2319		
R1901, 1902	J01245102	Carbon film. 1/4W TJ 1 k Ω	Q2303	G3316740U	" 2SC1674L
			Q2304	G3318150G	" 2SC1815GR
DIODE					
			D2301-2313	G2015550	Si 1S1555
LEVER SWITCH BOARD					
Symbol No.	Parts No.	Description			
	C0019750	LEVER SW board with components			CRYSTAL
					HC-18/U 6.5536 MHz

RESISTOR			2315	J00245100	Carbon film 1/4W VJ 10 Ω
J01245560	Carbon film 1/4W TJ	56 Ω	R2331, 2334	J00245330	" " " " 33 Ω
J01245101	" " " "	100 Ω	2337, 2340,		
J01245121	" " " "	120 Ω	2343, 2346,		
J01245391	" " " "	390 Ω	2349		
J00245562	" " " VJ	5.6 k Ω	R2350	J00245560	" " " " 56 Ω
J01245683	" " " TJ	68 k Ω	R2308, 2318,	J00245101	" " " " 100 Ω
			2320, 2322,		
			2324, 2326,		
			2328		
SWITCH			R2301	J01245221	" " " TJ 220 Ω
2004	N3090002	SLE62301	R2307, 2311,	J00245221	" " " VJ 220 Ω
	N3090008	SLE64251	2312		
			R2352	J00245331	" " " " 330 Ω
			R2351	J00245471	" " " " 470 Ω
			R2317, 2319,	J01245102	" " " TJ 1 k Ω
			2321, 2323,		
			2325, 2327,		
			2330, 2333,		
			2336, 2339,		
			2342, 2345,		
			2348		
			R2329, 2332,	J00245152	" " " VJ 1.5 k Ω
			2335, 2338,		
			2341, 2344,		
			2347		
DISPLAY LED			R2302, 2315	J00245562	" " " " 5.6 k Ω
2206	G2090069	HP5082-7623			

R2006
R2005
R2001
R2002
R2008
R2004
S2001-
S2005
Symbo
PB-2098
D2201-

R2313	J00245103	Carbon film	1/4W	VJ	10 kΩ			
R2304, 2309	J01245473	"	"	TJ	47 kΩ			
R2314	J01245104	"	"	"	100 kΩ			
R2316	J00245104	"	"	VJ	100 kΩ			
CAPACITOR								
C2324	K02179008	Ceramic	50WV	CH	20 pF			
C2325	K02175470	"	"	"	47 pF			
C2320	K02175101	Electrolytic	16WV	"	100 pF			
C2301, 2304	K13170102	Ceramic	50WV	CH	0.001 μF			
C2302, 2305, 2308, 2309, 2311, 2312, 2314, 2315, 2317, 2319, 2321, 2323, 2326-2330	K13170103	"	"	"	0.01 μF			
C2323	K50177103	Mylar	"	"	0.01 μF			
C2322	K71137685	Tantalum	20WV	"	6.8 μF			
C2310, 2318	K40120106	Electrolytic	16WV	"	10 μF			
C2313	K40109011	"	10WV	"	33 μF			
C2316	K40129001	"	16WV	"	330 μF			
DC-DC CONVERTER (OPTION)								
						Symbol No.	Parts No.	Description
								TRANSISTOR
						Q3201, 3202	G3090002	T20A6 with insulator
								RESISTOR
TC2301	K91000030	ECV-1ZW	40 x 53		40 pF	R3202	J31306339	Wire wound 1W 3.3 Ω
						R3201	J20376221	Metallic film 5W 220 Ω
								INDUCTOR
L2301	L2030068							CAPACITOR
						C3202	K52247474	Metallized paper 250WV 0.047 μF
						C3201	K41140227	Electrolytic 25WV 220 μF
								CONNECTOR
J2301	P0090051	5048-06A						
J2302	P0090054	5048-07A						
J2303	P0090037	5048-08A						

P2301, 2302	P0090045	SQ4052	P3201	P0090066	COM	ALUM
P2303	P1090186	3021-03 (with wire T9201380A)				
				T9012720	DC POWER CORD	
				Q0000009	FUSE 20 A	
For Service Manuals Contact MAURITRON TECHNICAL SERVICES						
8 Cherry Tree Rd, Chinner Oxon OX9 4QY						
Tel: 01844-351694 Fax: 01844-352554						
Email: services@mauratron.co.uk						
ACCESSORIES						
			Symbol No.	Parts No.	Description	
					AC POWER CORD	
				T9012380A	3 wire, 2 prong plug	
				T9012481A	3 wire without plug	
				T9012582A	3 wire, 3 prong plug (UL)	
				T9012484	3 wire, 3 prong Australian plug	
				T9012683A	3 wire, 2 prong EU plug	
				P0090065	CONNECTOR PLUG QS-P6FL	
				P0090018	PIN PLUG STP58	
				P0090035	ACC PLUG PA602B04	
				Q0000005	FUSE (100V-117V) 5A	
				Q0000004	" (200V-234V) 3A	

