

## Hallicrafters, Inc.

**Model:** S-38C

**Chassis:**

**Year:** Pre 1955

**Power:**

**Circuit:**

**IF:**

**Tubes:**

**Bands:**

### Resources

[Riders Volume 23 - HALLICRAFTERS 23-26](#)

[Riders Volume 23 - HALLICRAFTERS 23-27](#)

[Riders Volume 23 - HALLICRAFTERS 23-28](#)

[Riders Volume 23 - HALLICRAFTERS 23-29](#)

[Riders Volume 23 - HALLICRAFTERS 23-30](#)

[Riders Volume 23 - HALLICRAFTERS 23-31](#)

[Riders Volume 23 - HALLICRAFTERS 23-32](#)

MODEL S-38C, Run 2

## GENERAL DESCRIPTION

World-wide radio reception is yours with the Hallicrafters Model S-38C. This 5 tube communication receiver tunes from 540 kilocycles



## OPERATING INSTRUCTIONS

**TUNING DIAL** - All dial readings are in megacycles. To convert the readings on the standard broadcast band (band 1) to kilocycles, simply remove the dot and add two zeros; thus, .7 on the dial corresponds to 700 kilocycles.

**AM-CW SWITCH** - Set this switch at AM to listen to voice and musical broadcasts. Set it at CW only if you wish to hear code signals.

**SPEAKER-PHONES SWITCH** - For operation of the built-in speaker, set the switch at SPEAKER. Tip jacks are provided on the back of the set for plugging in a pair of headphones. Use any 500 to 5000 ohm headphones. For headphone operation set the switch at PHONES.

**BAND SELECTOR CONTROL** - Set this control for the band you wish to tune.

**VOLUME CONTROL** - Turn this control clockwise to turn the set on. Allow about 30 seconds for the tubes to reach operating temperature and then advance the control to increase volume. To turn the set off, turn this control counter-clockwise until a click is heard.

**NOTE** - If the receiver does not operate after the 30 second warm up when connected to a DC source, the power plug should be reversed in the wall outlet to obtain proper polarity.

**RECEIVE - STANDBY SWITCH** - Set this switch at RECEIVE for radio reception. If you wish to silence the receiver without turning the set off, set the switch at STANDBY. To resume radio reception, simply return the switch to the RECEIVE position.

**TUNING KNOB** - Your receiver has been provided with two tuning knobs - The TUNING knob which operates the pointer on the left hand dial and a separate BAND SPREAD knob which operates the pointer on the right hand dial. The TUNING knob is for wide tuning and the BAND SPREAD knob for fine tuning. Use the TUNING knob to tune in the desired station. Tune for the clearest and strongest signal. If the signal is too strong, reduce it by means of the VOLUME control, not by using the TUNING knob. For code reception, adjust the TUNING knob for the desired pitch of the CW code signal when tuning in the station.

**IMPORTANT** - The dial readings will correspond to the exact station frequencies only if the BAND SPREAD dial pointer is set at 0.

**BAND SPREAD KNOB** - The BAND SPREAD knob permits you to accurately tune in stations on crowded bands by spreading them out so that they can be more easily separated. The BAND SPREAD knob can be used in two different ways. First, it may be left with the pointer at 5 while you partially tune in the desired station with the TUNING knob. Then, by "rocking" the BAND SPREAD knob back and forth (turn it a few degrees to the left and right through the desired station), you will be able to tune in the desired station with precision accuracy.

The second way to operate the BAND SPREAD knob is to use it to cover a group of stations. Set the BAND SPREAD knob so that the pointer reads 0 and then turn the TUNING knob to tune in the highest frequency station in the group. The other stations can be heard by slowly turning the BAND SPREAD knob from 0 to 100.

**BEST SHORTWAVE RECEPTION TABLE**

Band	Most Favorable Time	Most Favorable Distance
6-7 MC	Night - Winter	Day - 400 Miles - Night - Over 1500 Miles
9-10 MC	Day - Late Afternoon and Night - Winter	Over 500 Miles
11-12 MC	Evenings or Late Summer Afternoons	Day - Under 1500 Miles    Night - Over 1500 Miles
15-18 MC	Early Mornings and Summer Evenings	Over 1500 Miles


## SERVICE INSTRUCTIONS

### GENERAL SPECIFICATIONS

Tubes . . . . . 5 including 1 rectifier  
 Speaker . . . . . 5 inch PM  
 Voice Coil Impedance . . . . . 3.2 ohms  
 Headphone Output Impedance . . . 15 ohms  
 Antenna . . . . . Terminals for single wire or  
 doublet antenna. (See Page 2.)  
 Intermediate Frequency . . . . . 455 KC  
 Frequency Coverage . . . . . 540 KC - 32 MC  
 Power Supply . . . . . 105-125 volts DC or  
 60 cycles AC  
 Power Consumption . . . . . 30 watts

TUNING

BANDSPREAD

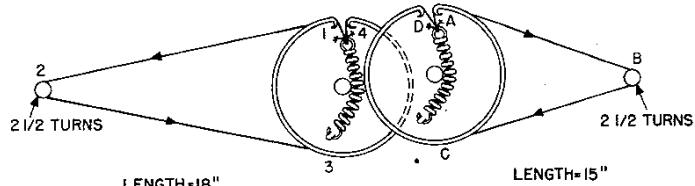


TUNING CAPACITOR FULLY CLOSED (BOTH SECTIONS)

FRONT VIEW

9281693

Fig. 2. Dial Cord Stringing Diagram

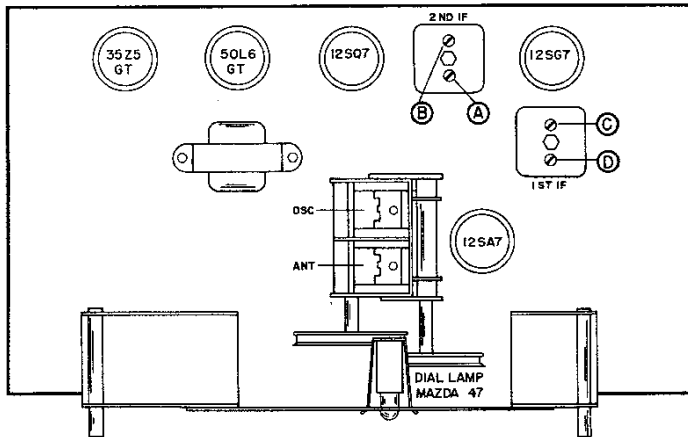


9281694-A

Fig. 3. Top View of Chassis Showing Location of Alignment Adjustments, Tubes and Dial Lamp

**DIAL CORD STRINGING** - Refer to Fig. 2 for the stringing diagram. Both sections of the tuning gang should be fully meshed. To restring the TUNING dial cord, tie one end of an 18 inch length of 30 lb. dial cord to the dial spring at 1 on the drive pulley. Follow the stringing sequence 1 through 4. At 4, stretch the spring and tie the cord securely to the spring. Cut off the excess cord and apply a drop of quick drying cement to the knot.

To restring the BAND SPREAD dial cord, cut a 15 inch length of dial cord and follow the procedure as explained above, starting at A and proceeding through D.

**TUBE AND DIAL LAMP REPLACEMENT** - Refer to Fig. 3 for the location of the tubes and dial lamp used in the receiver. To gain access to the tubes and lamp, remove the back cover from the cabinet. Before attempting to make any replacement, set

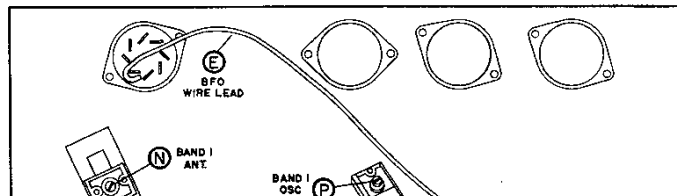

### ALIGNMENT INSTRUCTIONS

- Use an amplitude modulated generator covering 455 KC to 30 MC. Use a modulated output for every step except Step 2.
- Connect output meter across speaker voice coil.
- Use a non-metallic alignment tool.
- Set the AM/CW switch at AM, (except for BFO adjustment), SPEAKER/PHONES switch at SPEAKER, VOLUME control at maximum, RECEIVE/STANDBY switch at RECEIVE and the BAND SPREAD control at 0.
- See Figs. 3 and 4 for location of alignment adjustments.

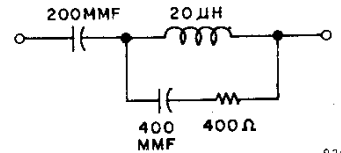


Fig. 5. RMA Dummy Antenna


92A1549


Step	Signal Generator Connections	Generator Frequency	Band Selector Setting	Receiver Dial Setting	Adjust
------	------------------------------	---------------------	-----------------------	-----------------------	--------

**IF ALIGNMENT**





PAGE 23-30 HALLICRAFTERS

MODEL S-38C, Run 2

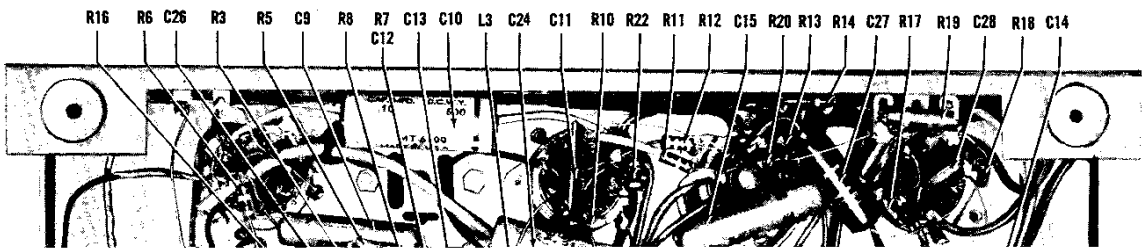

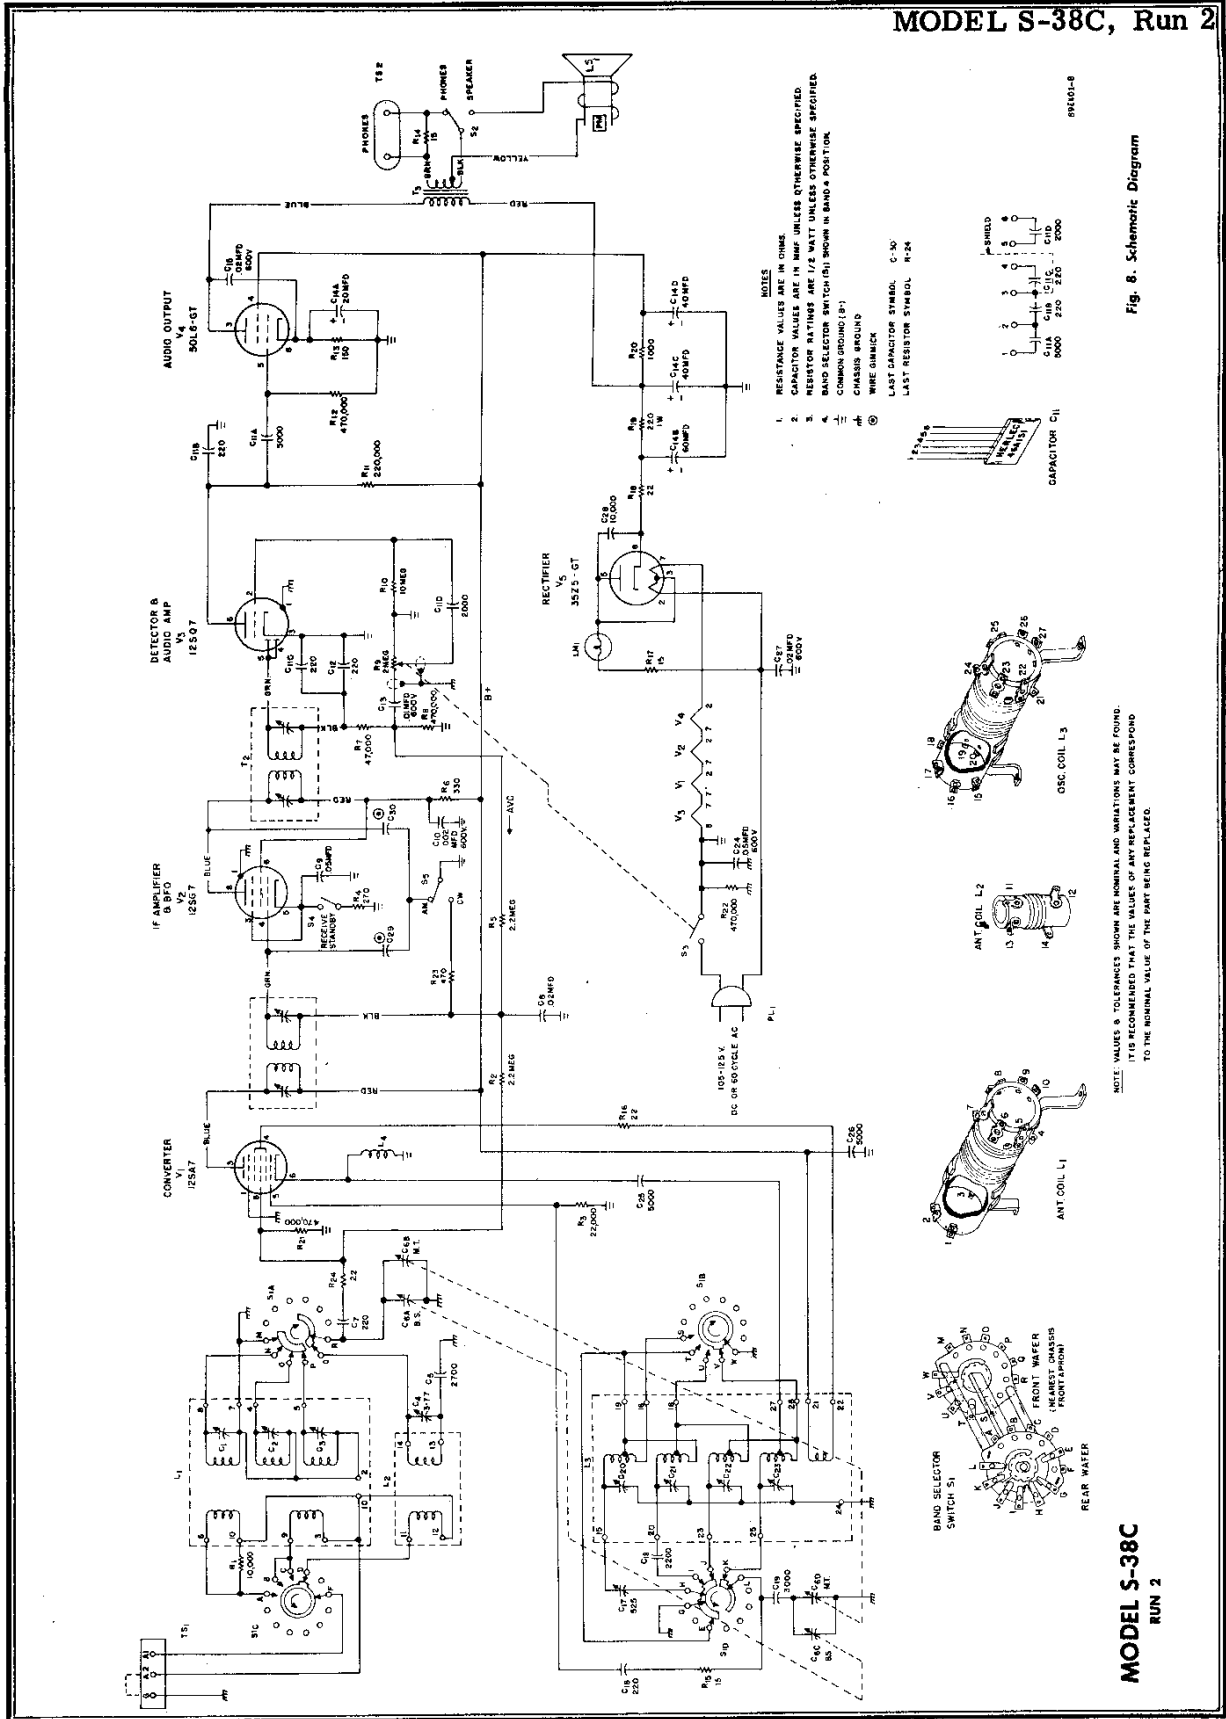

- NOTES**
1. RESISTANCE VALUES ARE IN OHMS.
  2. CAPACITOR VALUES ARE IN MMF UNLESS OTHERWISE SPECIFIED.
  3. RESISTOR RATINGS ARE 1/2 WATT UNLESS OTHERWISE SPECIFIED.
  4. BAND SELECTOR SWITCH (S1) SHOWN IN BAND 4 POSITION.
  5. COMMON GROUND (SP)
  6. CHASSIS GROUND
  7. WIRE GIMBECK
  8. LAST CAPACITOR SYMBOL, C-30
  9. LAST RESISTOR SYMBOL, R-24

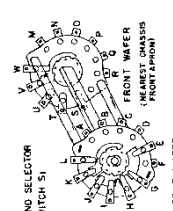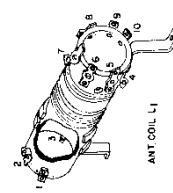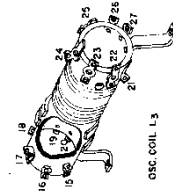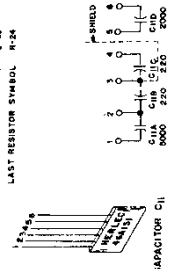

NOTE: VALUES & TOLERANCES SHOWN ARE NOMINAL AND VARIATIONS MAY BE FOUND. IT IS RECOMMENDED THAT THE VALUES OF ANY REPLACEMENT CORRESPOND TO THE NOMINAL VALUE OF THE PART BEING REPLACED.

MODEL S-38C  
 RUN 2

Fig. 8. Schematic Diagram

