

THE SKY TRAVELER - MODEL S-29

OPERATING INSTRUCTIONS:

The engineers of the HALLICRAFTERS, INC., have embodied in the SKY TRAVELER MODEL S-29 receiver every worthwhile advancement; both in the design

is wired to also open this circuit when in its "OFF" position. Since the flashlight cell is not included in the "CHARGE" circuit, noise limiting should be used only when necessary regardless of the low replacement cost of the cell.

Receiver, its versatility will be evident.

It is recommended that, upon receipt, the owner carefully inspect the carton and then his receiver for any damage which might have occurred in transit. Should any signs of damage be apparent, immediately file claim with the carrier, accurately stating the extent of the damage.

FREQUENCY RANGE:

The SKY TRAVELER tunes from 540 to 30,500 kilocycles in four bands. The frequencies covered by each band are as follows:

Band	Coverage
1	540 kc to 1500 kc
2	1.45 mc to 4.3 mc
3	4.12 mc to 11.9 mc
4	11.26 mc to 30.5 mc

The MAIN TUNING DIAL is accurately calibrated in megacycles when the BANDSPREAD dial is set at "0", the position of minimum bandspread condenser capacity.

When using the receiver for the first time, it is best to become familiar with its operation on the standard broadcast, or band #1, before tuning the short wave bands. You will then be more able to fully appreciate the capabilities of the SKY TRAVELER when using it later on the other bands.

TUBE LINE-UP

- 1 - 1T4 R. F. Amplifier
- 1 - 1R5 1st Detector - Oscillator
- 1 - 1P5GT 1st I. F. Amplifier
- 1 - 1P5GT 2nd I. F. Amplifier
- 1 - 1H5GT 2nd Detector - AVC - 1st Stage of Audio
- 1 - 3Q5GT 2nd Audio Output Stage
- 1 - 1G4GT Beat Frequency Oscillator
- 1 - 1G4GT Automatic Noise Limiter
- 1 - 50Y6GT Rectifier

CONTROLS AND THEIR FUNCTIONS:

The "AVC" switch is for optional use of automatic volume control. To eliminate fading it should be "ON" when receiving phone signals, "OFF" when copying code or CW signals.

The "MAIN TUNING" control is for adjusting the main dial of the receiver to the desired frequency.

The "A. F. GAIN" or audio volume control varies the output of both speaker and phones.

The "R. F. GAIN" control adjusts the sensitivity of the receiver by varying the screen voltage on the R. F. and I. F. amplifiers. Maximum sensitivity and AVC action will be obtained with this control rotated as far as it will go to the right.

The "BAND SWITCH" will allow selection of the frequency ranges through which the receiver tunes.

The "POWER SWITCH" has four positions, namely:-

"OFF" - In this position the receiver is completely inoperative, being completely disconnected from all batteries and from the 115 volt line, should the line cord be left plugged-in. CAUTION: - Be sure the Power Switch is "OFF" when the receiver is not in use (neon glow lamp indicates when receiver is turned ON.)

"BAT" - This abbreviation indicates the position in which the receiver requires no external power, operating solely from its self-contained batteries.

"A.C. - D.C." - In this position the S-29 may be operated on 115 volts A.C. or D.C. - the line cord contained in the back compartment being connected to either sources of power. This will be discussed in greater detail under OPERATION.

"CHGE" - This position is used when "Charging" the batteries. More detail will be found under "CHARGING" in the section devoted to MAINTENANCE.

The "BANDSPREAD TUNING" knob controls the BANDSPREAD dial and its associated condenser. By setting the MAIN TUNING dial to the HIGH FREQUENCY edges of the four amateur bands listed.

effectively minimize ignition and similar types of interference which would otherwise be objectionable to short wave reception. With "ANL ON" filament voltage is supplied to the 1G4GT noise limiter tube by the 1.5 volt flashlight cell - this being its sole function. The POWER SWITCH

(Megacycles)	DIAL DIVISIONS
(80 meter band) - 4.0 - 3.5	0 - 88
(40 " ") - 7.3 - 7.0	0 - 76
(20 " ") - 14.4 - 14.0	0 - 88
(10 " ") - 30.0 - 28.0	0 - 70

The "STAND-BY" switch removes current from the plates and filaments of all tubes with the exception of the noise limiter. This is possible because of almost instantaneous heating of the filaments when voltage is applied, and is an ad-


carrier. Once located, the B.F.O. is turned off to eliminate the whistle and allow reception of the modulated signal.

filament voltage is left on the cathode type 50Y6GT rectifier because of the time required for it to reach operating temperature.

that when a pair of high impedance earphones (crystal or magnetic) are "Plugged in", the speaker will be removed from the circuit.

The "BFO" switch allows optional use of the Beat Frequency Oscillator and is used when copying code signals. It is of additional help in locating weak phone signals by first locating their

The NEON LAMP located in the center of the tuning dial is used to indicate when the POWER is "ON". It will glow during STAND-BY periods as insurance against accidentally leaving the S-29 turned ON.

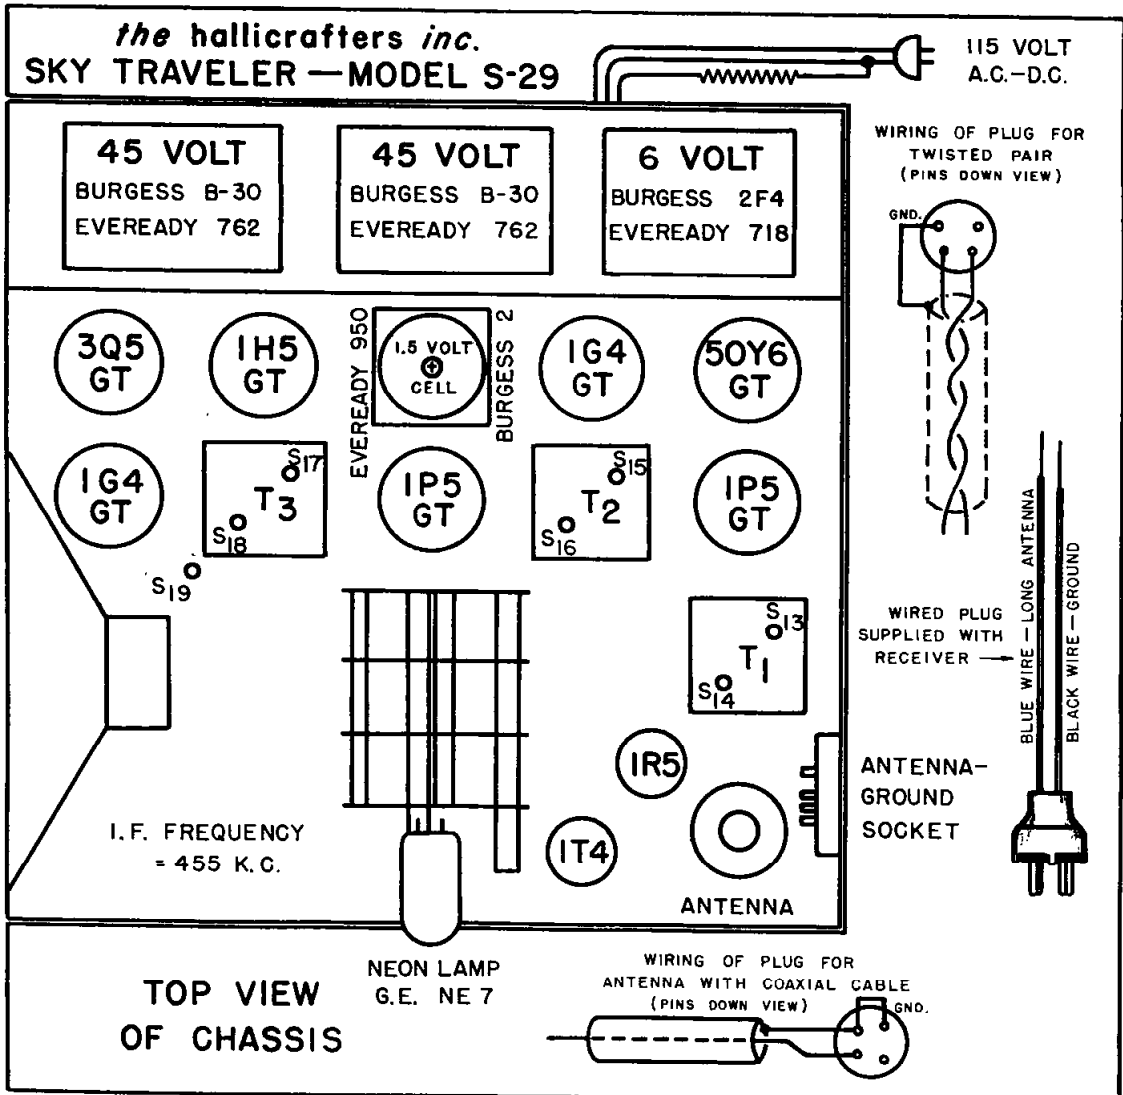

PARTS LIST

CONDENSERS

RESISTORS

No.	Capacity	Voltage	Type	No.	Ohms	Wattage
C1	Main Tuning Gang		air	R1	2 megs	1/3
2	Bandsread Gang		air	2	2 megs	1/3
3	25 mmfd		ceramicon	3	9000	1/3
4	0.1 mfd	400	paper	4	500,000	R.F. Gain
5	10 mmfd		ceramicon	5	5,000	1/3
6	5 mmfd		ceramicon	6	2 megs	1/3
7	.05 mfd	200	paper	7	100,000	1/3
8	.01 mfd	400	paper	8	1 meg	1/3
9	15 mmfd		ceramicon	9	2 megs	1/3
10	5 mmfd		ceramicon	10	40,000	1/3
11	5 mmfd		ceramicon	11	2 megs	1/3
12	.05 mfd	200	paper	12	1 meg	1/3
13	.05 mfd	200	paper	13	100,000	1/3
14	3 mmfd		twisted pair	14	500,000	A.F. Gain
15	2 mmfd		twisted pair	15	10 megs	1/3
16	50 mmfd		mica	16	100,000	1/3
17	.05 mfd	200	paper	17	500,000	1/3
18	.01 mfd	400	paper	18	500,000	1/3
19	.05 mfd	200	paper	19	400,000	1/3
20	.01 mfd	400	paper	20	50,000	1/3
21	50 mmfd		mica	21	50,000	1/3
22	.003 mfd	400	paper	22	300	1/3
23	0.1 mfd	200	paper	23	1100	1/3
24	0.01 mfd	400	paper	24	25	1
25	.005 mfd	400	paper	25	450	line cord
26	.01 mfd	400	paper			
27	60 mfd	150	electrolytic	27	1100	1/3
28	.02 mfd	200	paper	28	500	1/3
29	.01 mfd	400	paper	29	550	1/3
30	2 mmfd		twisted pair	30	600	1/2
31	500 mmfd		mica	31	9000	1/3
32	.05 mfd	200	paper	32	900	1/3
33	.05 mfd	400	paper	33	800	1
34	60 mfd	150	electrolytic	34	800	3
35	100 mfd	40	electrolytic	35	845	3
36	60 mfd	40	electrolytic	36	750	1/3
37	60 mfd	150	electrolytic	37	2000	2
38	4230 mmfd		mica			
39	250 mmfd		mica			
40	2030 mmfd		mica			
41	880 mmfd		mica			
42	380 mmfd		mica			
43	.01 mfd	400	paper			
44	.05 mfd	200	paper			

FOR A.C. operation of receiver in the range 105 to 112 volts, change filament resistor tap as follows:

Locate metal-clad resistor on top of metal chassis directly beneath right side of ganged tuning condenser. Unsolder flexible lead connected to terminal opposite 117 volt marking. Solder this lead to terminal opposite 110 volt marking on resistor.

Caution: The above change should be made only when the receiver will

455 KC - I.F. ALIGNMENT

Set "MAIN TUNING" control at 1500 kc.
 Have antenna plug removed from antenna socket.
 Tune generator to 455 kc.
 Connect low side (GND) of generator to chassis.
 Connect high side (HOT) of generator to lug on rear Stator section (R.F.) of main tuning condenser through a 0.1 mfd condenser.
 Proceed to adjust the screws S₁₅ to S₁₈ inclusive protruding from the tops of the I.F. transformers, T₁, T₂ and T₃, for maximum output.

BFD ADJUSTMENT

Without changing the frequency of the generator after completing I.F. alignment - turn BFO switch "ON" and remove modulation from the signal generator. Adjust screw S₁₉ to the desired tone (approximately 1000 cycles).

NOTE: - It is also possible to adjust the BFO without the aid of the signal generator by tuning a signal to exact resonance with the BFO switch "OFF" - with BFO "ON" adjust S₁₉ to desired tone.

R. F. ALIGNMENT

Insert "long-antenna" plug, furnished with receiver, into antenna socket and connect generator as indicated in chart below. A condenser in the receiver in series with the blue lead compensates for the reduction in capacity when the antenna is folded and the covers removed - thus, a dummy antenna is unnecessary.

NOTE: - On #3 and 4 Bands, it may be necessary to "rock" the main tuning condenser to compensate for slight shifts in oscillator frequency. When adjusting the trimmers and slugs for maximum gain, the oscillator frequency is 455 kc. less than the signal frequency on #4 band.

Connect hot lead of signal generator to BLUE wire of antenna plug and low side of generator to BLACK wire. A dummy antenna is unnecessary.							
Band	Signal Generator Frequency and Receiver Dial Setting	Oscillator Frequency Relative to Signal	HIGH FREQUENCY END			LDW FREQUENCY END	
			Adjust Dsc. with	Adjust Trimmers For Max. Grain		Adjust Dsc. with	Adjust Slugs For Max. Grain
1	1.4 mc	Above	C _B	C _A	C _C		
	.6				S ₂	S ₁ S ₃	
2	4.0	Above	C _E	C _D	C _F		
	1.6				S ₅	S ₄ S ₆	
3	11.0	Above	C _H	C _G	C _J		
	5.0				S ₈	S ₇ S ₉	
4	28.0	Below	C _L	C _K	C _M		
	14.0				S ₁₁	S ₁₀ S ₁₂	

GUARANTEE

This receiver is guaranteed to be free from any defect in workmanship and material that may develop within a period of ninety (90) days from date of purchase, under the terms of the standard guarantee, as designated by the Radio Manufacturers Association. Any part or parts that prove defective within this period will be replaced without charge when subjected to examination at our factory, providing such defect, in our opinion, is due to faulty material or workmanship, and not caused by tampering, abuse or normal wear. All such adjustments to be made FOB the factory.

Should this receiver require any adjustments, your dealer or distributor has complete technical service in-

formation, or the factory will be glad to assist you in any problem direct.

Should it be necessary to return any part or parts to the factory, a "Return Material Permit" must be obtained in advance by first writing the Adjustment Department, who will issue due authorization under the terms of the guarantee.


The Hallicrafters, Inc., reserve the right to make changes in design or add improvements to instruments manufactured by them, without incurring any obligation to install the same in any instrument previously purchased.

All Hallicrafters receivers are built under patents of Radio Corporation of America and Hazeltine Corporation.

The Hallicrafters Inc.

DIAGRAM - MODEL S-29 - SKY TRAVELER

SCHMATIC

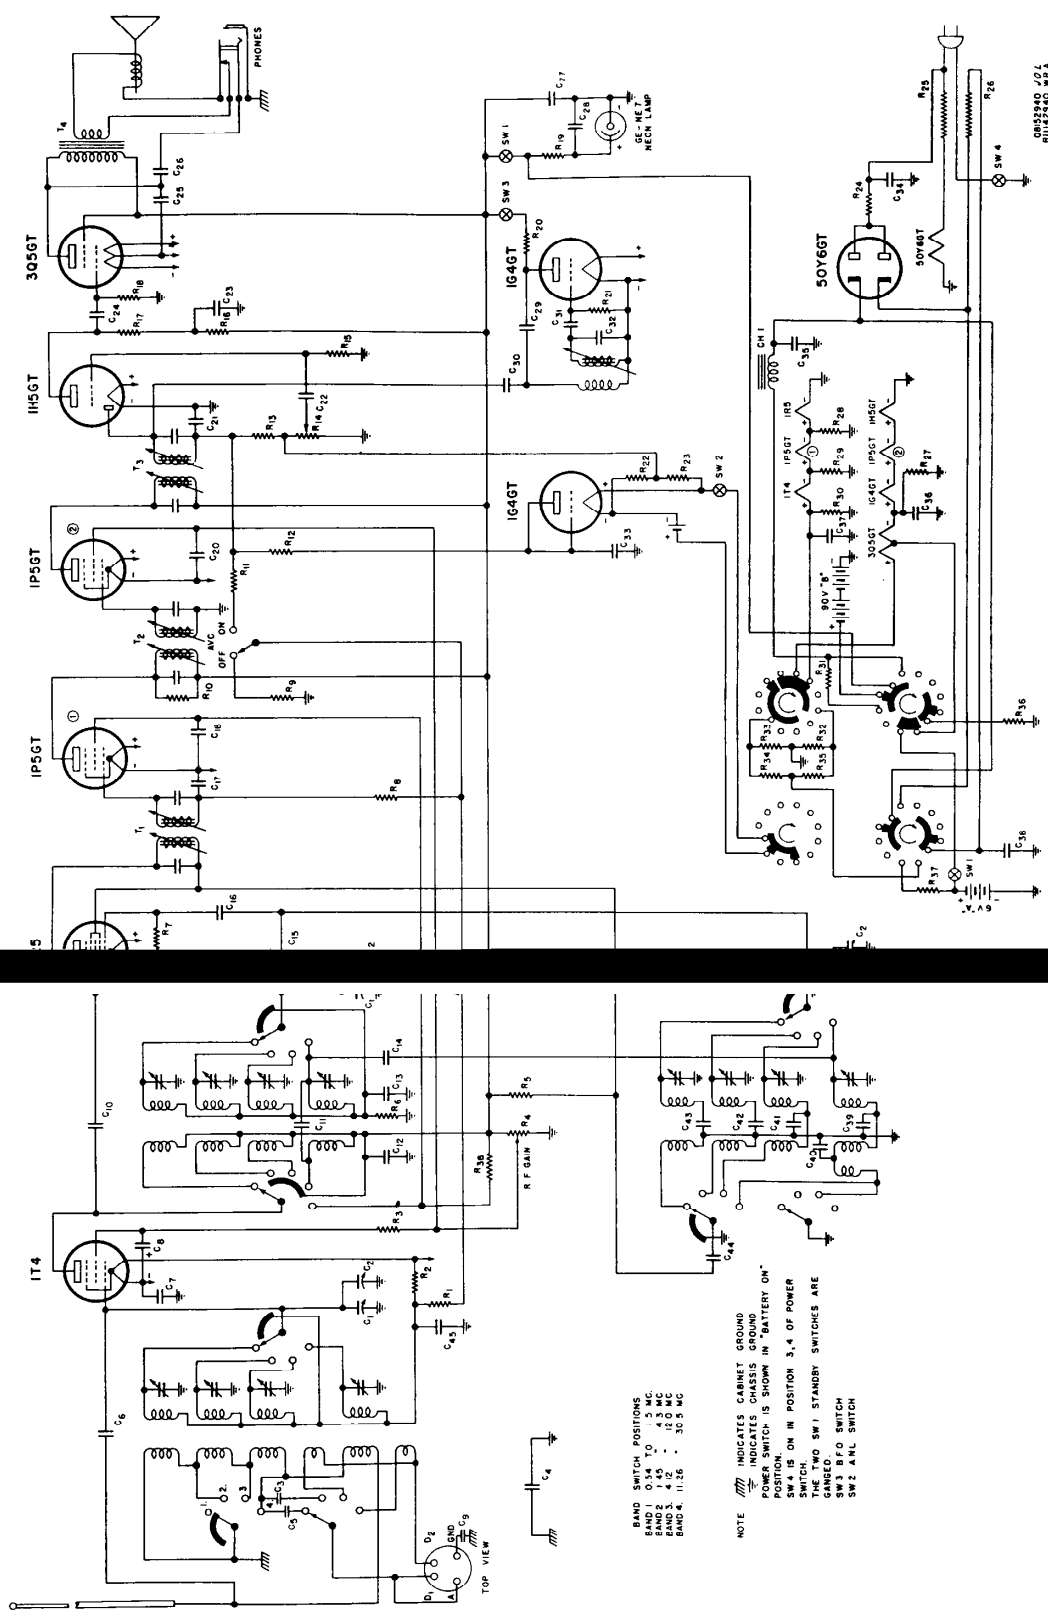

BAND SWITCH POSITIONS
 BAND 1 0.14 TO 5 MC
 BAND 2 1.45 " 4.5 MC
 BAND 3 1.45 " 3.5 MC
 BAND 4 11.25 " 35.5 MC

NOTE
 █ INDICATES CABINET GROUND
 █ INDICATES CHASSIS GROUND
 █ POWER SWITCH IS SHOWN IN "BATTERY ON"
 SW 4 IS ON IN POSITION 3, 4 OF POWER
 SWITCH.
 THE TWO SW 1 STANDBY SWITCHES ARE
 SW 1 BFO SWITCH
 SW 2 A.N.L. SWITCH

0012540 J01
 0012540 M01