

MAINTENANCE SERVICE MANUAL FRG-7700

ESU

YAESU MUSEN CO

C.P.O. BOX 1500

TOKYO, JAPAN

YAESU ELECTRONICS

P.O. BOX 49

PARAMOUNT, CALIFORNIA

CONTENTS

(Page)

i

PREFACE

SECTION 1 -- GENERAL

DESCRIPTION 1-1
DNS 1-2
TOR COMPLEMENT 1-3
ED ACCESSORIES 1-4
ND SWITCHES 1-6
ON 1-10
..... 1-24

GENERAL DE
SPECIFICATIO
SEMICONDU
RECOMMEND
CONTROLS A
INSTALLATIO
OPERATION

SECTION 2 -- TECHNICAL NOTES

RAM 2-1
LOCK DIAGRAM 2-2
SCRIPTION 2-3
ATA 2-5
RCUIT DIAGRAM 2-6
I DIAGRAM 2-7
RCUIT DIAGRAM 2-8
RCUIT DIAGRAM 2-11
ONS 2-12

BLOCK DIAG
PLL UNIT BL
CIRCUIT DES
CRYSTAL DA
FRT-7700 CI
FF-5 CIRCU
FRV-7700 CI
FRA-7700 CI

SECTION 3 -- SERVICING

REL REMOVAL 3-1
EL RMOVAL 3-2
PARTS LAYOUT AND CIRCUIT DIAGRAM
MAIN UNIT (PB-2169) 3-3
PLL UNIT (PB-2170) 3-7
VFO UNIT (PB-2172) 3-10
EM UNIT (PB-2176) 3-12

MODIFICAT

FRONT PAN
REAR PAN

POWER SUPPLY UNIT (PB-2171) 3-14
SWITCH UNIT (PB-2173) 3-16
MEMORY UNIT (PB-2175) 3-18
MEMORY UNIT CHECK POINTS 3-21



WAVE FORM CHART 3-22
MEMORY UNIT TIMING CHART
PLL VCO SELECTION
PLL DIVIDING RATIO
MAIN UNIT BPF SELECTION
BAND SWITCH CONTACT POSITION
SOLDERING AND DESOLDERING TECHNIQUE
MAINTENANCE AND ALIGNMENT
TROUBLESHOOTING

SECTION 4 -- REPAIR PARTS

4-1
4-5
PARTS LIST AND ORDERING FORMS
PARTS LIST

PREFACE

The purpose of this manual is to provide the reader with information critical to the operation and maintenance of the ERG-7700 general coverage communications receiver. Technical details are geared for maximum comprehension by the technician or owner, rather than the design engineer. To this end, the conditions have been kept brief, while photographs and drawings are utilized liberally.

This manual is entirely at the owner's risk. While we believe the material presented herein to be correct and factual, we assume no liability for damage which may occur when this manual is used as a reference.

ERG-7700 has had an enviable service record, and we trust that you will seldom have recourse to the information presented in this manual. Should reference be necessary, though, we hope and trust that the information will be sufficient for your service needs.

Yaesu Musen Company, Ltd.
Tokyo, Japan

SECTION 1—GENERAL

GENERAL DESCRIPTION	1-1
SPECIFICATIONS	1-2
SEMICONDUCTOR COMPLEMENT	1-3
RECOMMENDED ACCESSORIES	1-4
CONTROL AND SWITCHES	1-6

1-10

1-24

INSTALLATION

OPERATION

ALL MODE COMMUNICATIONS RECEIVER FRG-7700



GENERAL DESCRIPTION

The FRG-7700 is a revolutionary communications receiver for the most demanding shortwave listener. Using an advanced frequency synthesizer, the FRG-7700 provides reception over the range 150 kHz – 29.9 MHz, with provision for reception of AM, SSB, CW, and FM stations. In the AM mode, three bandwidths are available, allowing the operator to select the IF bandwidth most appropriate for the interference level and fidelity requirements of each listening period.

Available as an option for the FRG-7700 is Yaesu's exciting memory feature, which allows

GENERAL

SPECIFICATIONS

Frequency Range:

150 kHz – 29.999 MHz (30 bands)

Modes:

AM, SSB (USB, LSB), CW, FM

Sensitivity:

	AM	SSB/CW	FM
0.15MHz–0.3MHz	30 μ V/500 Ω	3 μ V/500 Ω	–
0.3MHz–2MHz	25 μ V/500 Ω	2 μ V/500 Ω	–
2MHz–29.999MHz	5 μ V/50 Ω	0.5 μ V/50 Ω	1 μ V/50 Ω

Selectivity:

AM W (Wide)	12 kHz (–6 dB)	25 kHz (–50 dB)
AM M (Medium)	6 kHz (–6 dB)	15 kHz (–50 dB)
AM N (Narrow)	2.7 kHz (–6 dB)	8 kHz (–50 dB)
SSB/CW	2.7 kHz (–6 dB)	8 kHz (–50 dB)
FM		

Audio Output:

1.5 Watts (8 ohms, 10% THD)

Speaker Impedance:

8 ohms

4-16 ohms for external speaker or headphone

Power Requirement:

100/120/220/240 volts, AC 50/60 Hz

Power Consumption:

	With Memory Unit
Standby: AC 10 VA	AC 10 VA
ON: AC 33 VA	AC 39 VA

Size:

334(W) x 129(H) x 225(D) mm

Weight:

Approx. 6 kg

6.5 kg (with Memory Unit)

15 kHz (–6 dB)

30 kHz (–40 dB)

Stability:

Less than ± 1 kHz from 1 to 30 minutes after power ON.

Less than ± 300 Hz after 30 minutes warm-up.

Antenna Impedance:

0.15 MHz – 2 MHz BC 500 ohms
(unbalanced)

2 MHz – 29.999 MHz, SW/BC 50 ohms
(unbalanced)

SEMICONDUCTOR COMPLEMENT

ICs:		SN74LS293	1	Diodes:	
HD10551P	2	TA7061AP	1	1N60	10
MB8718	1			1S188FM	4
MB84040B	1	FETs:		1SS53	64
MC4044P	1	2SK107-3	2	10D1	1
MC14024BCP	2	2SK125	4	FC52M	2
MC14046BCP	1	3SK73GR	8	FC63	1
MC14069UBCP	1			MV104	5
MC14504BCP	1	Transistors:		RD4.7EB2	1
MC14518BCP	2	2SA733AQ	17	RD5.6EB2	4
MC14555BCP	1	2SC535A	1	RD7.5EB1	1
MC14556BCP	1	2SC900E	4	RD9.1EB2	1
MSM4023RS	1	2SC945AQ	70	RD10EB1	1
MSM5524RS	1	2SC1047C	1	S2V10	1
μPB553C	1	2SC1317R	1	S2VB10F	1
μPC575C2F	1	2SC1384R	3		
μPD5101LC	6	2SC1393L	2	LEDs:	
μPC78L05A	1	2SC1674L	4	TLG-208	1
SN16913P	3	2SC1959Y	1	TLY-205	2
SN74LS123	1	2SD288K	1	TLY-208	1
SN74LS192	4	2SD882Q	3		
SN74LS196	1	MPS-A13	1		
SN74LS290	1				

* Including Memory Unit

Specifications subject to change without notice or obligation

ACCESSORIES

The following accessories are packaged along with the FRG-7700:

- (1) AC Power Cable (T9013280) 1 ea.
- (2) Extra fuses 100-120V 1A (Q0000002)
220-240V 0.5A (Q0000001) 2 ea.

AVAILABLE OPTIONS

- (1) Memory Unit
- (2) Memory/Clock Backup Batteries (AA Size)

NOTE

~~In this manual, the use of the word "option" in the interest of brevity. The standard FRG-7700 does not include the memory unit, which is available as an extra-cost option from your Yaesu dealer. The AA size penlight cells required to activate the memory backup feature are not supplied with the memory unit.~~

- (3) Wire for antenna (R3000000)
- (4) Extender feet with pads (R3054620)

RECOMMENDED ACCESSORIES

The FRV-7700 is a high-performance crystal controlled VHF frequency converter, designed to match the FRG-7700 general coverage communications receiver. The three 10-MHz ranges on the VHF band are converted into 20*(18)–30 MHz, allowing you to receive these frequencies with your FRG-7700.

The tunable high-Q resonators in both RF and IF sections eliminate most intermodulation and cross modulation problems, providing excellent receiver performance when working with weak signals.

The FRT-7700 is an ultra-compact antenna tuner

Sensitivity: (measured w/FRG-7700)

AM (M) – 2.5 μ V for 10 dB S/N @ 1 kHz

30% MOD

tenuator, 60 dB maximum, prevents intermodulation and cross-modulation from occurring when strong signals are being carried to your receiver.

Also, a two-section lattice low-pass filter aids in the rejection of interference from strong signals above 2 MHz, when you are listening to bands in the 150 kHz to 500 kHz range.

FRV-7700 SPECIFICATIONS

Frequency coverage:

Model A – *118 – 130 MHz; 130 – 140 MHz;
140 – 160 MHz

Model B – *118 – 130 MHz; 140 – 150 MHz;
50 – 59 MHz

Model C – 140 – 150 MHz; 150 – 160 MHz;
160 – 170 MHz

Model D – *118 – 130 MHz; 140 – 150 MHz;
70 – 80 MHz

Model E – 140 – 150 MHz; 150 – 160 MHz;
*118 – 130 MHz

Model F – 150 – 160 MHz; 160 – 170 MHz;
*118 – 130 MHz

for the FRG-7700 receiver. Designed for operation from 150 kHz to 30 MHz, the FRT-7700 will provide the proper impedance for the receiver, thus rejecting unwanted signals. A built-in at-

AM (N) – 2.0 μ V for 10 dB S/N @ 1 kHz
30% MOD

SSB/CW – 0.5 μ V for 10 dB S/N

FM 100 kHz to 100 MHz @ 3.5 μ V Dev

Size:

32(H) x 167(W) x 170(D) mm

Weight:

Approximately 800 g.



FRV-7700



FRT-7700

CONTROL PANEL

The FF-5 LF Filter can reject signals above 500 kHz, thus preventing cross-modulation and inter-modulation caused by strong broadcasting stations above 500 kHz. The installation of this filter onto your FRG-7700 can be done using the mounting

The YH-55 and YH-77 headphones are light in weight, and an extra-soft cushion makes for many hours of comfort. The audio response is shaped to match that of your receiver.


your FRG-7700 can be done using the mounting bracket supplied.



YH-55



YH-77

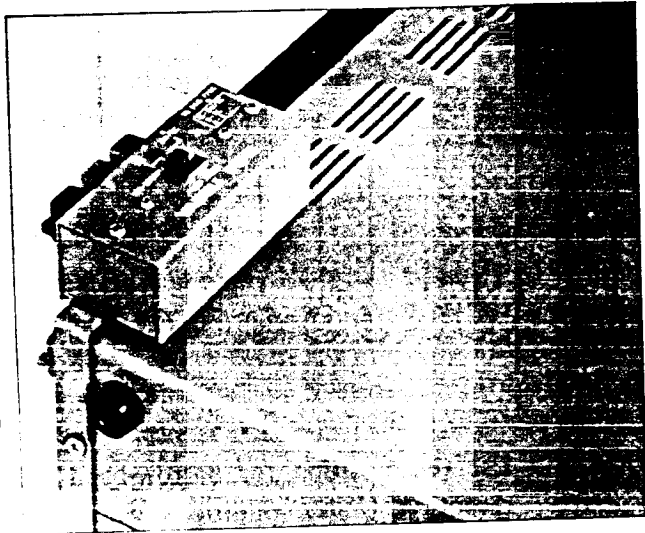

LF FILTER FF-5


FRA-7700 ACTIVE ANTENNA

This active antenna unit is designed for use with the FRG-7700 general coverage receiver, allowing good quality reception of signals while using only

useful of the FRG panel a


ver the entire 150 kHz to 30 MHz range of G-7700. Its gain is adjustable from the front allowing precise setting for optimum performance. A wide variety of reception situa-

The attached 1.2 meter telescoping antenna. The active antenna unit includes an RF preamplifier

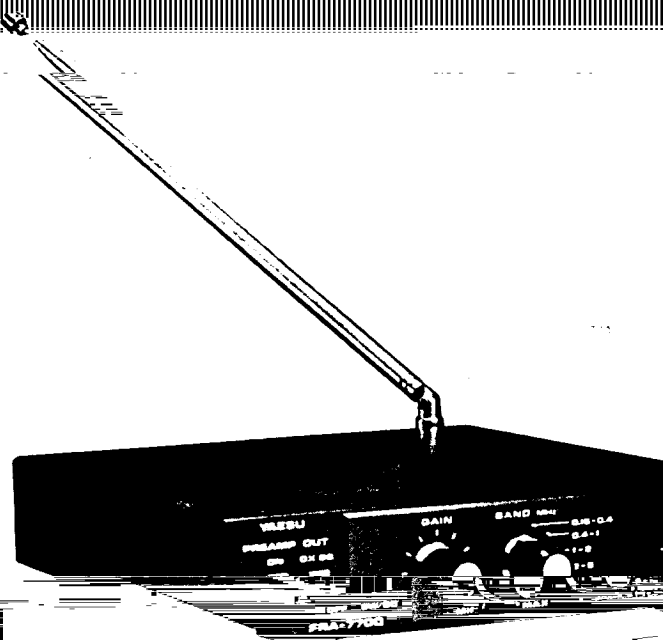

FRA-7700

CONTROLS AND SWITCHES

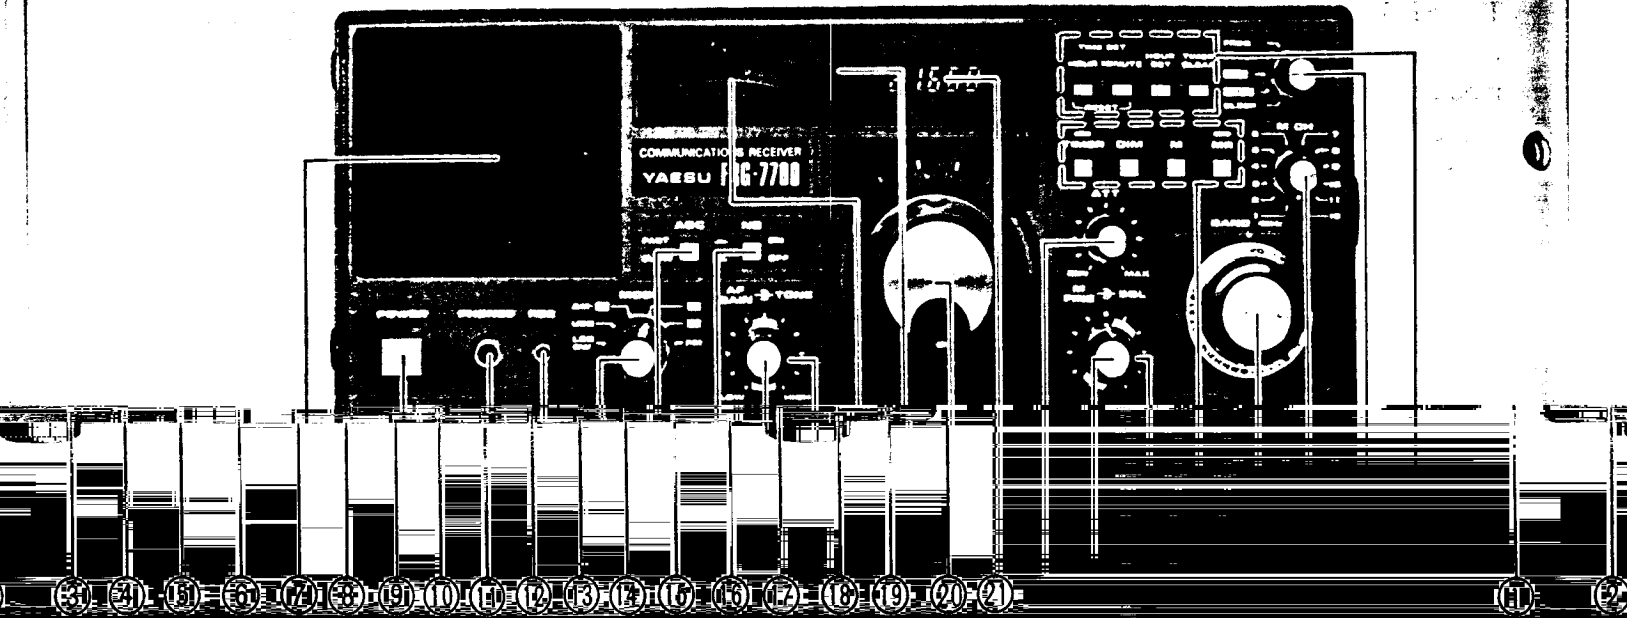

~~AM N Use this position for narrow band AM~~

~~FRONT PANEL~~

N/OFF switch for the receiver. When the switch is in the OFF position, it may be exercised by the clock "operation" section for details.

1/4" headphone jack. When the headphones are inserted into this jack, the internal speaker is automatically cut off. The audio output is 8 ohms.

AM M

Use this position for narrow band AM reception. Under conditions of extremely heavy adjacent frequency interference, this position of the mode switch may allow AM reception where a wider mode would be unusable. There will be some degradation in fidelity in the AM N position, however.

AM W

For all-around AM reception, the AM M position of the mode switch may be used. Because of the wider bandwidth, the fidelity on the incoming signal is much better than with the AM N filter.

Under clear band conditions, the AM W provides the widest bandwidth and best fidelity.

FM

This position selects reception of FM signals.

(6) AGC

This switch allows selection of the optimum AGC (Automatic Gain Control) decay time. The SLOW position is normally used for AM reception, while the FAST position is normally chosen for Morse Code (CW) reception. For SSB reception, the optimum position is determined by band conditions and the adjacent-frequency interference level.

(7) NB

This switch, when pressed, activates the noise blanker for reduction in the level of interfering pulse-type noise.

(1) SPEAKER

Internal speaker

(2) POWER

This is the main on/off switch. When the POWER switch is pressed, the receiver is turned on/off control master timer. See the "Operation" section for details.

(3) PHONES

This is a standard 1/4" headphone plug. When inserted, the internal speaker is automatically cut off. The output impedance is 8 ohms.

(4) REC

This is the receive (REC) indicator. It lights when the receiver is in the receive mode. The (fixed) filter control.

(5) MOD

This control is used for LSB/CW and USB reception.

operator chooses the desired mode:

Use this position for lower sideband (LSB) and Morse Code (CW) reception.

Use this position for upper sideband (USB) reception. This position may also be used for CW reception, if desired.

(8) AF GAIN

The AF GAIN control varies the volume level from the speaker. Clockwise rotation increases the volume level.

(9) TONE

This control varies the high-frequency audio response. The variation in audio fidelity provided by the TONE control is highly useful in minimizing interference from heterodynes and other high-pitched noises that might ruin reception.

(10) S-METER

The S-meter provides a relative indication of the signal strength on the incoming signal. The upper scale is calibrated in S-units from S1 to S9, with stronger signals indicated in dB over S9. The lower scale is calibrated in S-units compatible with the

SINPO code, as shown in Table 1.

(11) AM, PM

These are AM and PM indicators for the clock.

(12) MAIN DIAL

The main dial determines the operating frequency of the FRG-7700, in conjunction with the setting of the BAND switch.

(13) DIGITAL DISPLAY

The digital display indicates the operating frequency as well as the time. Selection of display of the frequency or time is made via the FUNCTION switch.

(14) ATT

The ATT (Attenuator) control, when rotated in a clockwise direction, reduces the gain of the receiver preamplifier, thus minimizing overloading of the receiver during conditions of extremely strong adjacent-frequency interference. Maximum receiver sensitivity occurs when the ATT control is rotated to the fully counterclockwise position.

(15) M FINE

This control allows fine tuning during memory operation. A frequency excursion of up to 1 kHz may be achieved using this control.

(16) SQL

The SQL (Squelch) control will silence the receiver until a signal is received. The SQL control is usable

ONLY in the FM mode.

(17) CONTROL SWITCHES

(TIMER, DIM, M, MR)

TIMER Once the desired on/off timers are programmed into the clock, push this switch to activate the power control timer. In this mode, the digital clock timer will turn the receiver on and off.

DIM This button, when pushed, will allow dimming of the meter lamp, the dial lamps, and the display intensity.

M Push this button to store a frequency into memory.

MR This button, when pushed, transfers frequency control from the main dial to the memory system. Push the button again to return to main dial tuning.

(18) BAND

This switch selects the desired 1 MHz segment within the HF spectrum, with calibrations from 0 MHz to 29 MHz. Also provided are preset marks for the HF amateur radio (ham) bands.

(19) M CH

This switch selects the desired memory channel.

(20) FUNCTION

This switch selects the Digital Display functions.

FREQ All digits of the operating frequency are displayed with resolution to 1 kHz.

CLOCK Time is displayed in a 12-hour format.

ON The ON time, at which the receiver will be turned on, is displayed.

OFF The OFF time, at which the receiver will be turned off, is displayed.

SLEEP The remaining time of the sleep timer is displayed.

(Up to 59 minutes can be set for the sleep timer.)

(21) CLOCK SETTING SWITCHES

HOUR This switch is used for setting hours on the clock and timer. Pressing this switch once will advance the reading by one hour. If this switch is held for more than two seconds, the hour reading will

advance continuously.

GENERAL

MINUTE This switch is used for setting minutes.

TIMER CLEAR


The setting procedure is identical to that for setting hours.

This switch, when pressed, clears remaining time before the program off time. After the timer turns the receiver on in the TIMER mode, you may push the TIMER CLEAR button to turn the receiver off. The following time the receiver will turn ON again is the programmed time. In the sleep mode, pushing this switch will clear remaining time to be zero, and the receiver will turn off.

HOUR SET

This switch, when pressed, resets the minute and second digits of the clock to zero. For example, if more than 30 minutes are displayed on the clock, pressing the HOUR SET button will advance the clock to the next hour. If less than 30 minutes have elapsed in the hour, pressing the HOUR SET button

will zero the minutes and seconds, but leave the hour reading unchanged. This feature facilitates easy time setting.

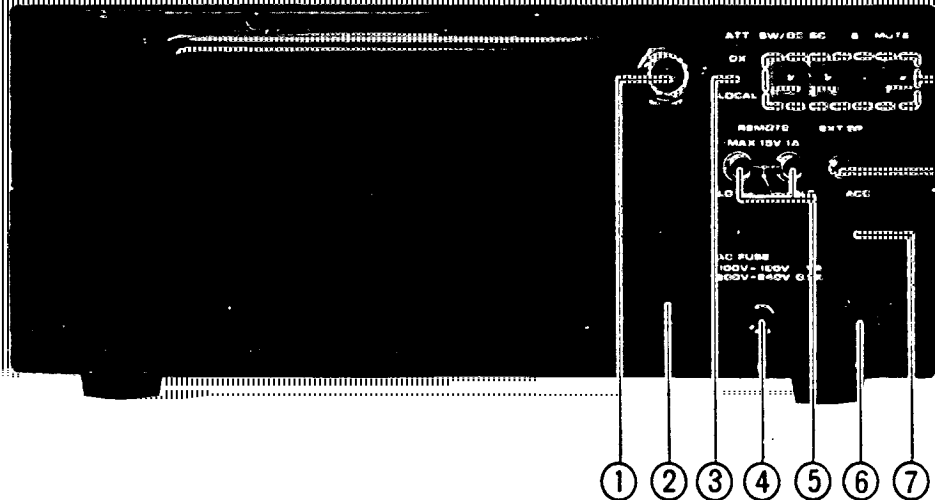

REAR PANEL

(1) COAX ANT

This is a standard UHF type coaxial connector for shortwave and standard broadcast listening. This connector is wired in parallel with the SW/BC terminals.

(2) AC

The AC power cable should be connected at this point.

(3) ATT

The ATT (Attenuator) switch acts as an attenuator in the incoming signal path. When the LOCAL position is selected. For maximum sensitivity, this switch should be placed in the LOCAL position.

(4) AC LINE FUSE

For 100/120 volt operation, a 1 amp fuse should be installed here. For 200/240 volt operation, a 2 amp fuse should be installed here. When installing fuses, be absolutely certain to use the proper rating, as our warranty does not cover damage caused by use of an improper

(5) REMOTE (N.O./N.C.)

These RCA type jacks may be used for control of peripheral equipment such as tape recorder, etc. When the TIMER switch is activated, and the ON time is reached, the internal switching relay is activated. When the OFF time is reached, the relay returns to its normal condition. The normally open and normally closed jacks on the rear panel may be used, according to the control requirements of your station equipment. See the "Operation" section for details.

(6) AC VOLTAGE SELECTOR

This is for selection of the proper input AC voltage. Set this selector for your local line voltage. If you have any question about your local line voltage, consult your local power dealer before attempting operation of this equipment.

(7) ACC

This is a 5 pin DIN accessory jack which affords access to AGC voltage, an 11 volt DC line, and the mute line.

(8) EXT SP

An external speaker may be connected via this jack. The audio output impedance is 4-16 ohms. Insertion of a plug into this jack automatically cuts off the internal speaker.



(9) SW/BC, BC, E, MUTE

SW/BC is for connection to a long wire antenna for both shortwave and broadcast listening.

BC is for connection to a long wire antenna for broadcast band listening.

E is a ground connection.

MUTE provides a means of muting the FRG-7700 (an external standby switch). Shorting the MUTE terminal to ground will mute the receiver.

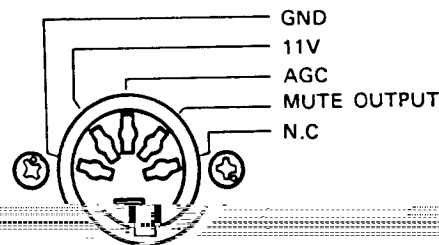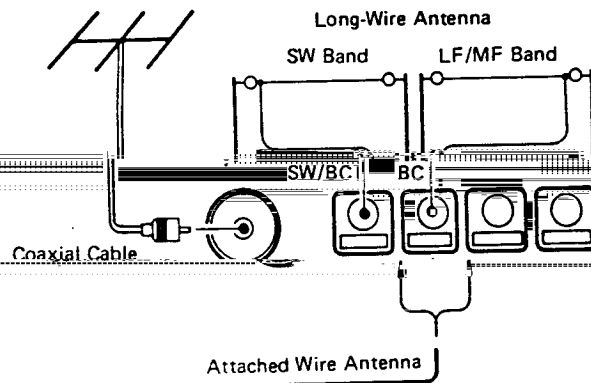

ACC CONNECTIONS

SINPO CODE

	Signal Strength	Degrading Effect of			Overall Rating
		Interference	Noise	Propagation Disturbance	
	S	I	N	P	O
5	Excellent * (60dB)	Nil ● (-40dB)	Nil (-40dB)	Nil ○ (0dB)	Excellent
4	Good (45dB)	Slight (-30dB)	Slight (-30dB)	Slight (10dB)	Good
3	Fair (30dB)	Moderate (-20dB)	Moderate (-20dB)	Moderate (20dB)	Fair
2	Poor (15dB)	Severe (-10dB)	Severe (-10dB)	Severe (30dB)	Poor
1	Barely Audible (0dB)	Extreme (0dB)	Extreme (0dB)	Extreme (40dB)	Unusable

Table 1 * RECEIVER INPUT LEVEL
● RATIO TO SIGNAL
○ DEPTH OF FADING, ECHO, ETC.

GENERAL

INSTALLATION

Best performance from this equipment can only be obtained if proper care is observed during installation. While the setup procedure for the FRG-7700 is extremely straightforward, permanent damage to the set can occur if improper voltages are applied to the unit or if external connections are improperly made. Before attempting operation of

your FRG-7700, be certain to read the following sections carefully.

UNPACKING AND INITIAL INSPECTION

Carefully remove the FRG-7700 from its carton, and inspect it for any signs of physical damage. Rotate the knobs and push the switches, checking each for normal freedom of action. Should any damage be observed, document it carefully, and notify the shipping company immediately. Save the carton and foam packing material for possible use at a later date.

AC VOLTAGE SELECTION

Your FRG-7700 is supplied with a power transformer capable of operation from 100, 120, 220, or 240 volts, as these voltages are the ones most commonly used throughout the world. Your Yaesu dealer has taken care to make sure that your radio is set up for the voltage used in your area. However, in some parts of the world, more than one voltage is available for use. It is extremely important that the FRG-7700 not be subjected to

an improper supply voltage.

Therefore, before connecting the power cord to the radio, make absolutely certain that the voltage specification marked on the rear panel of your receiver (lower right-hand corner) matches your local supply voltage. At the same time, check to make certain that a fuse of the proper rating is installed. For 100/120 volt operation, use a 1 amp fuse. For 220/240 volt operation, use a 1/2 amp fuse. The fuse holder is located on the rear panel. NEVER remove the fuse holder when the power cord is plugged into the wall outlet.


CAUTION

Be certain to observe the above precautions regarding power connections and fuses. Our

warranty does not cover damage caused by improper supply voltage or damage caused by use of an improper fuse.

To set the radio up for operation on a different voltage (as, for example, should you move from Europe to the United States), proceed as follows:

- (1) Disconnect the power cord from the rear of the FRG-7700.
- (2) Remove the label covering the voltage selector control on the rear panel of the receiver.
- (3) Insert a screwdriver into the slot on the voltage selector. Rotate the selector until the proper voltage is at the very bottom of the selector, in line with the pointer.
- (4) If a change is made from 100/120 volts to 220/240 volts, or vice versa, be certain that you install a fuse of the proper rating. For 100/120 volts, use a 1 amp fuse, and for 220/240 volts, use a 1/2 amp fuse.
- (5) Make a small label to indicate the new voltage specification for the receiver, and secure it over the voltage selector.
- (6) Connect the power cord to the "AC" jack, and plug the power cord into the wall outlet.
- (7) If you have any doubt about the proper supply voltage, ask your Yaesu dealer. The proper supply voltage must be indicated on this instrument.

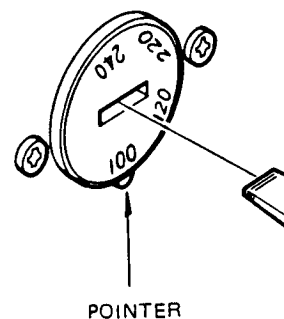

POINTER

AC VOLTAGE SELECTION

BACKUP BATTERY INSTALLATION

Memory-equipped FRG-7700 receivers include a backup feature which will hold the memory even when the unit is unplugged from the supply voltage. The backup feature requires three AA size penlight cells (not supplied), which should be installed as shown in Figure 1. Be absolutely certain to observe the proper polarity of the batteries during installation.

Battery consumption is extremely low, but we recommend that the backup batteries be replaced once per year. If you have not used the FRG-7700

for a long time, you may find that you do not have any leakage from the batteries. Damage caused by improper battery polarity is not

ANTENNA INSTALLATION

The antenna is an important part of your station installation. Without a good antenna system, it will be difficult for you to take full advantage of your FRG-7700 receiver's many high-performance features. For best reception, please follow the guidelines presented below regarding antenna installation.

(1) Low Frequency (LF) and Medium Frequency (MF) Reception (Below 2 MHz Exclusively)

Good all-around reception will occur if a single long wire is connected to the BC terminal on the

rear of the receiver. At the far end of the wire, use ceramic insulators suitable for antenna installations.

are available from your Yaesu dealer. The wire itself may be either bare or insulated (plastic or vinyl covering on the wire), with the constraint that bare wire should not come in contact with trees or other obstructions.

In general, the antenna wire should be as long, high, and in the clear as possible. If these simple recommendations are followed, good reception will be easy to obtain.

(2) Shortwave (SW) Reception (Above 2 MHz Exclusively)

Maximum performance is secured in the shortwave bands through the use of a resonant antenna having an impedance of 50 ohms at the design frequency. A center-fed "dipole" antenna cut for the most-listened-to frequency will easily satisfy this require-

ment. Dipole antennas should be fed with coaxial cable, and suitable antenna kits are available from your Yaesu dealer.

However, the shortwave bands are quite wide, and no dipole antenna will be resonant throughout this entire frequency range. The best course of action, then, is to cut the legs of the dipole antenna to the longest (equal) lengths that your installation area will allow. This will provide an excellent listening system for your shortwave station.

Should you wish to cut your dipole antenna for optimum performance on a particular shortwave band, the formulas of interest are:

$$\text{Length (feet)} = 468 / \text{frequency (MHz)}$$

$$\text{Length (meters)} = 142.5 / \text{frequency (MHz)}$$

and safety, the FRG-7700 should be connected to a good earth ground. The ground lead should be a heavy-gauge braided cable connected to the terminal panel of the receiver.

GROUND CONNECTION

For best performance, the ground lead should be connected to a good earth ground lead should be a heavy-gauge braided cable or wire, and should be connected to the terminal marked "E" on the rear panel of the receiver.

GENERAL

Notes Regarding Antenna Installations

For general reception (listening on both the LF/MF and shortwave bands), the antenna connection should be made to the SW/BC connector or to the coaxial antenna connector on the rear panel. If your primary interest is only on the LF/MF bands, then connect your antenna wire to the BC terminal. Do not connect one antenna to the SW/BC terminal (or coax connector) and another antenna to the BC connector at the same time; if you do, overloading or intermodulation distortion may be created, degrading receiver performance.

Use extreme caution when installing your antenna system. ~~Always use a safety device to protect you~~ because their antenna touched a high-voltage wire providing their normal house current. It is extremely important that your shortwave antenna be located such that it cannot possibly come in contact with electric wires even in a disastrous windstorm.

REMOTE TERMINAL CONNECTIONS

The REMOTE terminals are connected to a relay, which is an electronically controlled switch. In the case of the FRG-7700, the switching relay is controlled by the clock timer, allowing you to control the operation of a tape recorder or other equipment, simply by the proper setting of your FRG-7700 clock controls. The "N.O." terminal is "normally open," which means that the relay will cause no connection to be made from the center pin to ground until the timer activates the relay. The "N.C." terminal is "normally closed," which means that the relay contacts will cause a con-

nection to be made between center pin and ground until the relay is activated; the relay will then open the connection.







Most tape recorders have a "footswitch" connection which allows external control. In some cases, this external on/off control line is incorporated into the microphone cord. Closing an external switch then allows the tape recorder to be turned on. To use this kind of tape recorder with the FRG-7700, connect a shielded cable from the tape recorder footswitch jack to the FRG-7700 "N.O." jack, and connect a shielded cable from the FRG-7700 "REC" jack on the front panel to the tape recorder "LINE IN" or "MIC" jack, depending on the levels accepted by your tape recorder. Remember to turn the REC jack off on FRG-7700.

controlled by the AF GAIN control, but the EXT SP jack is: you may want to connect your audio input line differently for your particular requirements.

Details of the operation of the timer are included in the "Operation" section of this manual. Table 2 indicates the position of the relay contacts tied to the REMOTE terminal.

MUTE CONNECTION


When the FRG-7700 is used in conjunction with a transmitter, the MUTE terminal on the rear panel may be used to silence the receiver when transmitting. Do not forget to use a relay for external antenna switching between the receiver and transmitter. Shorting the MUTE terminal to ground will cause the receiver to be silenced.

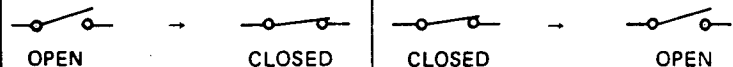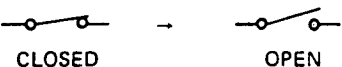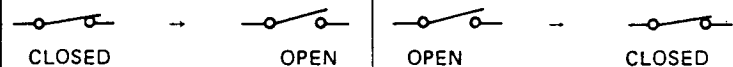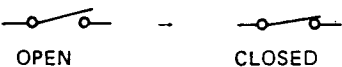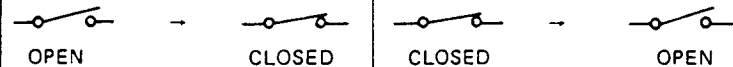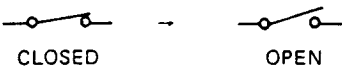TIMER FUNCTION	N.O. Terminal	N.C. Terminal	FRG-7700 (with POWER SW OFF)
ON TIMER	 OPEN → CLOSED	 CLOSED → OPEN	ON at the programmed time
OFF TIMER	 CLOSED → OPEN	 OPEN → CLOSED	OFF at the programmed time
SLEEP TIMER	 OPEN → CLOSED	 CLOSED → OPEN	OFF after the programmed period of time

→ When the timer is activated

Table 2

INTERCONNECTION WITH YR-901 MORSE CODE/TELETYPE READER

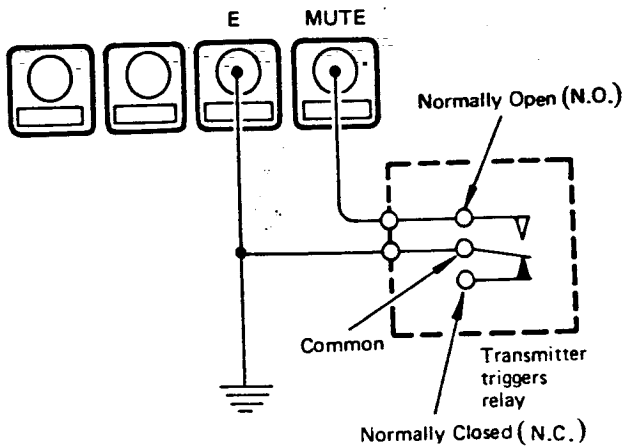


The YR-901 is a high-performance computerized translator which will allow display on a video monitor of incoming Morse Code and/or teletype (RTTY) signals. The YR-901 and YVM-1 Video Monitor are options available from your Yaesu dealer.

Complete operation instructions are included with the YR-901. Please refer to the drawing below for details of the extremely simple interconnections required. Please note that the SP-901 speaker is not mandatory for use with the YR-901, as the latter includes a built-in speaker.

PHYSICAL LOCATION OF THE FRG-7700

The FRG-7700 will perform well in any location that allows free passage of air around the cabinet. Solid state equipment such as the FRG-7700 should not, however, be used in extremely hot environments unless some provision is made (external fan, etc.) for keeping the station temperature less than 40°C.

The YR-901 will allow you to see for yourself late-breaking teletype news as it comes from abroad on circuits used by the international news services. Amateur radio Morse Code and teletype communications, and a host of other exotic transmissions will unfold before you on the video screen. See your Yaesu dealer for details.

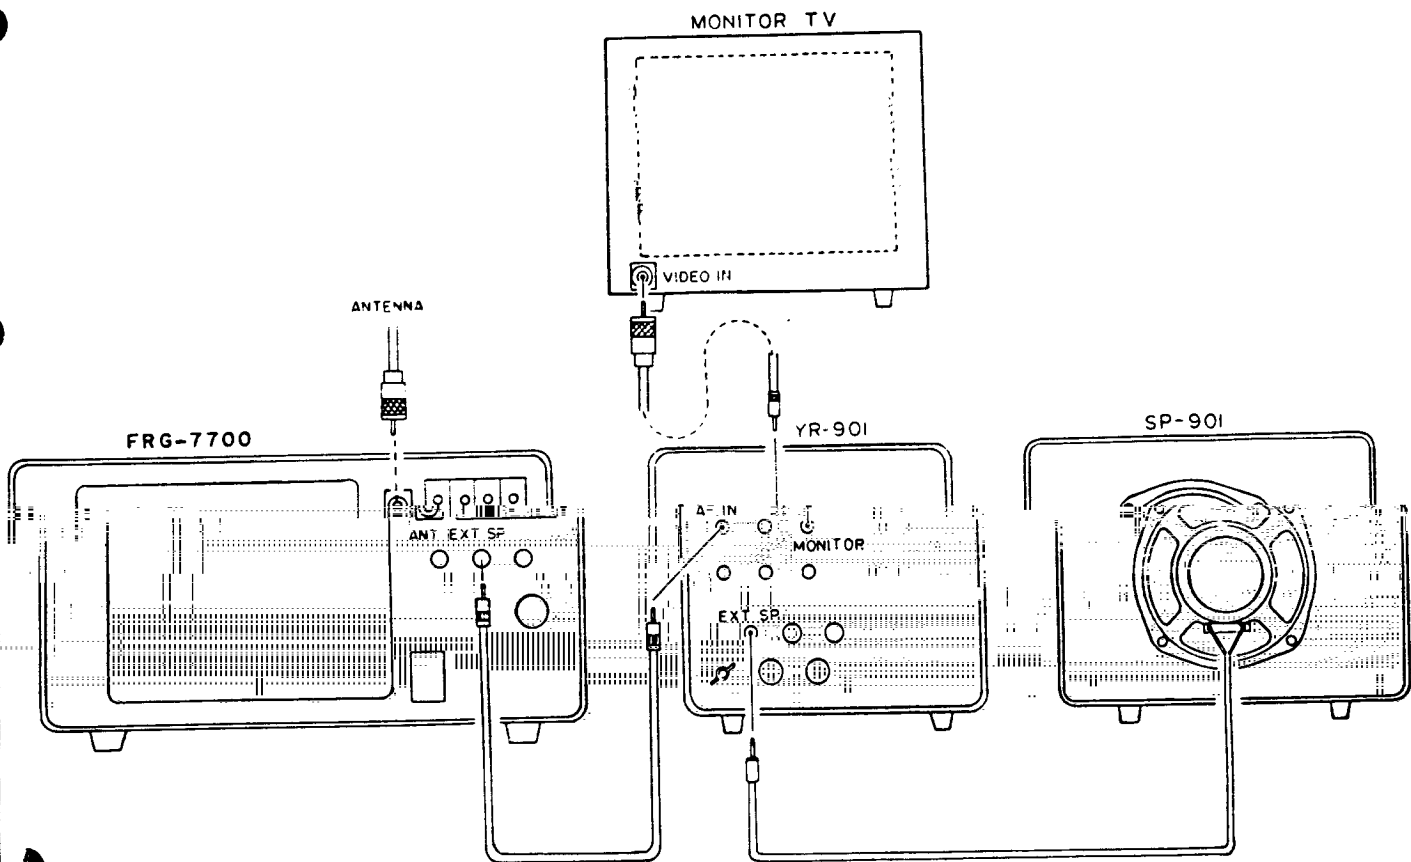

FRG-7700/YR-901/YVM-1/SP-901

GENERAL

MEMORY UNIT INSTALLATION

The optional Memory Unit is easily installed in a matter of minutes. Please follow the below instructions carefully, in order to make the proper connections.

Remove the cover from the rear panel of the receiver, as shown in Fig. 2.

Connect the six plugs which are fastened to the cover to the appropriate jacks on the Memory Unit, as shown in Fig. 3.

Mount the Memory Unit with the supplied self-tapping screws (4 pcs), as shown in Fig. 4, being sure that no wires from inside the unit are protruding.

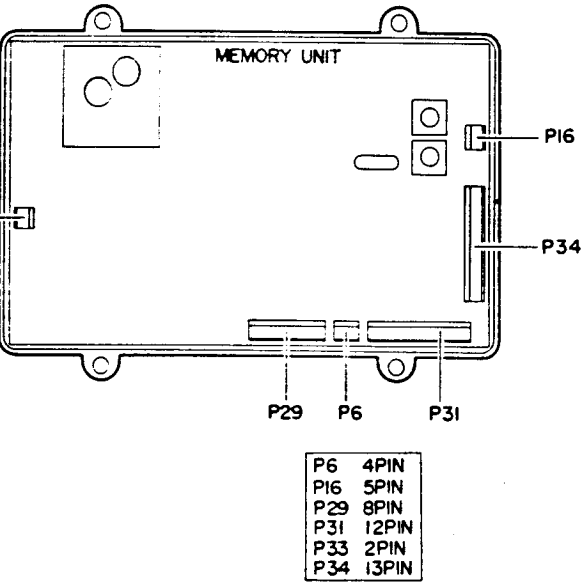


Figure 3

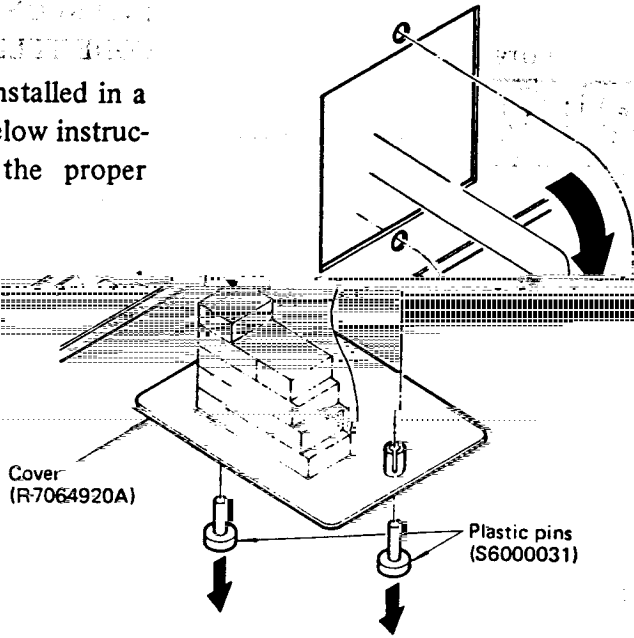


Figure 2

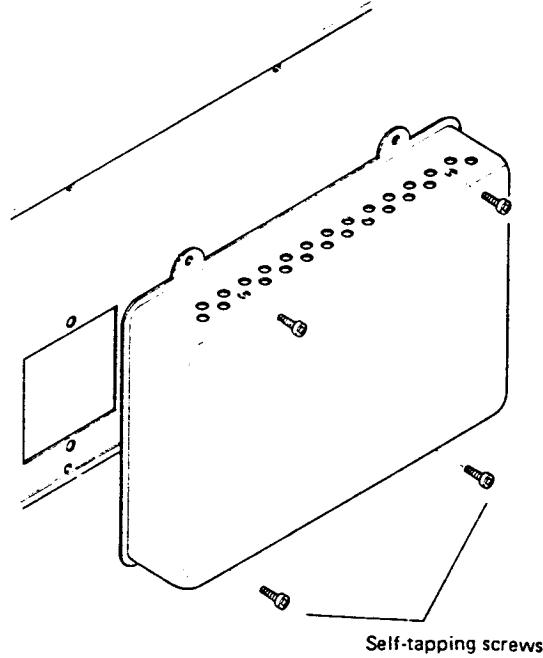


Figure 4

FRONT PANEL FEET

Feet on the bottom of the receiver may be changed, should you desire to change the viewing angle for the FRG-7700. The extender feet, packed in the accessory kit for the receiver, may be used at the front or back, depending on the viewing angle desired. When repacking the receiver for shipping, be certain to replace the original feet. Refer to Figure 5 for mounting details for the front panel feet.

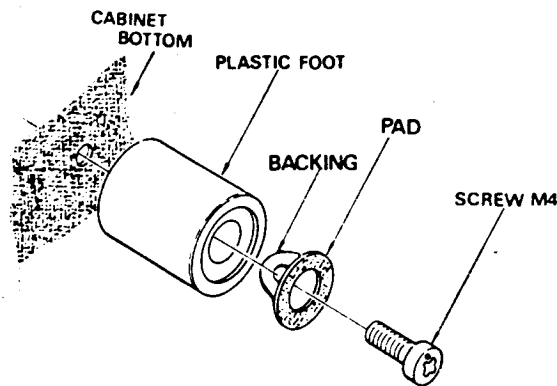


Figure 5

FF-5 INSTALLATION PROCEDURE

OPERATION OF THE SWITCH

When connecting the FF-5 to your FRG-7700, proceed using the following installation procedure:

1. Remove the two feet mounted on the connector side of the FF-5.
2. Referring to Figure 1, fix the supplied mounting bracket to the FF-5 with the screws removed in Step 1.
3. Remove the two screws on the left, rear side of the cabinet, and secure the mounting bracket of the FF-5 in place, as shown in Figure 2.
4. Connect center conductor of the gray coaxial cable from the FF-5 to the SW/BC terminal

SW/BC Position

When you receive signals above 2 MHz or strong signals below 2 MHz, the switch should be placed in this position. While set in this position, your antenna should be connected to the SW/BC terminal.

BC Position

Set the switch to the BC position when receiving weak signals below 2 MHz. If the signal is receiving interference from strong stations on other frequencies, use the ATT switch on the rear panel of the FRG-7700 to help reduce the interference.


While the switch is in the BC position, your antenna connection should be made to the BC terminal

150 - 500 kHz Position

When you receive weak signals in the range of 150 - 500 kHz, set the switch to this position and connect your antenna to the BC terminal. Signals which may cause interference in this range will be rejected.

- 5... Connect the center conductor of the gray coaxial cable to the BC terminal on the rear panel of the FRG-7700.
- 6... Connect both outer conductors and red coaxial cables to T on the FRG-7700.

ductor of the red terminal on the rear
 ctors of the gray terminal E of the

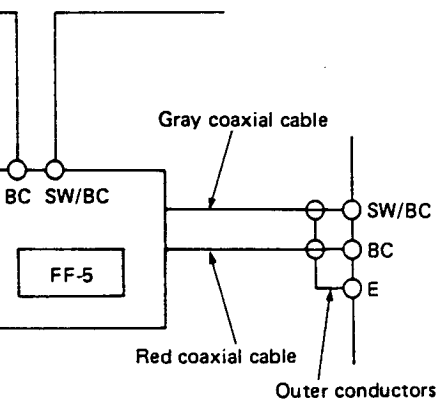

FRG-7700

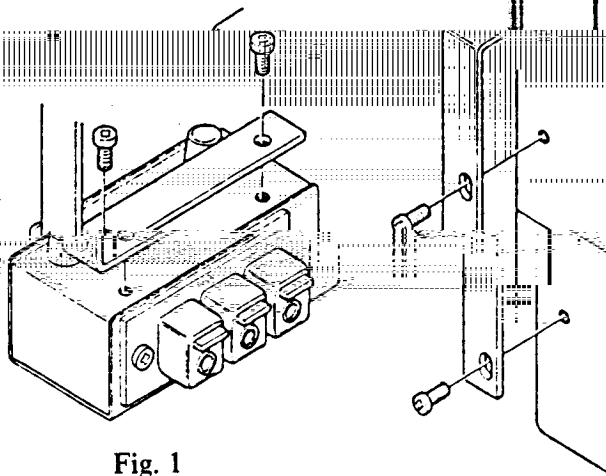


Fig. 1

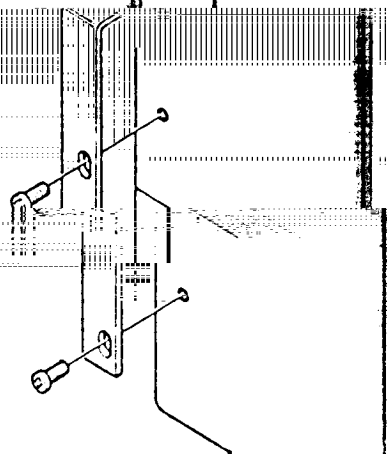


Fig. 2

CONNECTION

BC Terminal

This terminal is used for receiving weak signals below 2 MHz. If you are receiving interference from strong stations, you should use the ATT switch on the rear panel of the FRG-7700 to help reduce the interference.

SW/BC Terminal

This terminal is used for receiving signals above 2 MHz or strong signals below 2 MHz. While set in this position, your antenna should be connected to this terminal.

can be used to receive weak signals. However, when receiving signals from stations below 2 MHz, your antenna should be connected to the BC terminal. Signals which may cause interference in this range will be rejected.

terminal will accept the connection of both antennas. This terminal will receive above and below 2 MHz. When your antenna is connected to this terminal,

FRT-7700 INSTALLATION PROCEDURE

1. Connect the center conductor of the gray coaxial cable coming from the rear panel of the FRT-7700 to the SW/BC terminal on the rear panel of the FRG-7700. Connect the center conductor of the red coaxial cable to the BC terminal. Both outer conductors of the coaxial cables should be connected to terminal E.

3. Tune the FRG-7700 to your desired signal.
4. Push the TUNER switch on, and adjust the TUNING control for maximum deflection on the S-meter.


2. Your antenna should be connected to the ANT B terminal for normal operation. This terminal accepts incoming signals from 150 kHz to 30 MHz. However, the ANT B terminal is best utilized when you are interested in receiving weak signals in the range of 150 kHz to 500 kHz.

The coaxial receptacle (SO-239) is connected parallel to the ANT B terminal in the FRT-7700. If your antenna feeder has a coax plug, it should be connected to the coaxial receptacle.

OPERATION



1. Set your FRG-7700 for normal operation on the frequency you desire.
2. Preset the controls and switches as follows:
 - TUNER - OFF
 - ATT - 0 (dB)
 - BAND - Desired band
 - MATCHING - 3

6. Repeat the adjustments in Steps 4 and 5 until a maximum S-meter reading is obtained. In some cases, the best sensitivity is obtained at either one range above or below the specified coverage of the BAND switch, a trick you might try when you are unable to obtain sufficient sensitivity.
7. When your receiving station receives interference from strong signals, try reducing all incoming signals by adjusting the ATT control, until you find a position where you can receive the signals clearly.
8. When weak signal reception below 2 MHz is desired, push the OUT switch to DXBC, and the weak signals will be clearly received.

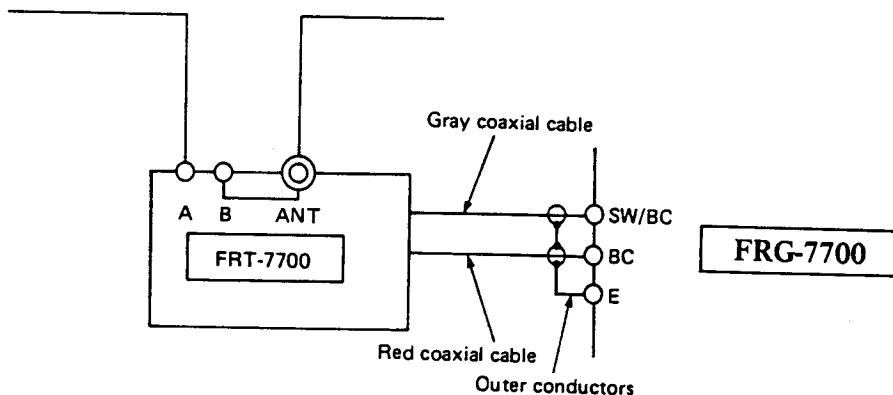

FRV-7700 INSTALLATION PROCEDURE

FRONT PANEL SWITCHES AND CONTROLS

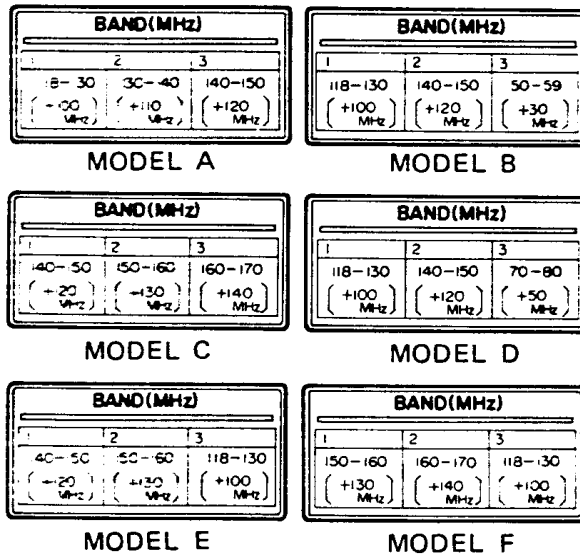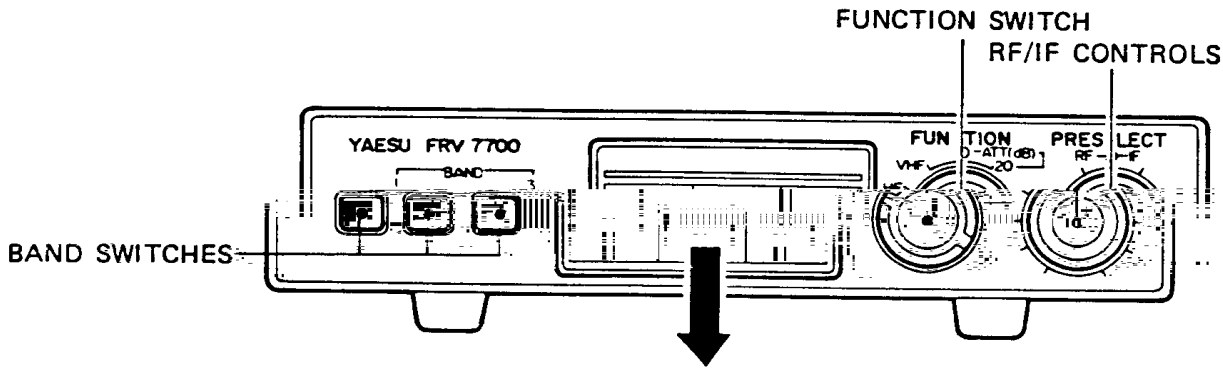

BAND Switches

These three switches select the desired coverage, shown on the front panel.

FUNCTION Switch

This switch activates the FRV-7700, and in the 10 or 20 dB ATT position the receive signal is attenuated. When this switch is placed in the HF position, the FRV-7700 is switched off and the HF antenna is connected through the FRV-7700.

RF and IF Controls

These controls tune the RF and IF resonators exactly to your receive frequency, providing maximum sensitivity and rejection of unwanted signals. During operation, adjust these controls for a maximum S-meter reading on each frequency.

REAR PANEL CONNECTIONS


VHF

This jack accommodates the antenna for the VHF band.

SW/BC, BC, E


These terminals accommodate antennas for BC and

HF bands. When the FUNCTION switch is in the HF position, the signal from the antenna connected to these terminals is fed through the FRV-7700 to the FRG-7700. Antenna connection should be done in the same manner as that of the FRG-7700 (refer to the FRG-7700 Instruction Manual).

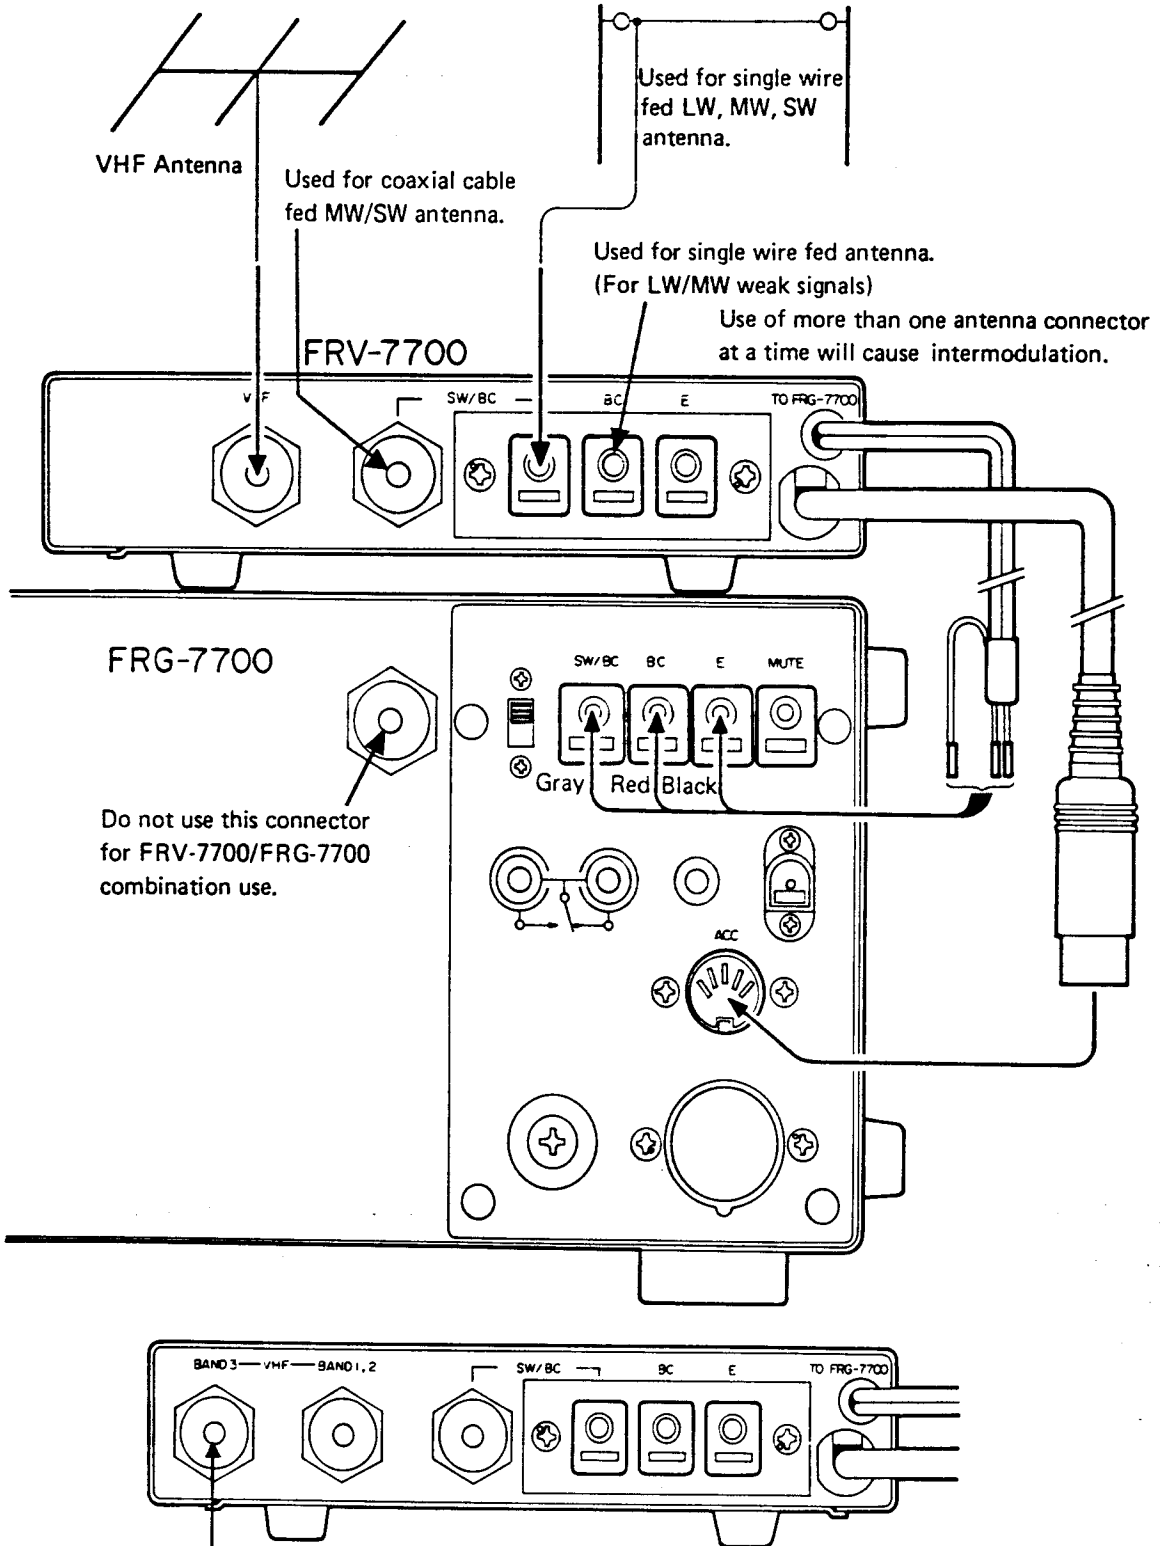

Models B and D only for BAND 3 operation.

FRV-7700/FRG-7700 INTERCONNECTIONS

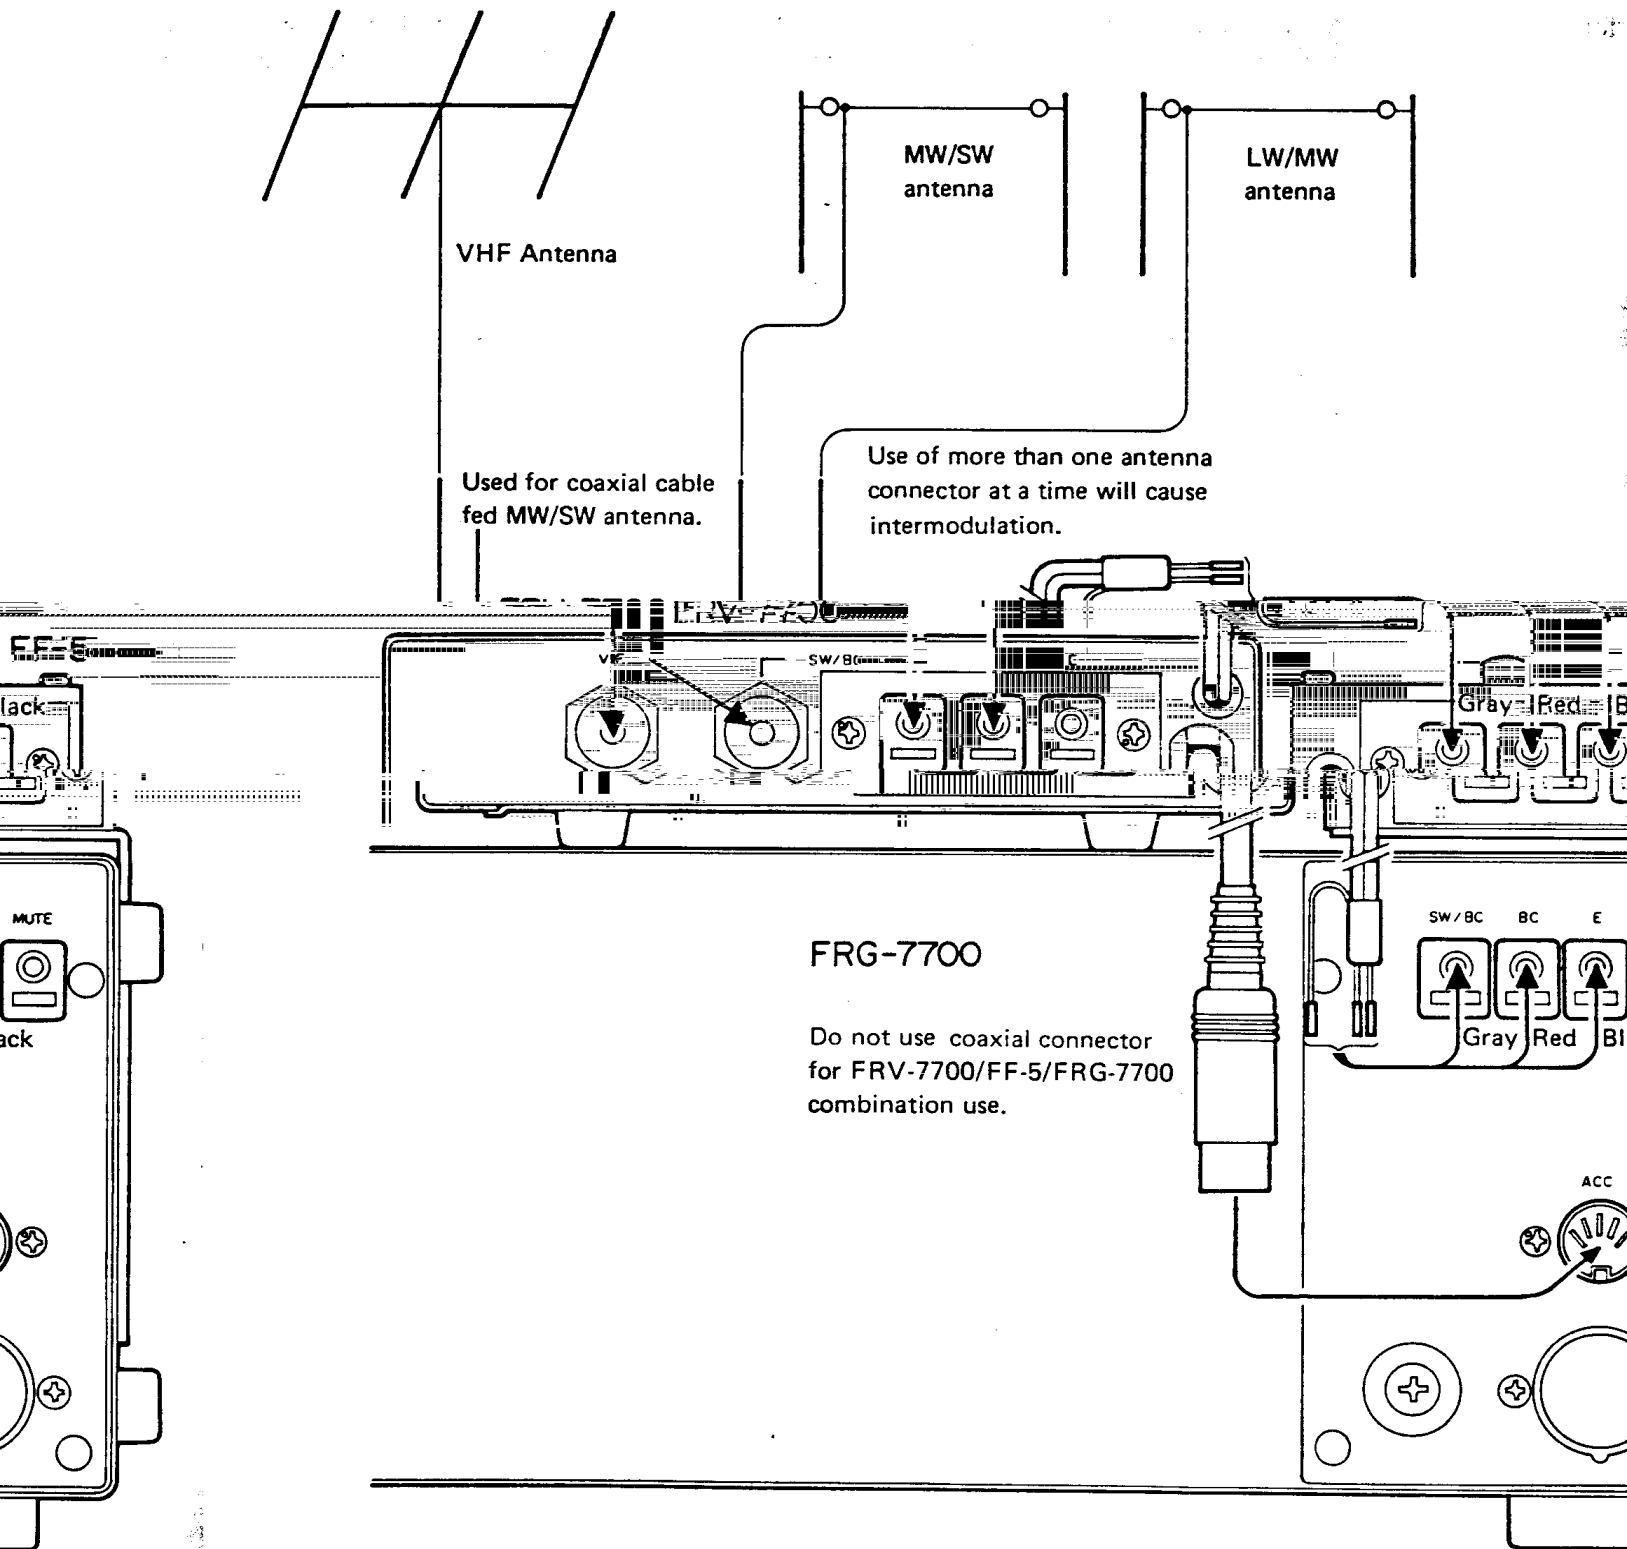

FRV-7700/FF-5/FRG-7700 INTERCONNECTIONS

OPERATION

The frequency conversion provided by the FRV-7700 is shown on the front panel. The FRV-7700 uses the 18-30 MHz portion of your FRG-7700 as its tuning range, transforming it up to the VHF frequency by shifting it the amount shown in parentheses in the BAND table.

For normal operation, set the FUNCTION switch to VHF, and set the FRG-7700 BAND switch as needed to produce the desired frequency in accordance with the BAND switch engaged on the FRV-7700. Turn the FRG-7700 POWER switch ON.

For example, on Model A, Band 2 provides a frequency shift of +110 MHz. Thus, when tuning 20-30 MHz on your FRG-7700, the converted frequency is 130-140 MHz. Likewise, on Model A, Band 3 causes a conversion of +120 MHz, producing a tuning range of 140-150 MHz when you tune 20-30 MHz on your FRG-7700.


Adjust the FRV-7700 RF GAIN and IF GAIN controls for maximum deflection on the FRG-7700 S-meter while listening to an incoming signal. This peaking of these controls will ensure maximum sensitivity and rejection of out-of-band signals.

Look at the examples below. Push Band 3 to select 140-150 MHz. Now tune the FRG-7700 to 25.000 MHz. The resulting frequency will be 145.000 MHz, in the middle of the 2nd Meter Amateur Radio band.

When extremely strong signals are present, you may want to activate the 10 dB or 20 dB attenuator to reduce cross-modulation or inter-modulation products which may be hampering reception. These signals are characterized by occasional squealing, unintelligible signal quality. Set the FUNCTION switch to either the 10 dB or 20 dB position, as necessary, to reduce the interference level.

Taking another example, push the BAND 1 switch to engage a +100 MHz conversion. Tune the FRG-7700 to 28.800 MHz, and the resultant frequency received will be 128.800 MHz.

FREQUENCY READOUT

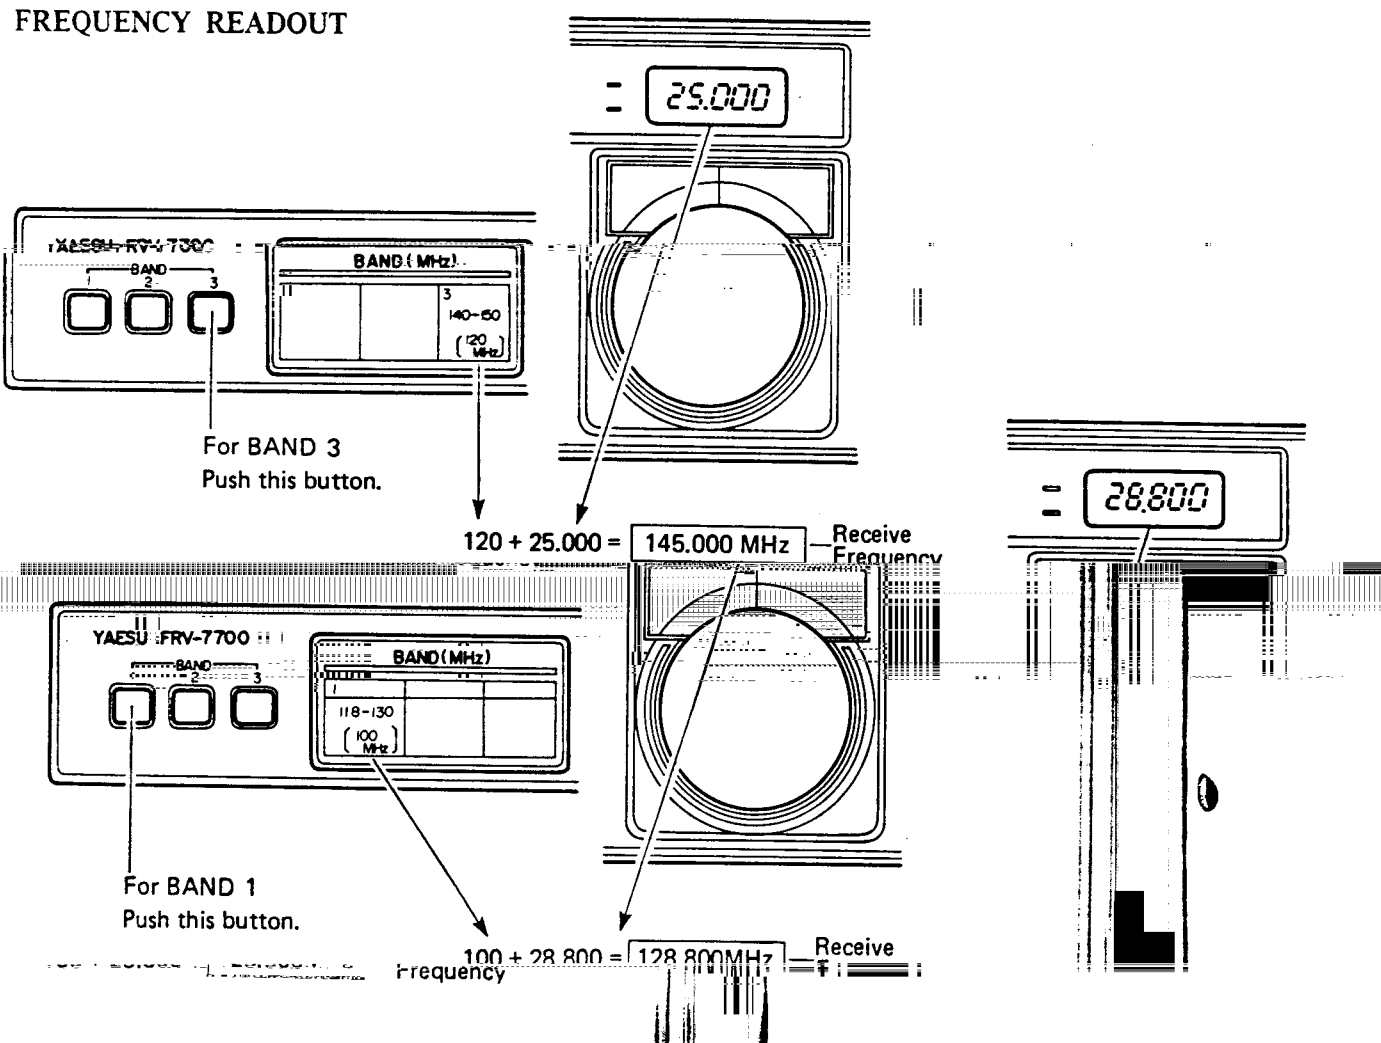

GENERAL

FRA-7700

INSTALLATION AND OPERATION

1. On the end of the cable from the FRA-7700 connect the wire with the grey tab to the SW/BC terminal on the FRG-7700, and the wire with the red tab to the BC terminal.

Similarly, connect the wire with the black tab to the E terminal on the FRG-7700. Connect the DIN plug from the FRA-7700 to the ACC jack.





Preset the controls and switches on the FRA-7700 as follows:

PREAMP ON
OUT SW/BC position
GAIN fully clockwise
BAND as desired

3. Fully extend the telescoping antenna on the FRA-7700.
4. Set the FRG-7700 to receive the desired frequency (as in step 2).
5. Adjust the TUNING control on the FRA-7700 for a peak in the signal on the receiver. If this peak occurs at either the fully clockwise or counterclockwise positions of the TUNING control, set the BAND switch to an adjacent position and tune again for a peak.
6. Adjust the angle and position of the telescoping antenna for maximum signal.
7. If a strong signal on a nearby frequency interferes with your desired signal, reduce the GAIN control setting to minimize the interference.
8. When you attempt to receive very weak signals on frequencies below 2 MHz, set the OUT switch to the DX BC position.

Note:

If you have the FRA-7700 connected to the receiver and switched OFF, such as when listening to strong local signals or through another antenna, you may need to set the BAND switch and TUNING control on the FRA-7700 to peak the received signal (even though the FRA-7700 is switched off).

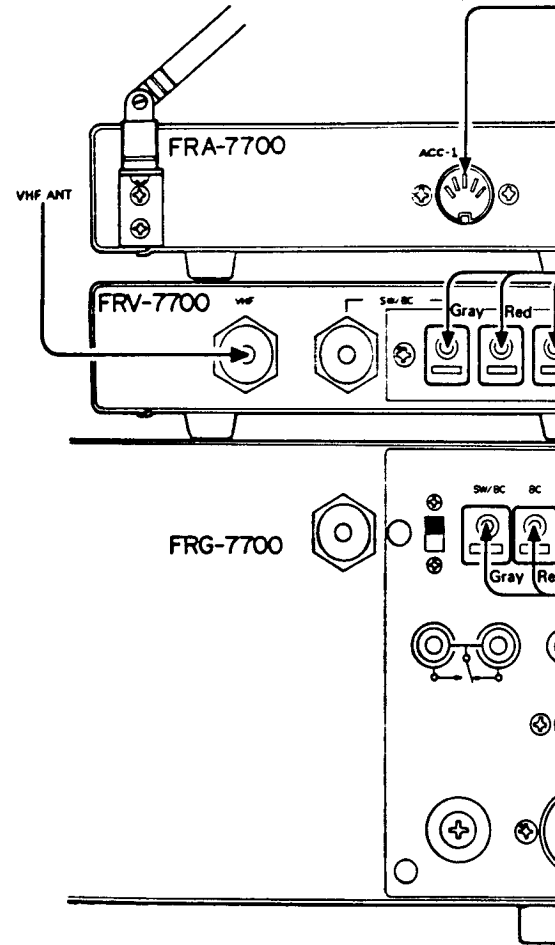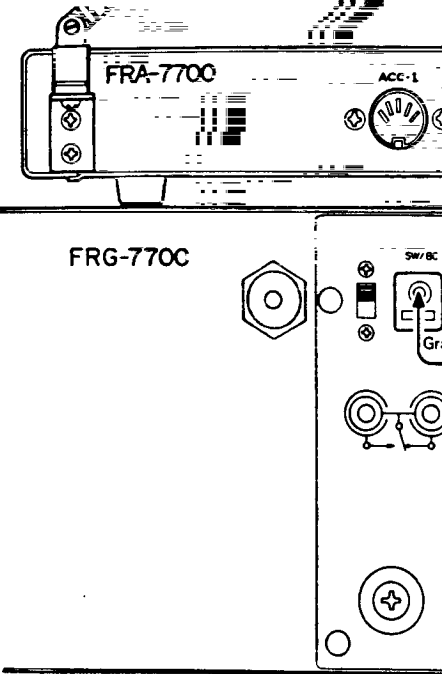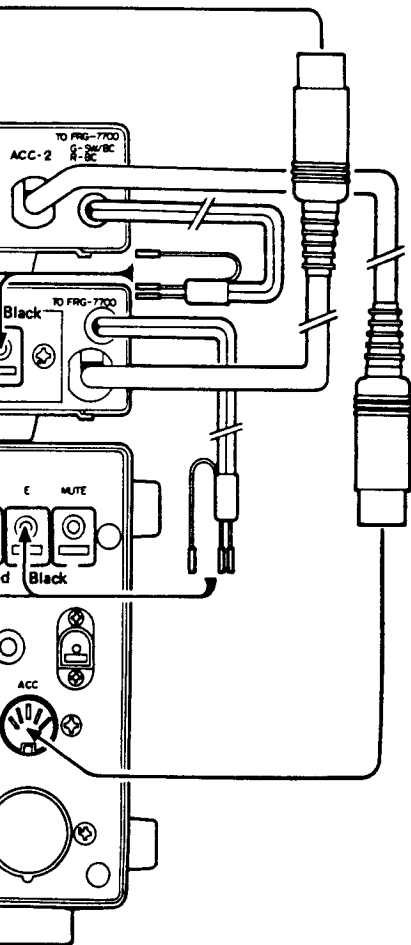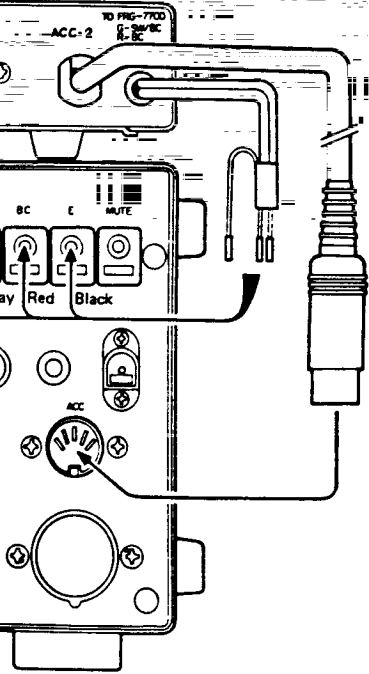

Operation of the FRG-7700 is extremely straightforward. However, the owner should read these pages carefully so as to derive maximum performance from this equipment. Before attempting operation, make certain that all power, antenna, and ground connections have been made correctly.

FREQUENCY SELECTION

The operating frequency is read directly from the digital display. All digits of the operating frequency are displayed, with resolution to 1 kHz. The BAND switch is calibrated in 1 MHz steps, from 0 MHz through 29 MHz, with an additional 10 steps being provided for instant presetting to the bands containing the amateur radio (ham) bands.

To select a frequency, first set the BAND switch to the desired 1 MHz segment, then rotate the main dial to select the last three digits of the frequency. A coarse frequency determination may also be made through the main dial window, which is calibrated every 10 kHz.

AM BROADCAST RECEPTION

- (1) Virtually all commercial broadcast stations in the MF and HF bands use the AM (Amplitude Modulation) mode of operation. To begin, turn the power switch on, and set the mode switch to AM M (AM mode, medium bandwidth).
- (2) Tune in an AM station to the point where the S-meter reading reaches a maximum.
- (3) If there is very heavy interference, you may wish to set the mode switch to the AM N (AM mode, narrow bandwidth) position. This will provide maximum rejection of adjacent-frequency interference, although the narrower bandwidth will cause some loss of fidelity. Conversely, if there is very little inter-

ference, you may switch to the AM W (AM mode, wide bandwidth) position. This will provide maximum fidelity.

- (5) When extremely strong signals are encountered, the operator may want to reduce the level of these signals. Rotate the ATT (Attenuator) control on the front panel clockwise to reduce the strength of the incoming signals. Should you desire to activate the fixed 20 dB attenuator, set the rear panel ATT switch to LOCAL. For most listening, though, leave this switch set to the DX position.
- (6) For reduction in impulse-type noise (automobile ignition, etc.), push the NB (Noise Blanker) switch. This circuit is highly effective in minimizing this type of interference.
- (7) An Automatic Gain Control (AGC) circuit is included in your FRG-7700. This feature keeps signal strengths adjusted to a constant level under conditions of fading. When rapid fading conditions are encountered, you may want to set the AGC switch to FAST, as the use of the SLOW position might cause a weak signal to be obliterated by an adjacent-frequency station which is much stronger. With some experience, the operator will soon learn the proper settings of the MODE and AGC switches for operation under a variety of conditions.

AMATEUR RADIO (HAM) BAND RECEPTION

Amateur radio operators use a variety of operating modes on the HF bands. However, your FRG-7700 is well equipped to receive the various types of ham signals encountered in day-to-day operation.

- (4) The TONE control on the front panel may be used to vary the audio response characteristics

Amateur radio operators use lower sideband on the bands below 10 MHz, and upper sideband (USB) above 10 MHz. Set the mode switch accordingly.

SSB-Voice

- (1) Amateur (LSB) sideband switch

- (2) Turn the power switch on. The meter lamp and digital display will become illuminated.
- (3) Rotate the ATT control fully counterclockwise, and adjust the AF GAIN control for a comfortable listening level.
- (4) Now rotate the main tuning dial until a voice signal is found. Careful adjustment of the main tuning dial will result in excellent clarity on the incoming SSB signal. Under conditions

Frequency Modulation (FM) Reception

Frequency modulation operation is becoming more popular on the 29 MHz amateur band. Also, the operator may wish to use the FRG-7700 with a VHF/UHF converter, for listening to FM repeater operation on the VHF and/or UHF bands. Set the mode switch to FM, and rotate the main tuning dial until the best fidelity on the incoming signal is obtained.

of rapid fading, set the AGC switch to FAST operation. For FM operation, other than the 29 MHz band, the AGC control should be advanced to the point where the

receiver is just silent when no signal (only noise) is being received. This will allow silent monitoring during long periods when no stations are active.

When a frequency interference may be reduced substantially by counterclockwise rotation of the TONE knob. Also, advance the ATT knob in a clockwise direction to reduce the amount of interference from an adjacent station; such a station may never be "pumped," and receiver front end gain will reduce

MEMORY OPERATION

The memory feature provides a means of storing frequencies you may want to recall at a later time. Up to twelve stations may be stored in memory. Here is the simple procedure for memory storage and recall:

- (1) Set the M FINE control to the 12 o'clock

(5) When you push the

(6) To adjust reduce rotating the may be so from a stron may be so s cause the rec tion of the r this effect.

(5) Note that stations on different bands may be stored in memory. Once stored, they may be recalled without the need to rotate the band switch to the appropriate band. In other words, you may store stations in the 11 MHz, 15 MHz, and 21 MHz bands as you tune them in using the band switch and main tuning dial; once you press the MR button, you only need to rotate the M CH switch to recall these stations, with no change in the position of the band switch required.

(3) Push the MINUTE button to advance the minute digit to 25. When the MINUTE button is pressed and held, the digits will advance rapidly, in the same manner as the hour digit.

(4) The clock should be accurate within 15 seconds per month. When setting the clock, be certain that the appropriate AM/PM digit is illuminated.

(6) The M FINE control may be used to provide

fine tuning of the frequency. This may be necessary should the memorized station begin to drift or should to appear on frequency. Judicious use of the AM/PM position of the mode switch, along with the M FINE control, will provide solid copy on many stations that might otherwise be obliterated by interference.

TIMER OPERATION

from the functions are available in ON time. In this mode, the receiver is turned on at a pre-programmed time.

OFF Timer

In this mode, the receiver is turned off at a pre-programmed time.

ON/OFF Timer

In this mode, both the on and off times are preset for power control of the receiver.

SLEEP Timer

In this mode, you may set a listening time of up to 59 minutes, after which the receiver will turn off.

To set the timer for on/off automatic control of the FRG-7700, proceed as follows (example—on time 10:30 AM, off time 11:30 AM)

- (1) Set the POWER switch to OFF, and set the function switch to the ON position.
- (2) Set the display to 10:30 AM by pushing the HOUR and MINUTE buttons, in the same way as you did when you preset the clock earlier.
- (3) Set the function switch to OFF. Set the display to 11:30 AM by pushing the HOUR and MINUTE buttons.

(4) Push the TIMER switch to activate the timer.

The FRG-7700 will turn on at 10:30 AM and turn off at 11:30 AM. Be certain to observe the AM or PM lamps when programming the more than two seconds, the hour digits will advance rapidly until the HOUR button is released.

DIGITAL CLOCK OPERATION

The built-in digital quartz clock is a highly accurate timepiece which adds convenience and flexibility to your FRG-7700 station. The clock will operate as long as the receiver is plugged in, and it will also operate off of the memory backup batteries. When the receiver is initially plugged in, the clock will indicate AM 1:00 and will begin counting. Setting the time is a simple procedure, as shown below.

Example: set the clock to 5:25:00 PM

(1) Place the FUNCTION switch in the CLOCK position, then push and hold the HOUR SET button. The minutes and seconds will reset to zero. Tune in WWV at 10 MHz (or another international time standard) on the receiver. When the time standard ticks off the start of a new minute, release the HOUR SET button. This will align the count of the seconds to the international time standard.

(2) Push the HOUR button to advance the hour digit to 5:00. If the HOUR button is held for on and off times.

- (5) If you want to turn the receiver off before the programmed off time, push the **TIMER CLEAR** button.

To set the sleep timer, proceed as follows:


- (1) Turn the **POWER** switch **OFF** and set the function switch to the **SLEEP** position.
- (2) Push the **MINUTE** switch once. This will cause the sleep time to count back from the 59 minute mark by one minute. Holding the **MINUTE** button down will cause the time to change rapidly, in the same manner as described earlier. If you set the display to 40, the receiver will stay on for 40 minutes, then shut off.
- (3) If you want to turn the receiver off before the programmed off time, push the **TIMER CLEAR** button.

NOTES REGARDING PROPAGATION OF SHORTWAVE SIGNALS

While a complete discussion of the physics of shortwave radio signal propagation is well beyond the scope of this manual, some guidelines are presented below to help you to choose the optimum listening frequency for the time of day and the time of year in which you are operating. This discussion will also help you when you are reading the schedules of overseas broadcast stations; you will soon be able to know instantly why you cannot expect to hear Tokyo on 3.9 MHz at 1:00 in the afternoon.

Shortwave signals are transmitted by huge stations running many thousands of watts of power. Their ~~antenna systems are elaborate and expensive. But~~ all of this equipment would be useless were it not for a property of the ionosphere (a layer of the atmosphere high above the earth) which causes signals to be reflected back to earth when they strike the ionosphere.

Depending on several factors, including the time of day, the time of year, and the current state of solar activity (determined primarily by "sunspots"), the optimum frequency for reflection over a particular distance will change. Another aspect that can be noted is that, for a particular frequency on which you are operating, the distance over which signals will be propagated will change. Thus, in order to hear stations 12,000 km away over a long period of time on a particular day, you will likely have to change your operating frequency (consistent with the broadcast station schedules!) in order to take advantage of changing propagation conditions.

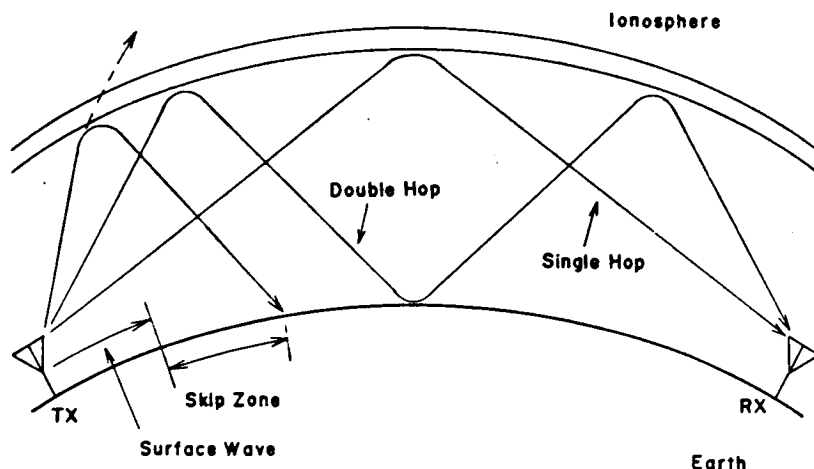

As a general rule, daytime propagation conditions will be best on frequencies from about 12-14 MHz and higher. Propagation at night will generally be best on the 2-15 MHz bands. These general rules often have exceptions, of course; during periods of high solar activity, the 21 MHz band may, for example, be excellent for long-distance propagation well into the night. However, it would be highly unusual for the bands below about 8 MHz to support transoceanic propagation throughout the daytime period.

When reading broadcast station schedules, one must consider not only the time of day at one's own location but also the time of day at the transmitter location. Let us examine the example of two broadcast stations, one in Tokyo and one in Moscow, both operating on 6 MHz at 6:00 PM local time (for our example, let us say that you live in New York City, USA). Because there are night-

The time of year is important for several reasons. For example, at 4:00 PM in New York in June, the sun is still high in the sky. But at 4:00 PM in December, twilight is fast approaching, and nighttime conditions are taking over on the North Atlantic path. Broadcast station managers adjust their schedules so as to use the lower frequencies (below 10 MHz) more heavily in the winter months, because of the increased distance covered by darkness during the winter.

Signals do not always follow the shortest distance from point A to point B (called the "Great Circle" path). They may sometimes follow a bent path, or exactly the opposite of the great circle. This is why it is sometimes possible to hear Tokyo from New York on 7 MHz late in the afternoon in the winter, even though the Great Circle path is in daylight; the signals are traveling along a darkness path around the world. The fact that

many stations are louder and that the transmitting antenna may not be beamed on the optimum path at that time makes reception extremely difficult. But this is the excitement of shortwave listening—hearing the unexpected. Under tough conditions such as this, the AM-N (narrow bandwidth) position of the mode switch will prove itself to be a highly useful feature.

To conclude our discussion on propagation conditions, we would stress the following general rules. First, use the higher frequencies (15 MHz and above) as your main daylight bands. Secondly, use the lower frequencies (below 15 MHz) as your prime nighttime bands. Thirdly, look for peaks in propagation when there is sunrise or sunset at one end or another of a propagation path. For example, look for a peak in 26 MHz propagation towards the East for the hour or so after your sunrise, and toward the West around your sunset.

Careful planning of your operating times, proper choice of listening frequencies, and diligent study of schedules from overseas broadcast stations will pay rich dividends in entries in your log book. We hope that this section will have helped you understand the fascinating world of shortwave radio propagation better.


time conditions across most of the Atlantic path that a signal would be heard from Moscow to New York. You will have a good chance of receiving a signal from Moscow. However, the path is much better than that discussed in the thumb-discussion. It will be difficult, if not impossible, to hear Tokyo at that frequency.


However, if one listens at the same time (±5 MHz) is a much better chance because the path is much better than that discussed in the thumb-discussion.

Broadcast station schedules indicate "Programming" and aim their antennas at a time when people will

SECTION 2—TECHNICAL NOTES

BLOCK DIAGRAM	2-1
PLL UNIT BLOCK DIAGRAM	2-2
CIRCUIT DESCRIPTION	2-3
CRYSTAL DATA	2-5
FRT-7700 CIRCUIT DIAGRAM	2-6
FF-5 CIRCUIT DIAGRAM	2-7
FRV-7700 CIRCUIT DIAGRAM	2-8
FRA-7700 CIRCUIT DIAGRAM	2-11
MODIFICATIONS	2-12

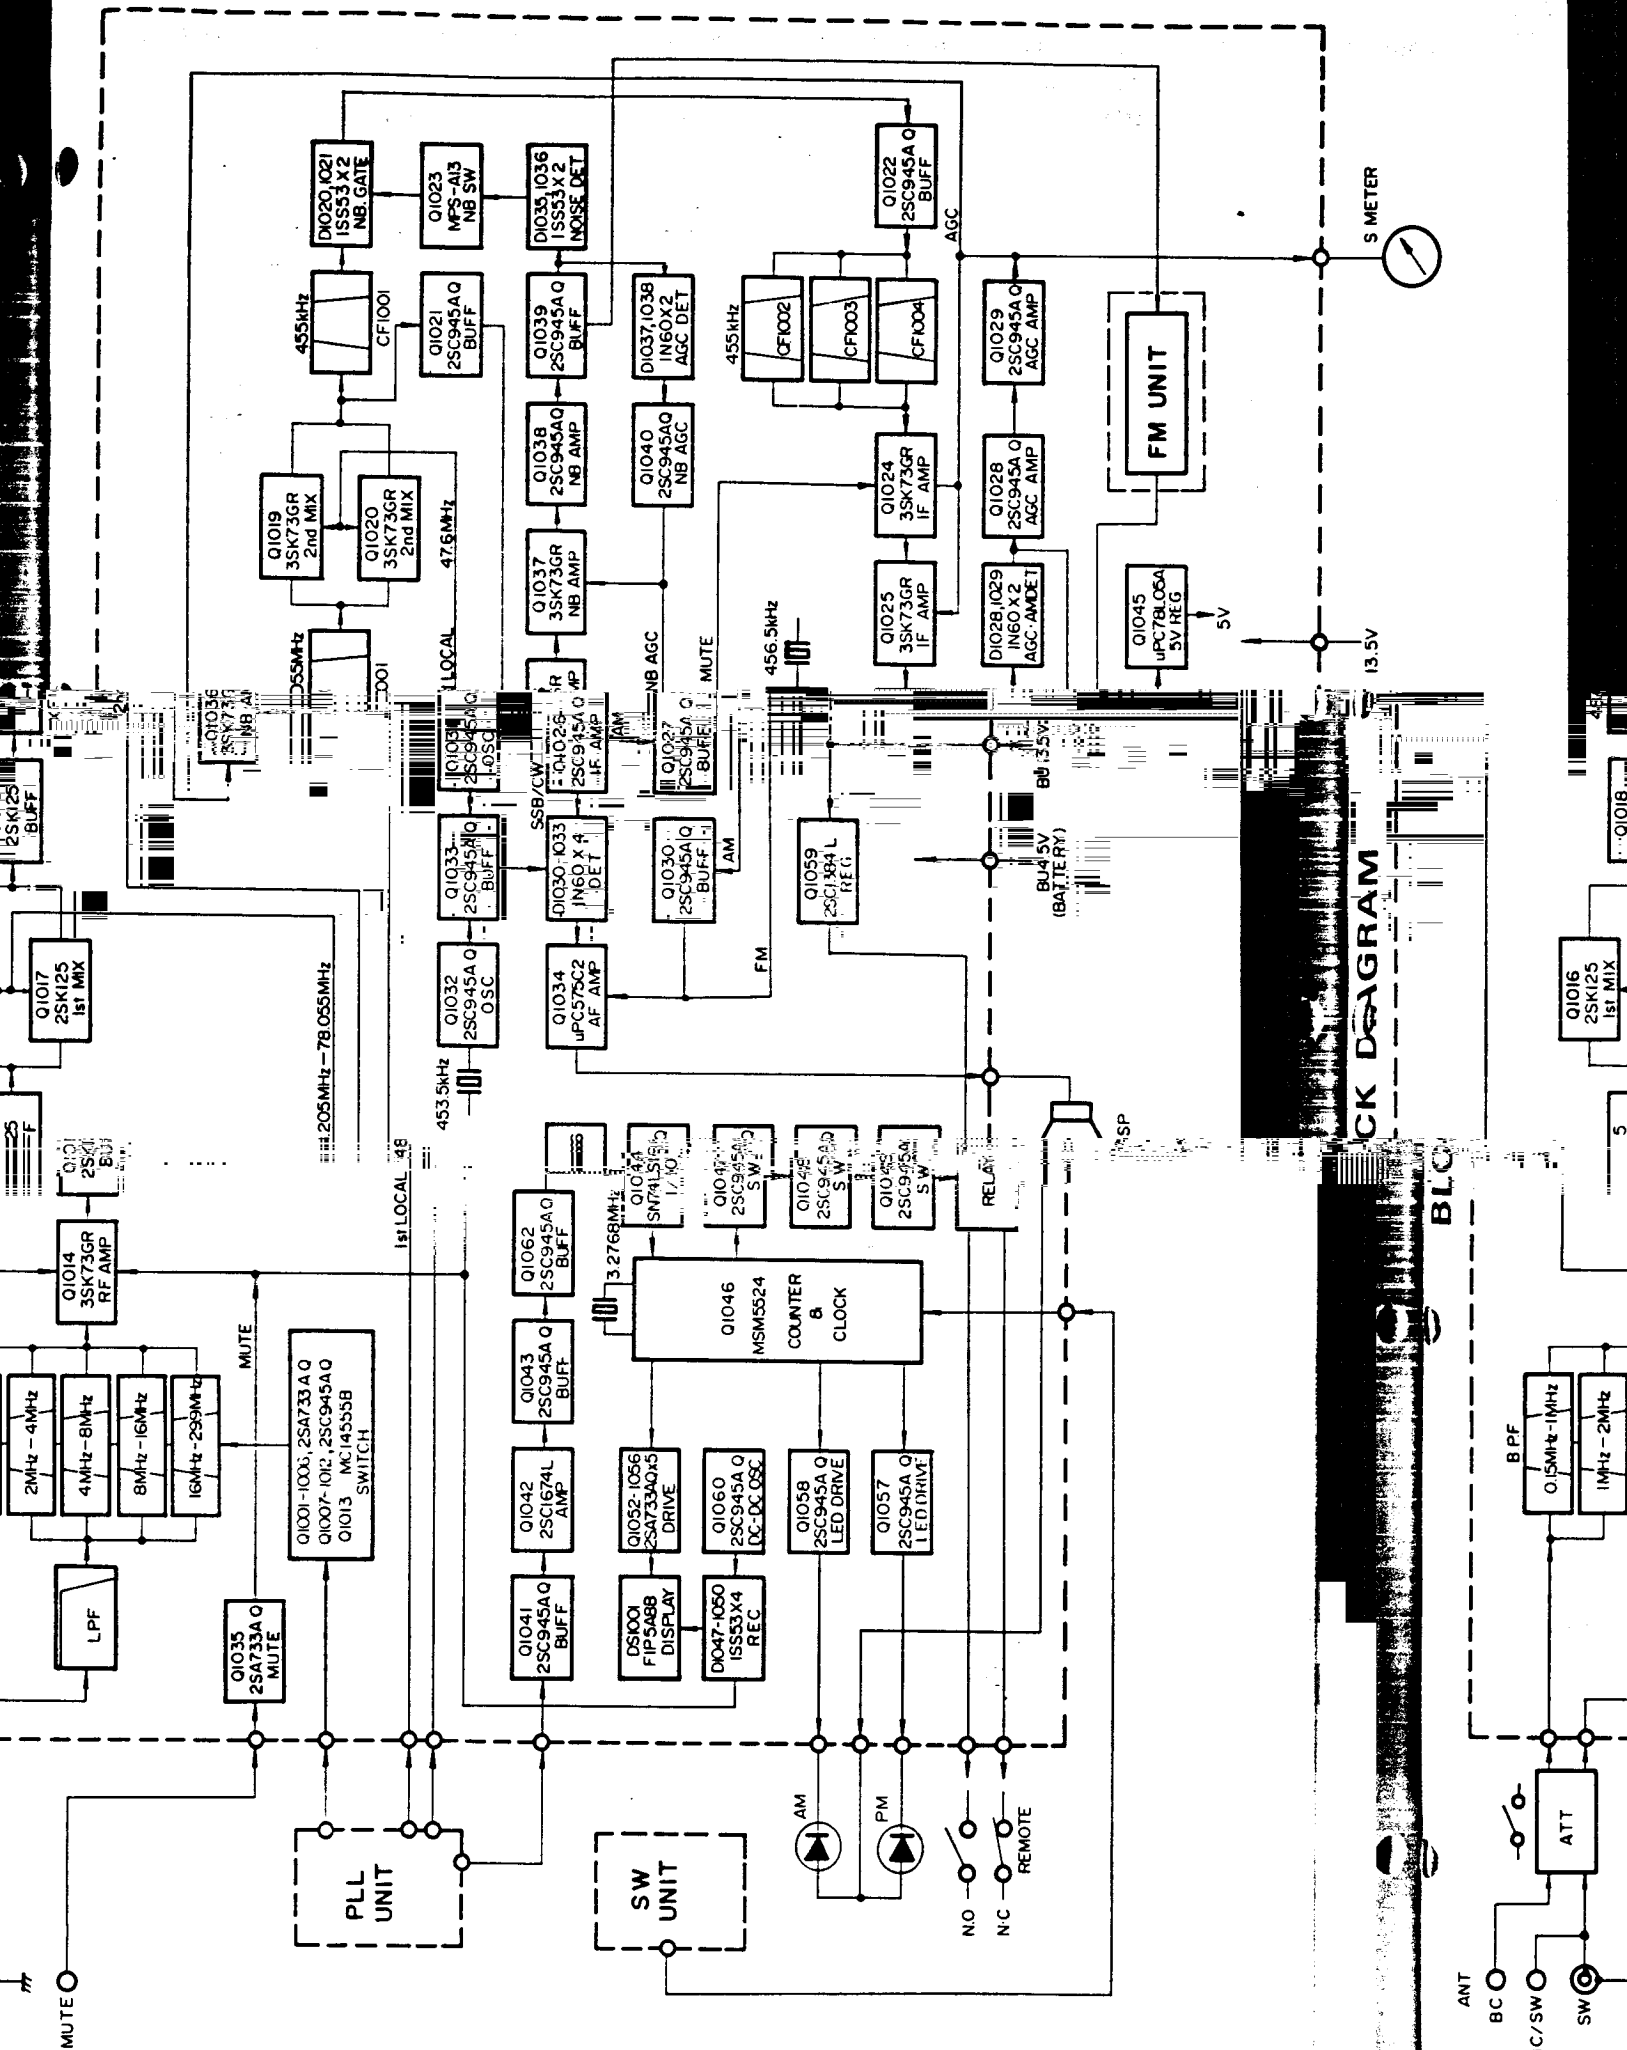

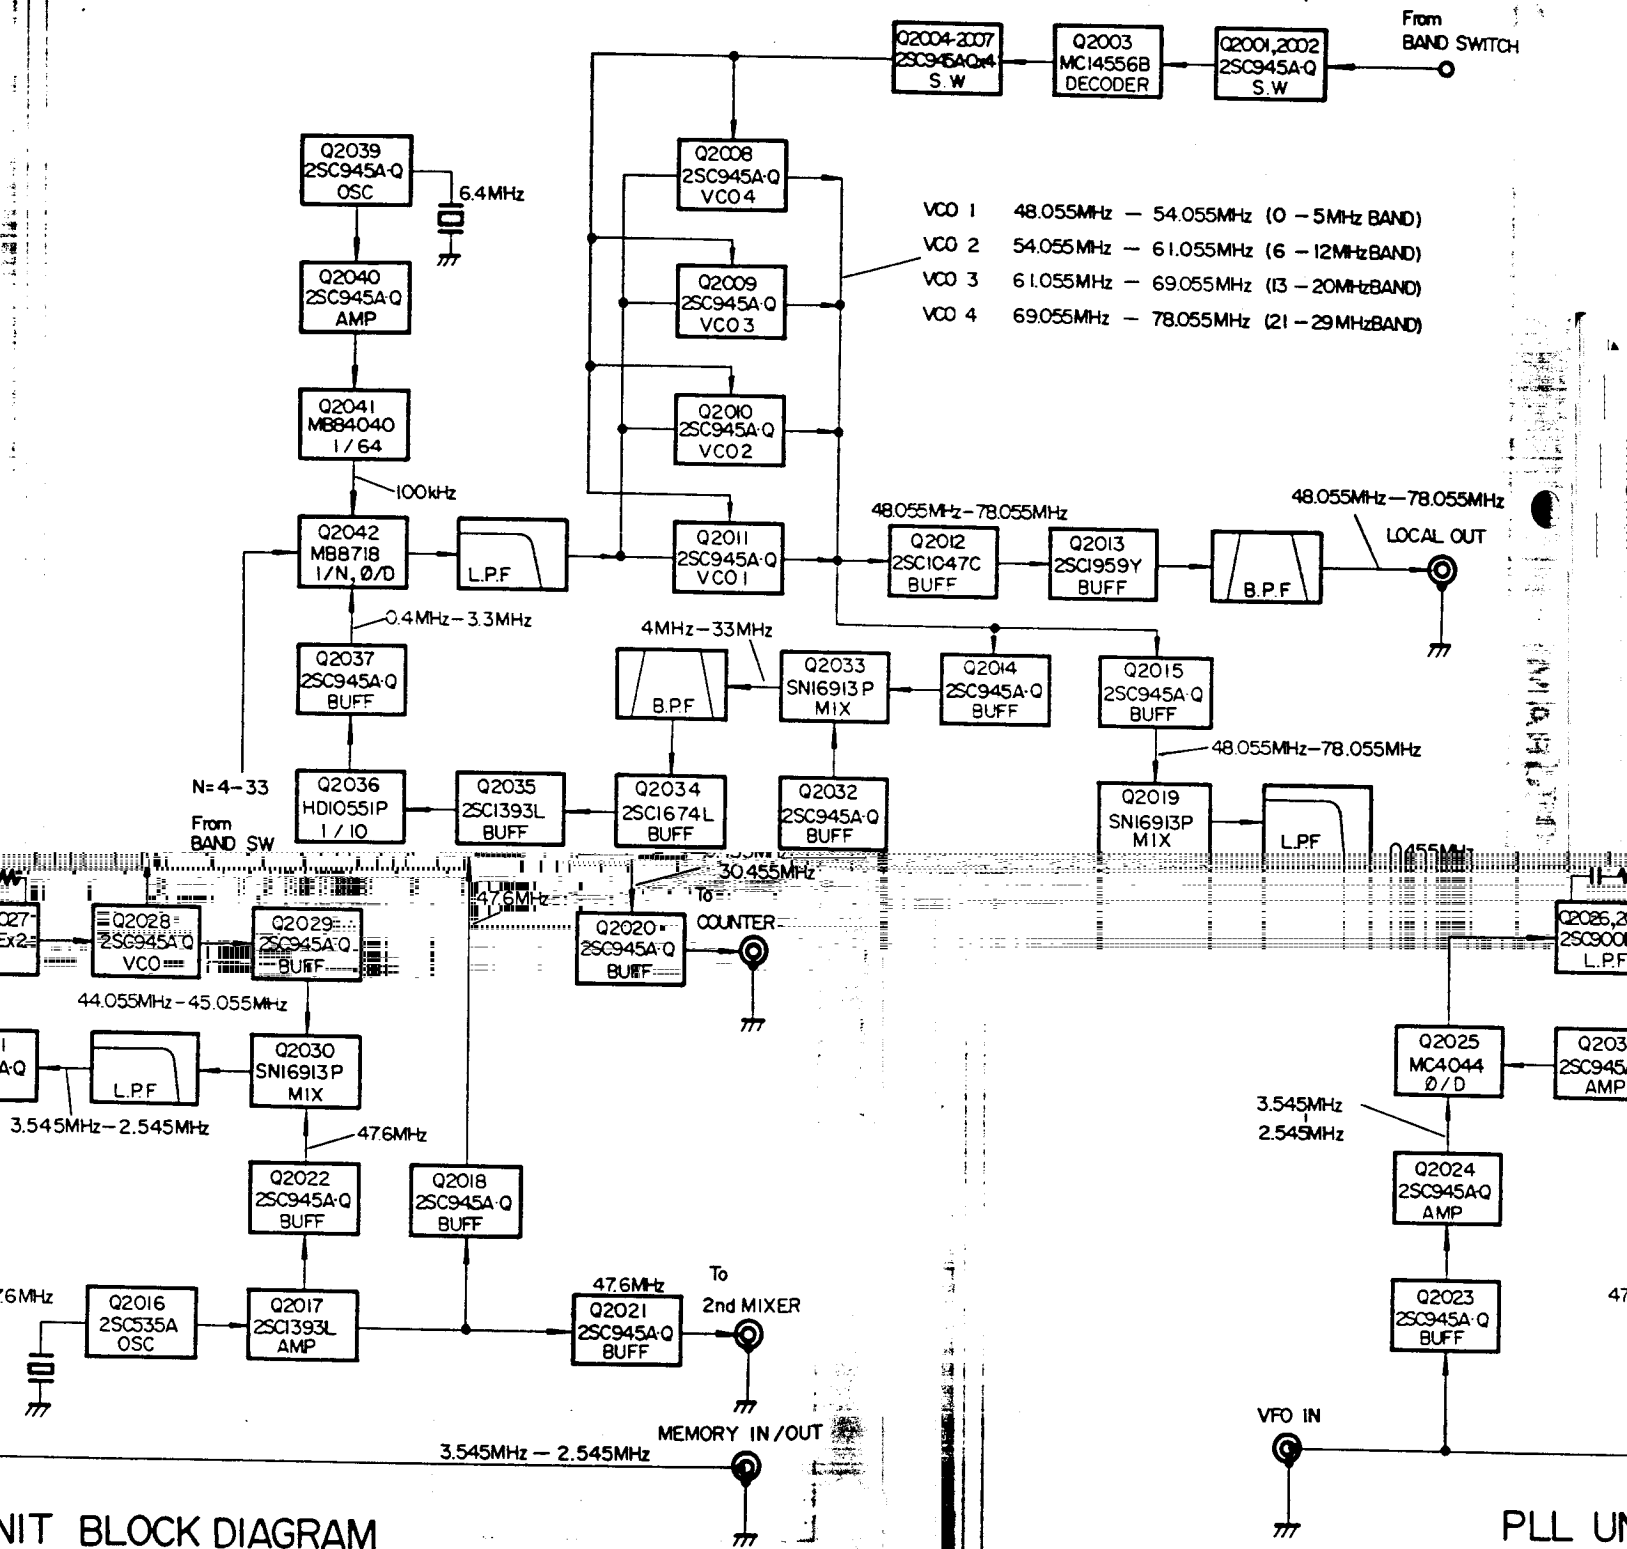

UNIT BLOCK DIAGRAM

PLL UN

CIRCUIT DESCRIPTION

Reference to the block diagram and the following circuit description will provide you with a better understanding of the design of this receiver. The FRG-7700 is a superheterodyne receiver using up-conversion to a first IF (Intermediate Frequency) of 48 MHz. Synthesized local oscillators are used for both the first and second mixers, providing a high degree of frequency stability.

RECEIVER SIGNAL FLOW

The RF (Radio Frequency) signal from the antenna is fed through the detunable RF attenuator to the MAIN Unit. The signal is passed through a low-pass filter ($f_c = 30$ MHz), consisting of L_{1001} , C_{1001} , C_{1002} , and then through bandpass filters for the following ranges: 50 kHz, 1 MHz, 2 MHz, 4 MHz, 8 MHz, 16 MHz, and 16-30 MHz. Selection of the filter to be used is provided by diode switches D_{1003} , D_{1004} (1SS53), which are

mode switch. The filtered IF signal is then delivered to the main IF amplifier chain, consisting of Q_{1024} , Q_{1025} (3SK73GR), and Q_{1026} (2SC945A-Q).

In the SSB and CW modes, the IF signal is coupled to the product detector, a diode ring demodulator consisting of D_{1030} , D_{1031} (1N60), which converts the IF signal into audio using the carrier signal delivered from Q_{1033} (2SC945A-Q). The audio signal is fed to the audio amplifier, Q_{1034} (μ PC575C2), which delivers 1.5 watts of audio power to the speaker.

In the AM mode, the IF signal is coupled from Q_{1026} via C_{125} to buffer amplifier Q_{1027} (2SC945A-Q). The signal is then detected at D_{1028} , D_{1029} (1N60), and the resulting audio signal is fed to the audio amplifier via buffer amplifier Q_{1030} (2SC945A-Q).

AGC CIRCUIT

A portion of the output from the AM detector is fed to DC amplifiers Q₁₀₂₈ and Q₁₀₂₉ (2SC945A-Q). This amplified DC voltage is applied to gate 2 of the RF and IF amplifiers, controlling the gain of those stages.

MUTE CIRCUIT

Q₁₀₃₅ is normally in the "ON" state, providing normal bias voltage to gate 1 of Q₁₀₁₄ and Q₁₀₁₇. When the MUTE terminal is shorted to ground, Q₁₀₃₅ turns off, removing the bias voltage from the

2.545 MHz signal which is fed to phase detector Q₂₀₂₅ (MC4044P). The phase detector compares the phase of the input signal with that of the VFO signal delivered via Q₂₀₂₄ (2SC945A-Q); any phase difference is converted to a DC control voltage, which is fed to varactor diodes in the VCO circuit, in order to correct the phase difference and lock the input signal with the VFO signal.

In PLL Loop 2, there are four VCO circuits which are selected by the bandswitch, with the net result being an output signal of 48.055 – 78.055 MHz. This signal is fed to mixer Q₂₀₃₃ (SN16913P), where the input signal is mixed with the 44.055 – 45.055 MHz signal delivered from PLL Loop 1,

CLOCK AND DIGITAL DISPLAY CIRCUIT

A Large Scale Integration (LSI) chip, Q₁₀₄₆ (MSM5524), controls both the display of the operating frequency and the time. An 0.455 – 30.455 MHz signal from the PLL Unit is amplified by Q₁₀₄₁, Q₁₀₄₂, and Q₁₀₄₃ (2SC1674L), then fed through divider (1/10) Q₁₀₄₄ (SN74LS196) to the LSI chip. The output from Q₁₀₄₆ is fed to the fluorescent display tube, (DS1001), through segment drivers Q₁₀₅₂–Q₁₀₅₈ (2SA733A-Q). Q₁₀₆₀ and Q₁₀₆₁ act as a DC-DC converter, providing –25 volts DC for the display tube.

Phase detector Q₂₀₄₂ compares the phase of the signal from the onboard programmable divider with that of the 100 kHz reference signal generated by Q₂₀₃₉, Q₂₀₄₀ (2SC945A-Q), and Q₂₀₄₁ (MB8718), producing an error-correcting DC voltage. The error-correcting DC voltage is fed to varactor diodes in VCO/4, thus locking a highly stable 48.055 – 78.055 MHz signal, which will be used as a local signal. The VCO output is fed through

Q₂₀₁₃ (2SC1047C) and Q₂₀₁₃ (2SC1959Y) prior to delivery to the first mixer.

The second local signal (47.6 MHz) is generated by Q₂₀₁₆, then amplified by Q₂₀₁₇ (2SC1393L) and fed through buffer Q₂₀₂₁ (2SC945A-Q) prior to delivery to the second mixer.

A portion of the first local signal is fed to mixer Q₂₀₁₉ (SN16913P), where the signal is mixed with the 47.6 MHz second local signal, producing a signal at 0.455 – 30.455 MHz which is fed to the LSI chip in the counter for display of the operating frequency.

The timer control output from the LSI inactivates relay RL₁₀₀₁, which controls the receiver main power supply ON/OFF function. RL₁₀₀₁ also is connected to the REMOTE terminals on the rear panel of the receiver, for control of peripheral station equipment.

PLL CIRCUIT

The first and second local signals (48.055 – 78.055 MHz and 47.6 MHz, respectively) are generated by the dual-loop PLL (Phase Locked Loop) circuit.

A 44.055 – 45.055 MHz signal is generated by VCO (Voltage Controlled Oscillator) Q₂₀₂₈ (2SC945A-Q) in PLL Loop 1. This signal feeds mixer Q₂₀₃₀ (SN16913P), where the VCO signal is mixed with a 47.6 MHz signal generated by crystal oscillator Q₂₀₁₆ (2SC535A), producing a 3.545 –



CRYSTAL DATA



TECHNICAL NOTES

FUNCTION		HOLDER	RANGE (MHz)	MODE	LOAD C	EFFECTIVE RESISTANCE	DRIVE LEVEL
MAIN UNIT	X1001	HC-18/U	3.2768	Fundamental	30nF	150Ω	3mW
01	HC-18/U.1	47.6	3rd Overtone	20pF	25Ω	2mW	
02	HC-18/U	6.4	Fundamental	30pF	30Ω	3mW	
01	HC-18/U3P	16.434	Fundamental	30pF	15Ω	3mW	


PLL UNIT	X20
PLL UNIT	X20
MEMORY UNIT	X60

FRT-7700

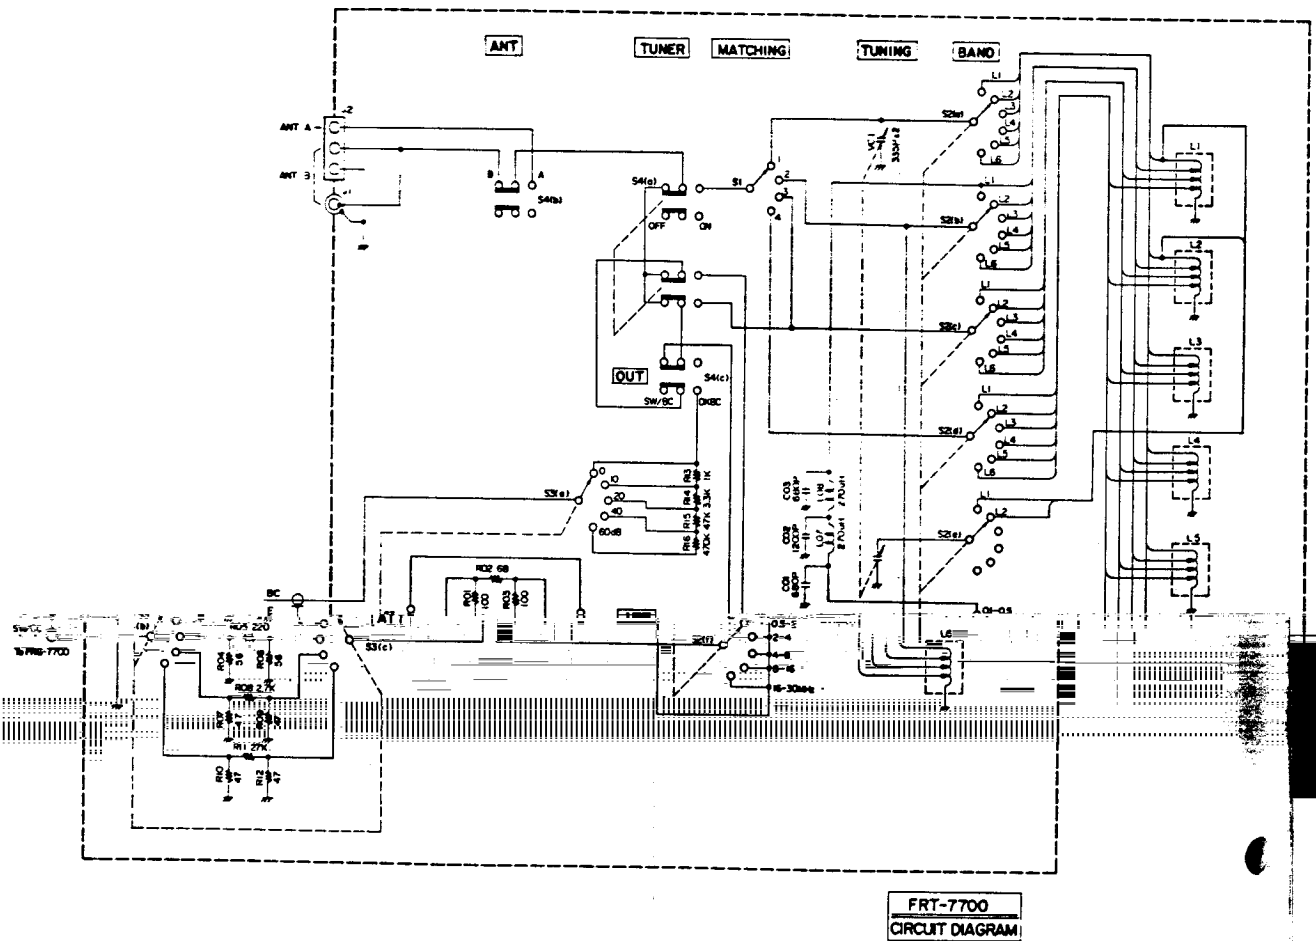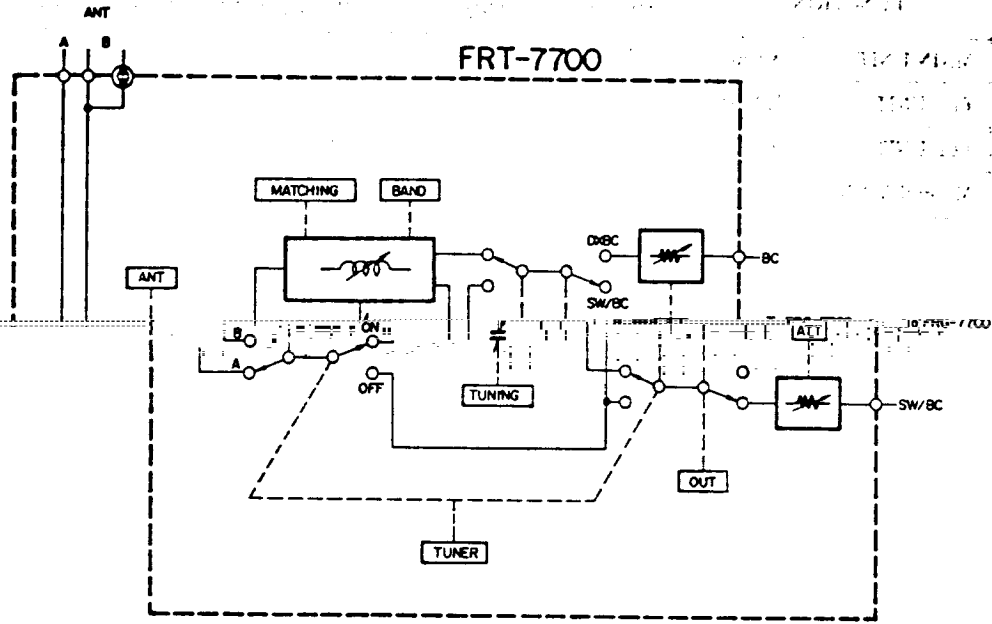

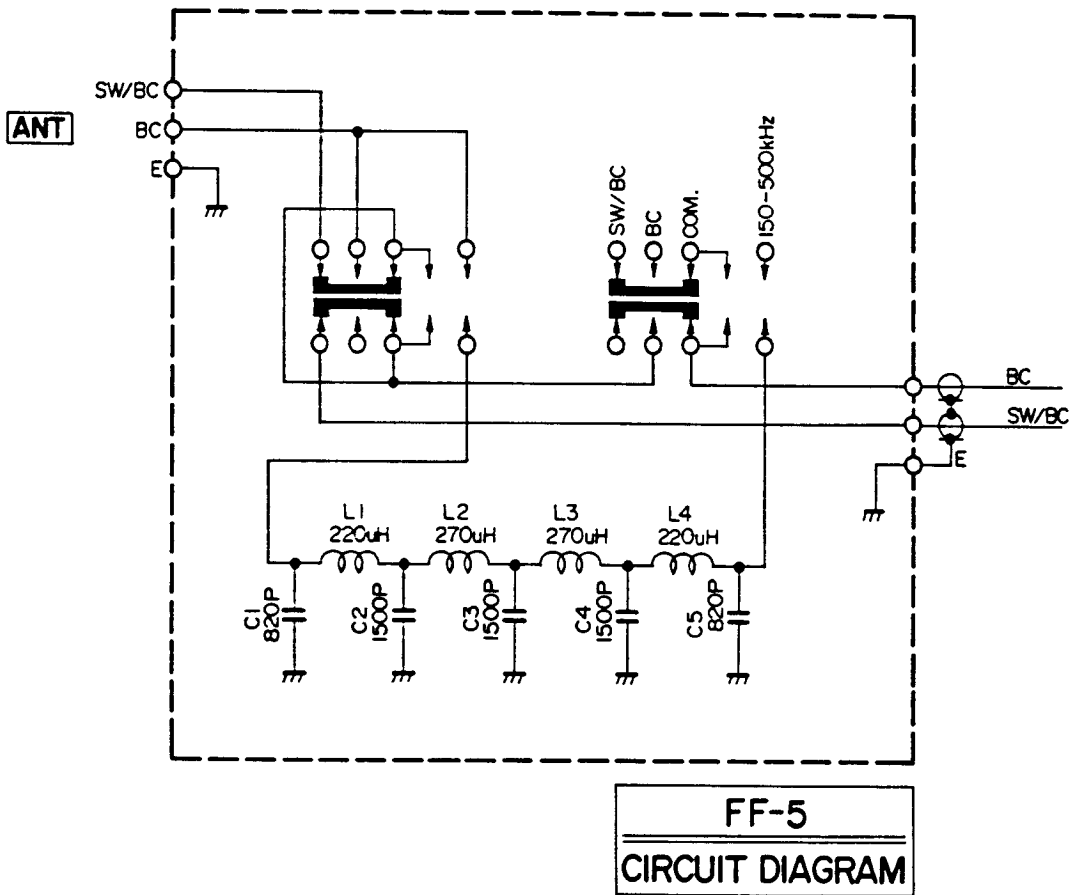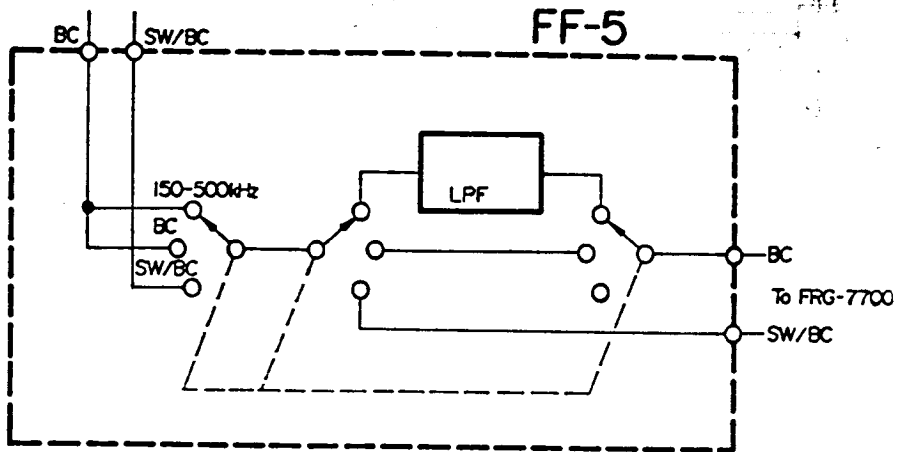

FRV-7700(A.C)

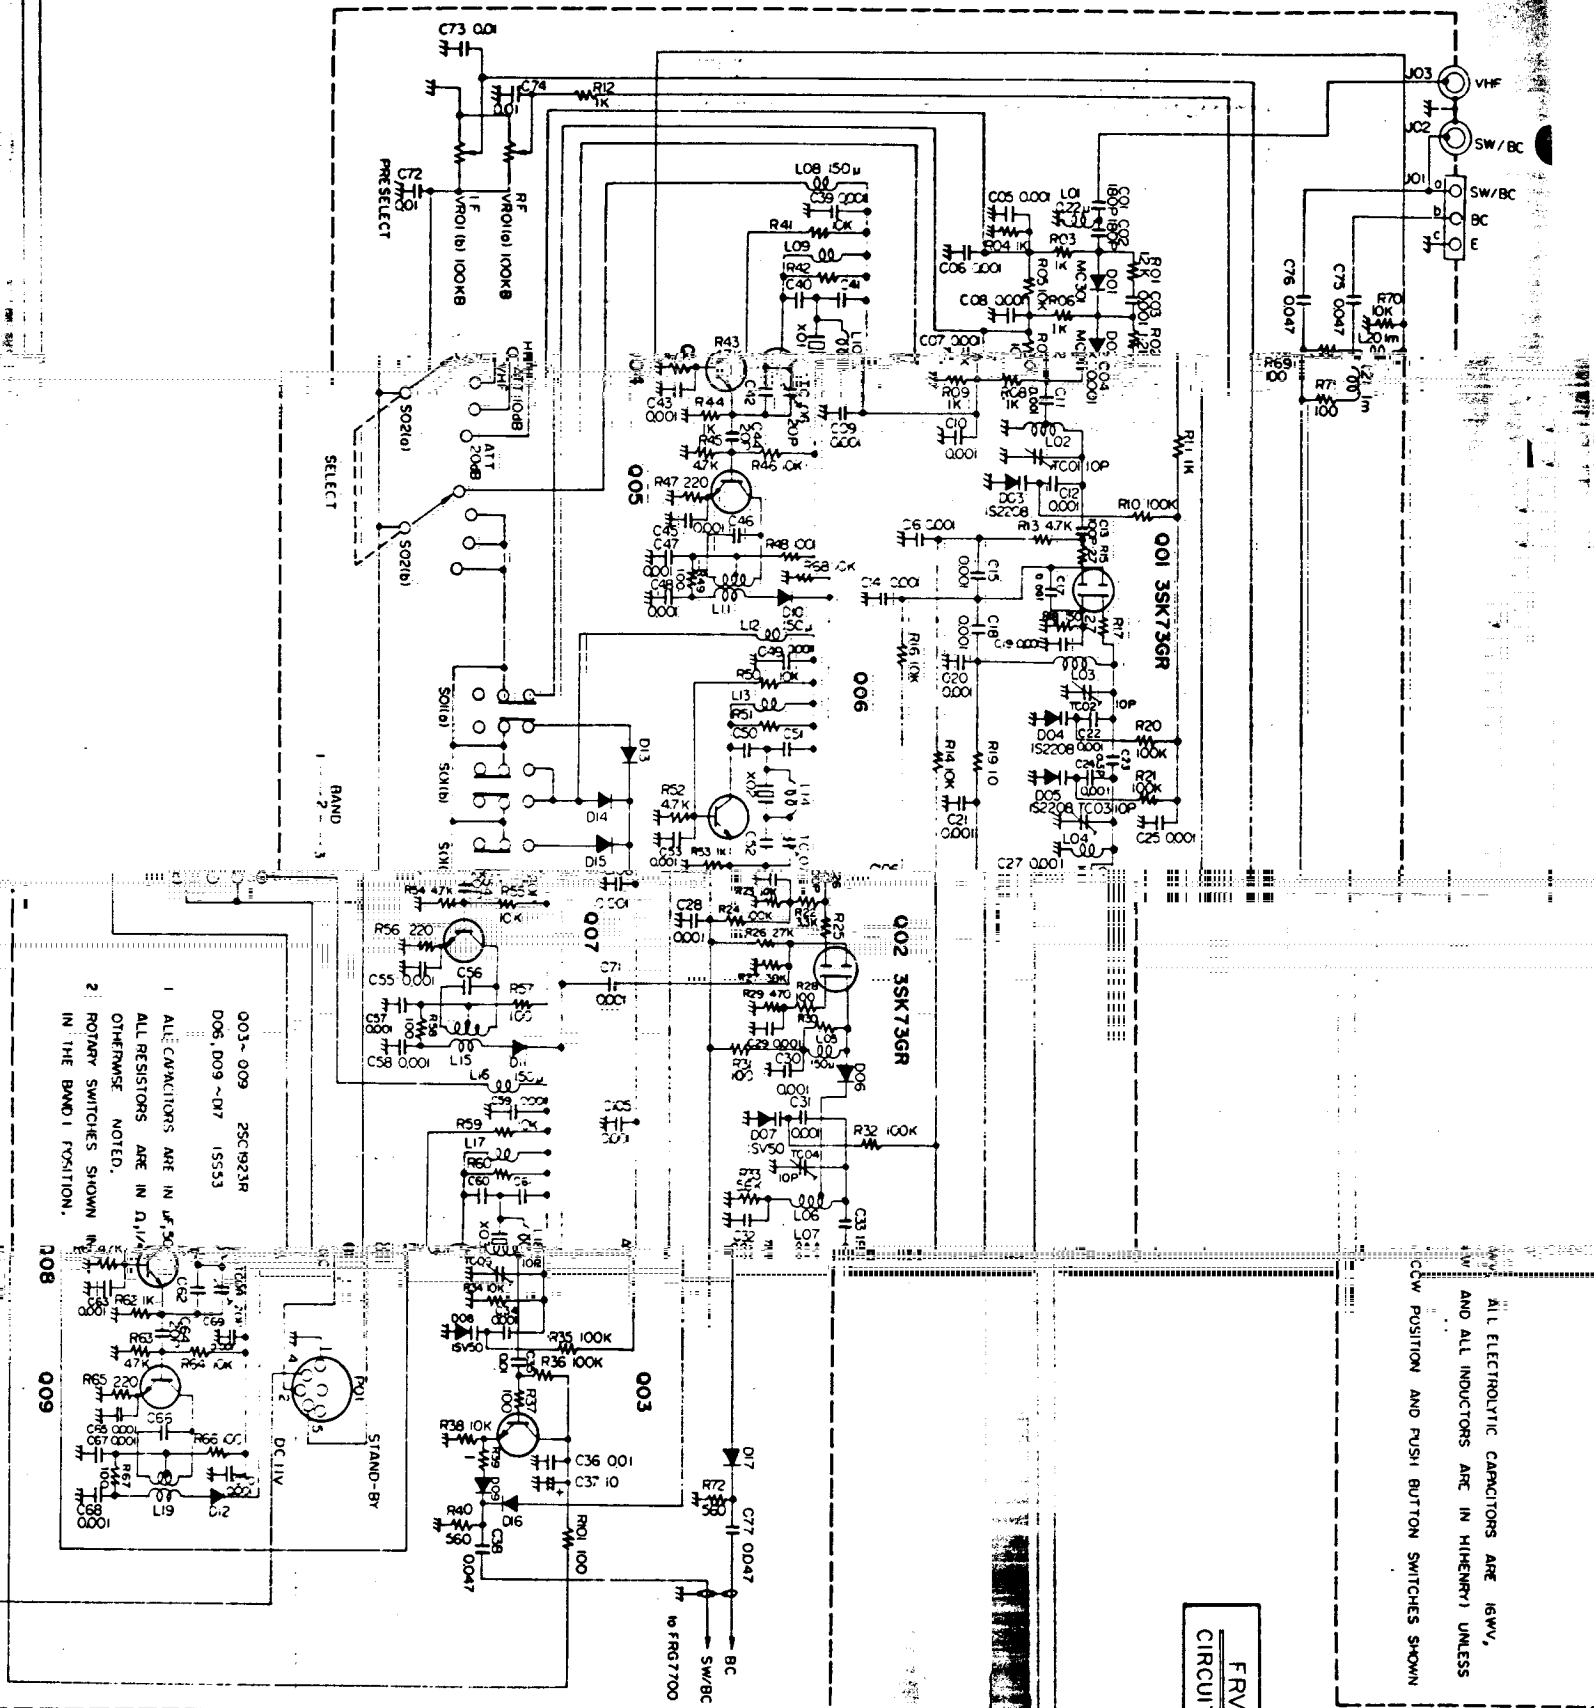

FRV-7700
CIRCUIT DIAGRAM


ALL ELECTROLYTIC CAPACITORS ARE 100V,
AND ALL INDUCTORS ARE IN HIRENRY UNLESS
SPECIFIED OTHERWISE.

- 003-009 25C1923R
- 006, 009 ~07 15553
- 1 ALL CAPACITORS ARE IN UF UNLESS OTHERWISE NOTED.
- 2 ROTARY SWITCHES SHOWN IN THE BAND 1 POSITION.

TYPE	A	VALUE
X 01	100KHZ	100K
X 02	100KHZ	100K
X 03	120KHZ	14K
R 25	27	100K
R 30	68K	100K
R 42	1K	100K
R 51	1K	100K
R 60	1K	100K
C 40	36P	100K
C 41	36P	100K
C 42	20P	100K
C 46	24P	100K
C 50	27P	100K
C 51	27P	100K
C 52	20P	100K
C 56	24P	100K
C 50	24P	100K

TYPE	VALUE
C 61	24P
C 62	20P
C 66	16P
L 10	0.33u
L 14	0.33u
L 18	0.33u

FRV-7700(B.D)

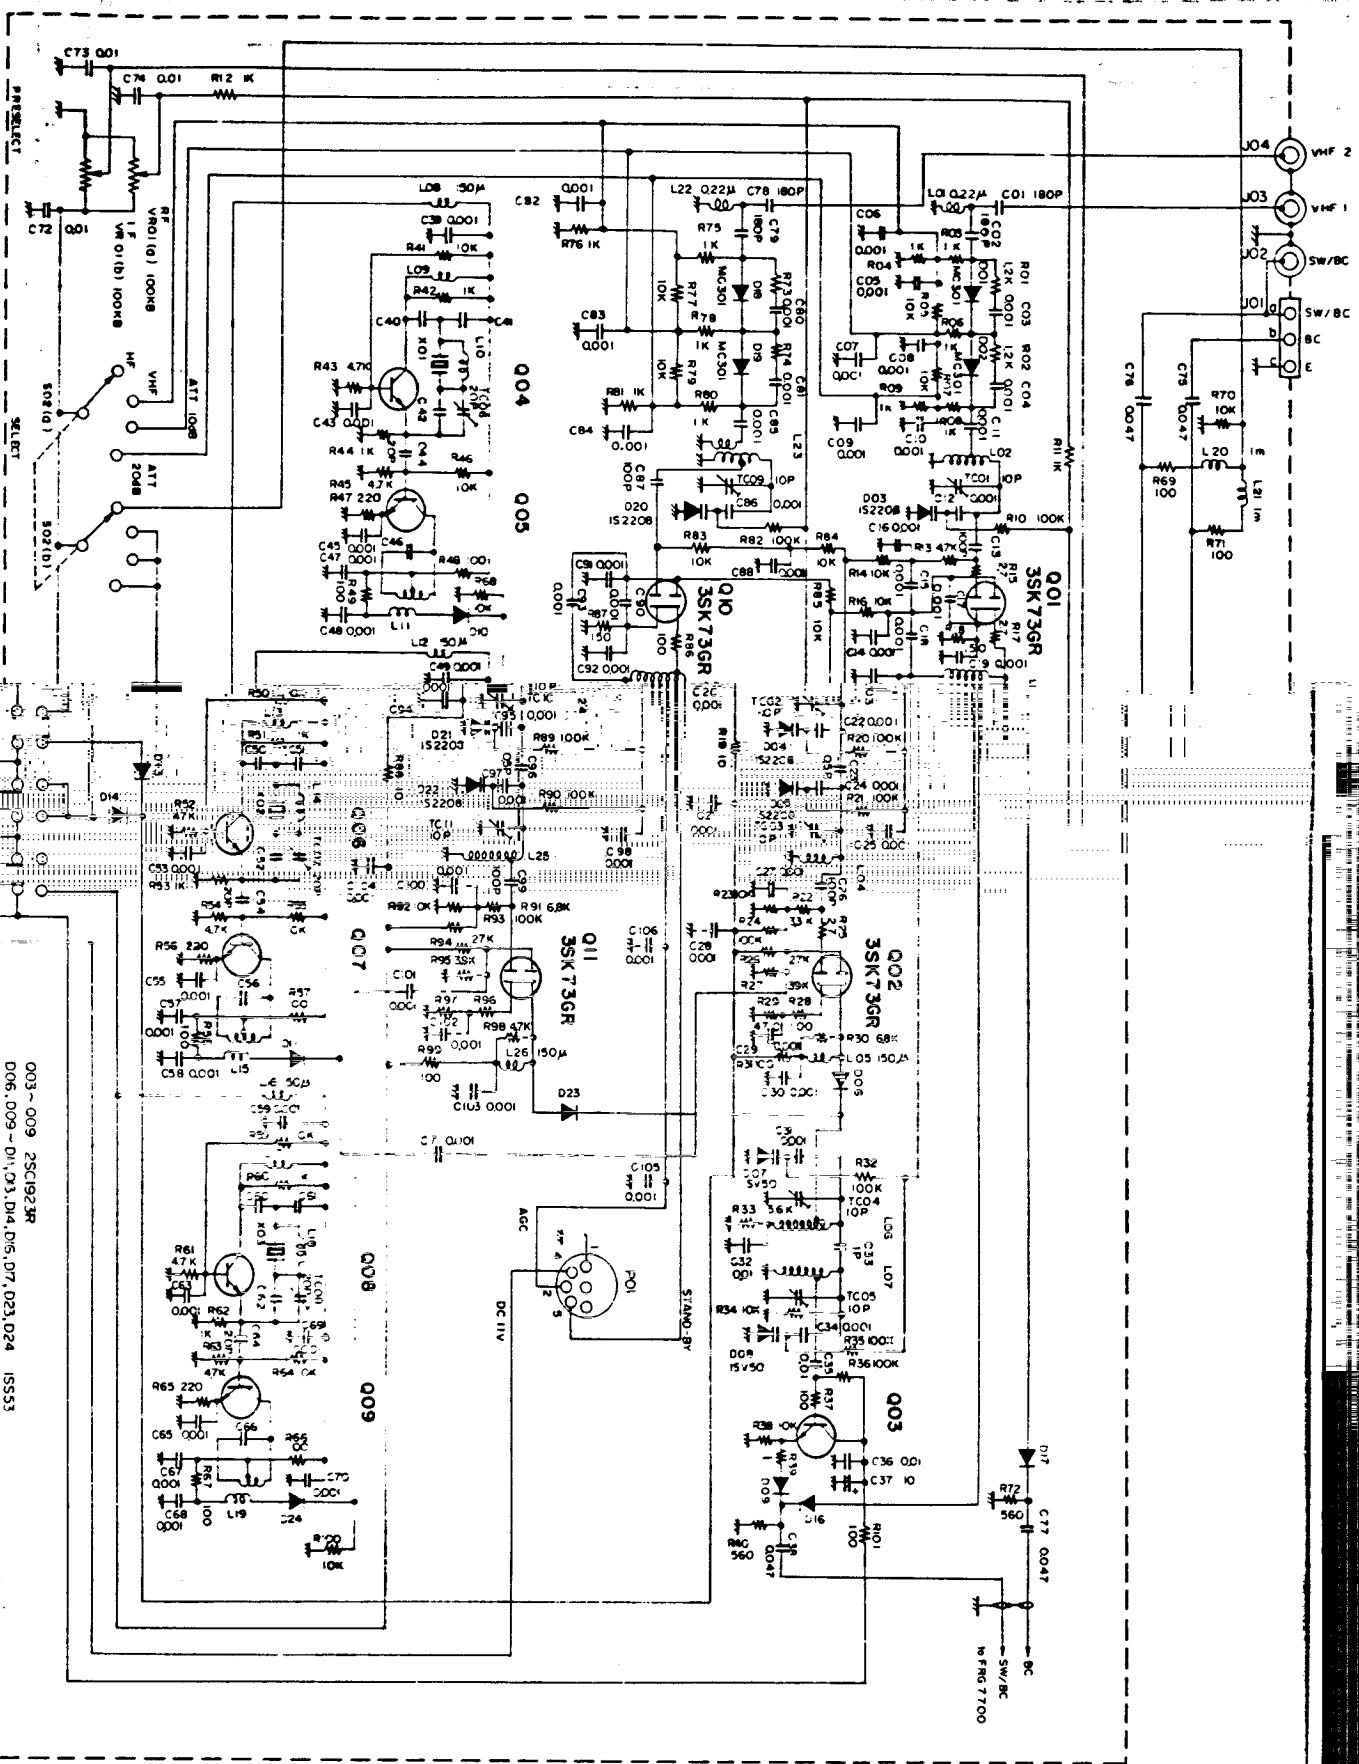

2 ROTARY SWITCHES SHOWN IN CCW POSITION AND PUSH BUTTON SWITCHES SHOWN IN THE BAND POSITION.

003-009 25C1923R
 006,009-D1,03,D4,D5,D7,D23,D24 1S553


ALL CAPACITORS ARE IN μ F, 50V, ALL ELECTROLYTIC CAPACITORS ARE 10WV,
 ALL RESISTORS ARE IN Ω , μ , W AND ALL INDUCTORS ARE IN (HENRY) UNLESS

TYPE	VALUE	UNIT	VALUE	UNIT
T	100	OHM-Z	100	OHM-Z
2	120	MHZ	120	MHZ
3	30	MHZ	50	MHZ
4	220		330	
5	220		1K	
6	390		220	
7	180		330	
CAPACITOR				
8	36P		36P	
9	36P		36P	
10	20P		20P	
11	24P		24P	
12	24P		24P	
13	24P		24P	
14	20P		20P	
15	15P		15P	
16	15P		15P	
17	75P		15P	
18	20P		20P	
19	36P		12P	
INDUCTOR				
20	0.33 μ		0.33 μ	
21	0.33 μ		0.33 μ	
22	4.7 μ		1.8 μ	

FRV-7700
 CIRCUIT DIAGRAM

FRA-7700

DO NOT TAKE OUT FROM POWER SUPPLY CIRCUIT

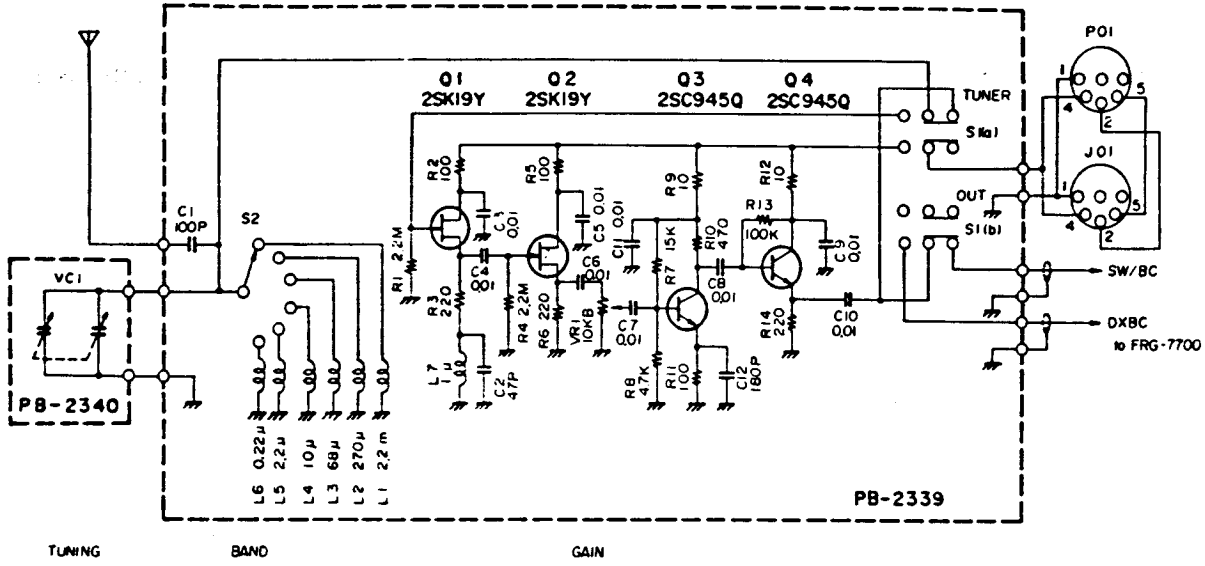

1. ALL CAPACITORS ARE IN μ F 50WV, ALL RESISTORS ARE IN Ω /K/M, ALL INDUCTORS ARE IN MHENRY), UNLESS OTHERWISE NOTED.
2. ROTARY SWITCH IS SHOWN IN CCW POSITION AND PUSH BUTTON SWITCHES ARE SHOWN IN THE RELEASED POSITION.

FRA - 7700
CIRCUIT DIAGRAM

MODIFICATIONS

DC POWER SUPPLY OPERATION (DC KIT INSTALLATION)

A. Required Parts (included w/kit)

1 pc.	C5300842	DC Jack Assembly
1 pc.	P1090139	DC Plug
2 pcs.	U00107007	Screws
2 pcs.	U60001001	Nut
2 pcs.	U71050001	Spring Washer

B. Modification Procedure

1. Remove the handle mounted on the right side of the cabinet.
2. Remove the six screws retaining the bottom cover and carefully set the panel to one side.
3. Disconnect the battery clip connected to the backup battery case.
4. Remove all the plastic pins that are fastened to the rear panel terminal board, as shown in Figure 2-1.
5. Grasp the terminal board and remove the small plastic cover to expose the DC Jack cutout, as shown in Figure 2-2.

6. Install the DC Jack assembly as shown in Figure 2-3.
7. Re-install the terminal board with the four plastic pins.
8. Insert plug P₄₀ into Jack J₂ as shown in Figure 2-4.
9. Reconnect the battery clip to the backup battery case, and replace the bottom cover, re-installing the six screws removed in Step 2.
10. The DC power cord may now be wired as shown in Figure 2-5. A supply capable of providing 13.5 volts DC at 1.2 amp (min.) is required.

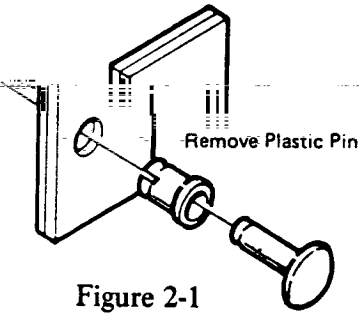


Figure 2-1

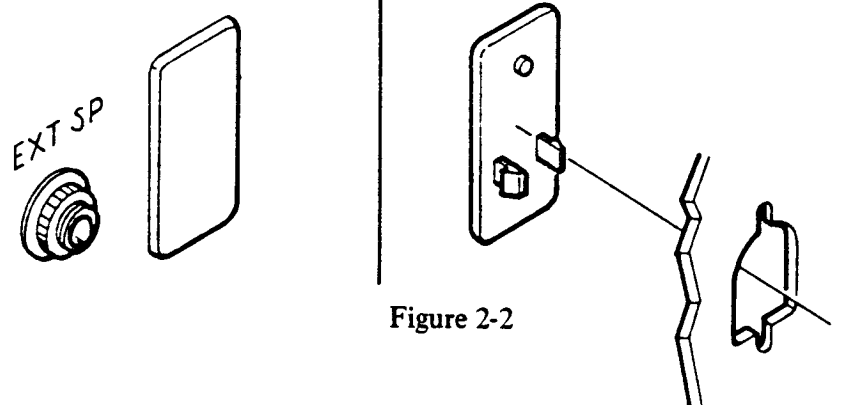


Figure 2-2

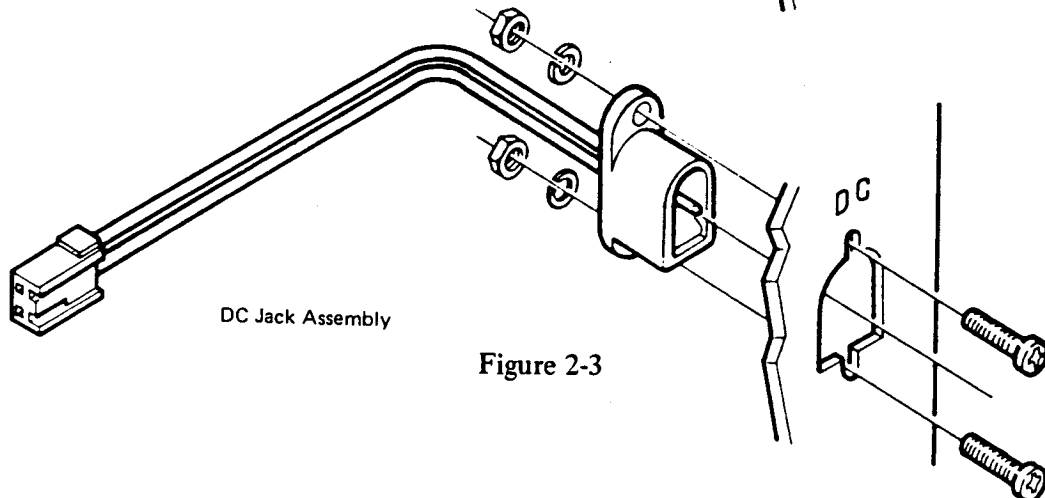


Figure 2-3

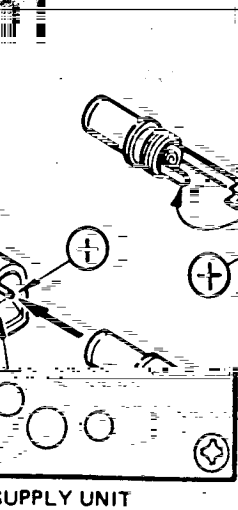


Figure 2-4

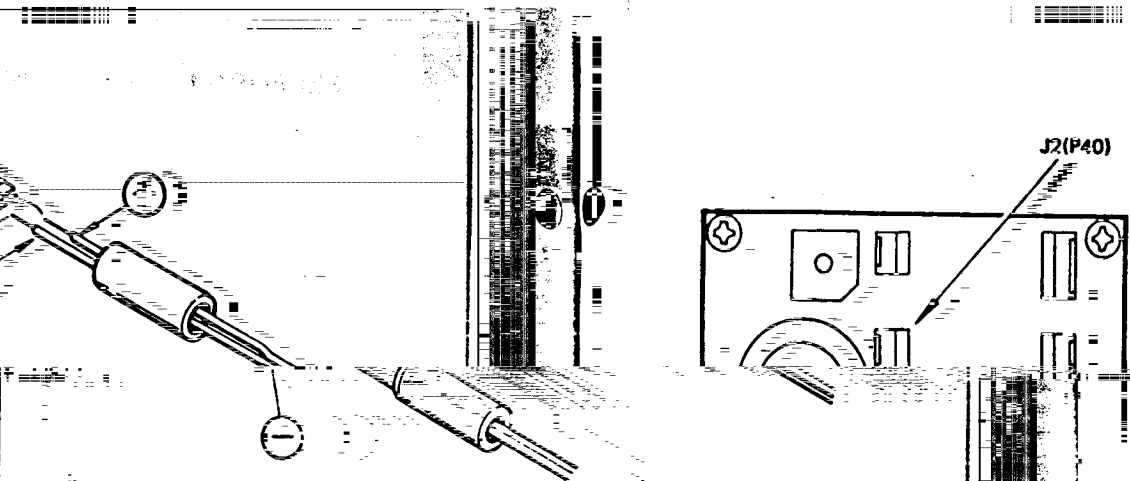


Figure 2-5



Figure 2-6

MEMORY FREQUENCY 1kHz ERROR

This modification will correct the 1 kHz error recalled from the memory function. It will also eliminate the audible beat frequency occurring during memory operation.

Modification Procedure

1. Cut the upper pattern on PB-2175, as shown in Figure 2-6.
2. Install and solder the two 1N60 diodes and the 3.3 Kohm resistor as shown in Figure 2-6.

- 1N60 germanium diode 2 pcs.
- 3.3 Kohm resistor 1 pce.

MEMORY FREQUENCY ERROR

The following modification will correct the 1 kHz error recalled from the memory function. It will also eliminate the audible beat frequency occurring during memory operation.

Parts Needed

- 1N60 germanium diode 2 pcs.
- 1/4 watt 3.3Kohm resistor 1 pce.

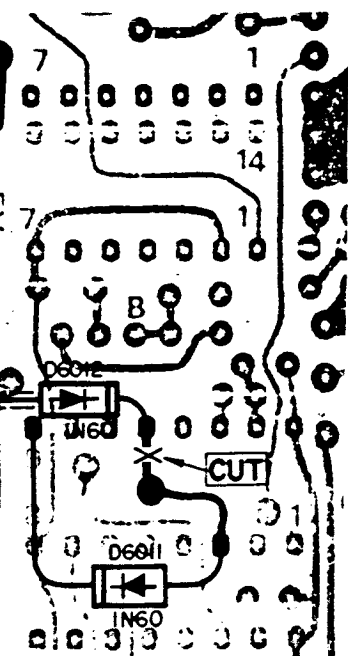


Figure 2-6

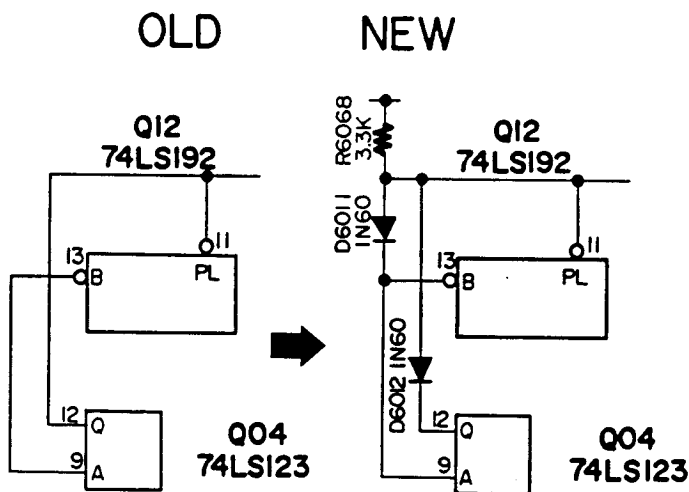


Figure 2-7

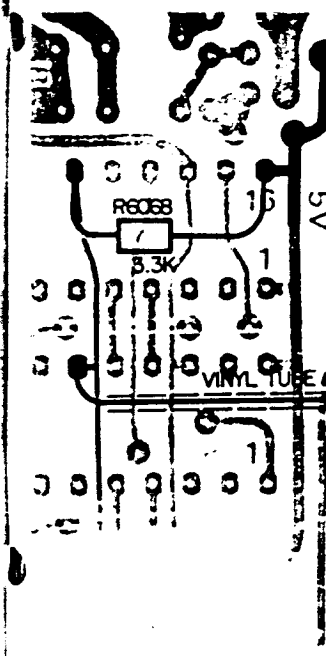


Figure 2-6

PERFORMANCE IMPROVEMENT FOR EARLY MODEL

This modification will provide additional power switch protection against rush current that occurs when the power switch is turned on. Please be advised that the IC MC 14504 (lot number "7944", Fig. 2-8) has been reported by the supplier as defective, and must be replaced.

MODIFICATION PROCEDURE

- 1) Remove the carrying handle on the left side of the receiver, then the top cover, and finally the bottom cover.
- 2) Remove all connectors on the PLL unit.
- 3) Remove the band switch knob and unscrew the nut securing the band switch, from the outside of the receiver.
- 4) Remove the eight screws on the PLL unit, and take the PLL unit out of its chassis.
- 5) Cut all the pins of Q₂₀₃₈ from the component side, and unsolder the pins, as shown in Fig. 2-9.
- 6) Install the new MC 14504 in the correct position, and solder its pins.
- 7) Replace the PLL unit in its chassis with the eight screws previously removed. Secure the band switch and the band switch knob into place.
- 8) Reconnect all connectors removed from the PLL unit in step 2.

- 9) Disconnect P₀₁, P₀₅, P₁₃ and P₁₅ on the main unit from their jacks, and remove the eight screws from the main unit.
- 10) Tilt the main unit toward the front panel, in order to expose the solder side of the board.
- 11) Unsolder the cathode of D₁₀₃₄ from the pattern, and pull the lead from the component side, as shown in Fig. 2-10.
- 12) Insert through the hole and solder one lead of a 1/2 W, 6.8 (or 5.6) ohm resistor to the point where the cathode of D₁₀₃₄ was removed.
- 13) Solder the other lead of the resistor to the cathode lead of D₁₀₃₄ on the component side, as shown in Fig. 2-11.
- 14) Replace all connectors previously removed from the main unit.
- 15) Secure the main unit back on to the chassis with the eight screws.
- 16) Close the receiver by replacing the top cover, bottom cover, and then the carrying handle.

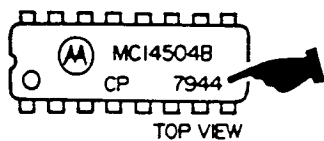


Figure 2-8



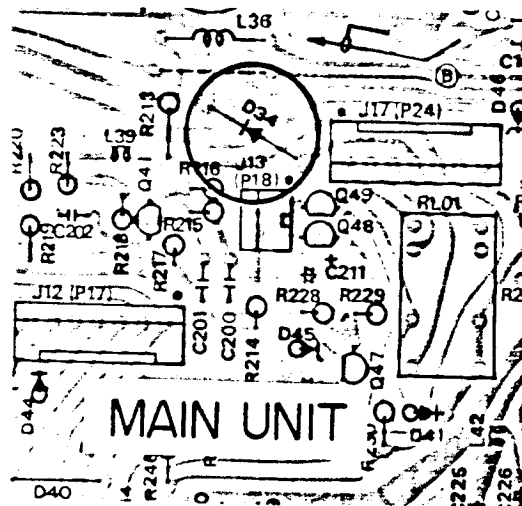


Figure 2-10

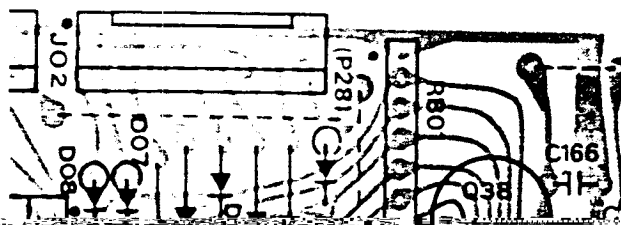

SECTION 3—SERVICING


FRONT PANEL REMOVAL	3-1
REAR PANEL REMOVAL	3-2
OUTER COVER REMOVAL	3-2
PARTS LAYOUT AND CIRCUIT DIAGRAM	
MAIN UNIT (PB-2169)	3-3
PLL UNIT (PB-2170)	3-7
VFO UNIT (PB-2172).....	3-10
FM UNIT (PB-2176)	3-12
POWER SUPPLY UNIT (PB-2171)	3-14
SWITCH UNIT (PB-2173).....	3-16
MEMORY UNIT (PB-2175)	3-18
MEMORY UNIT CHECK POINTS	3-21
MEMORY UNIT WAVE FORM CHART	3-22
MEMORY UNIT TIMING CHART	3-24
PLL VCO SELECTION	3-25
PLL DIVIDING RATIO	3-26
MAIN UNIT BPF SELECTION	3-27
BAND SWITCH CONTACT POSITION.....	3-28
SOLDERING AND DESOLDERING TECHNIQUE	3-29
MAINTENANCE AND ALIGNMENT	3-31
TROUBLESHOOTING	3-34

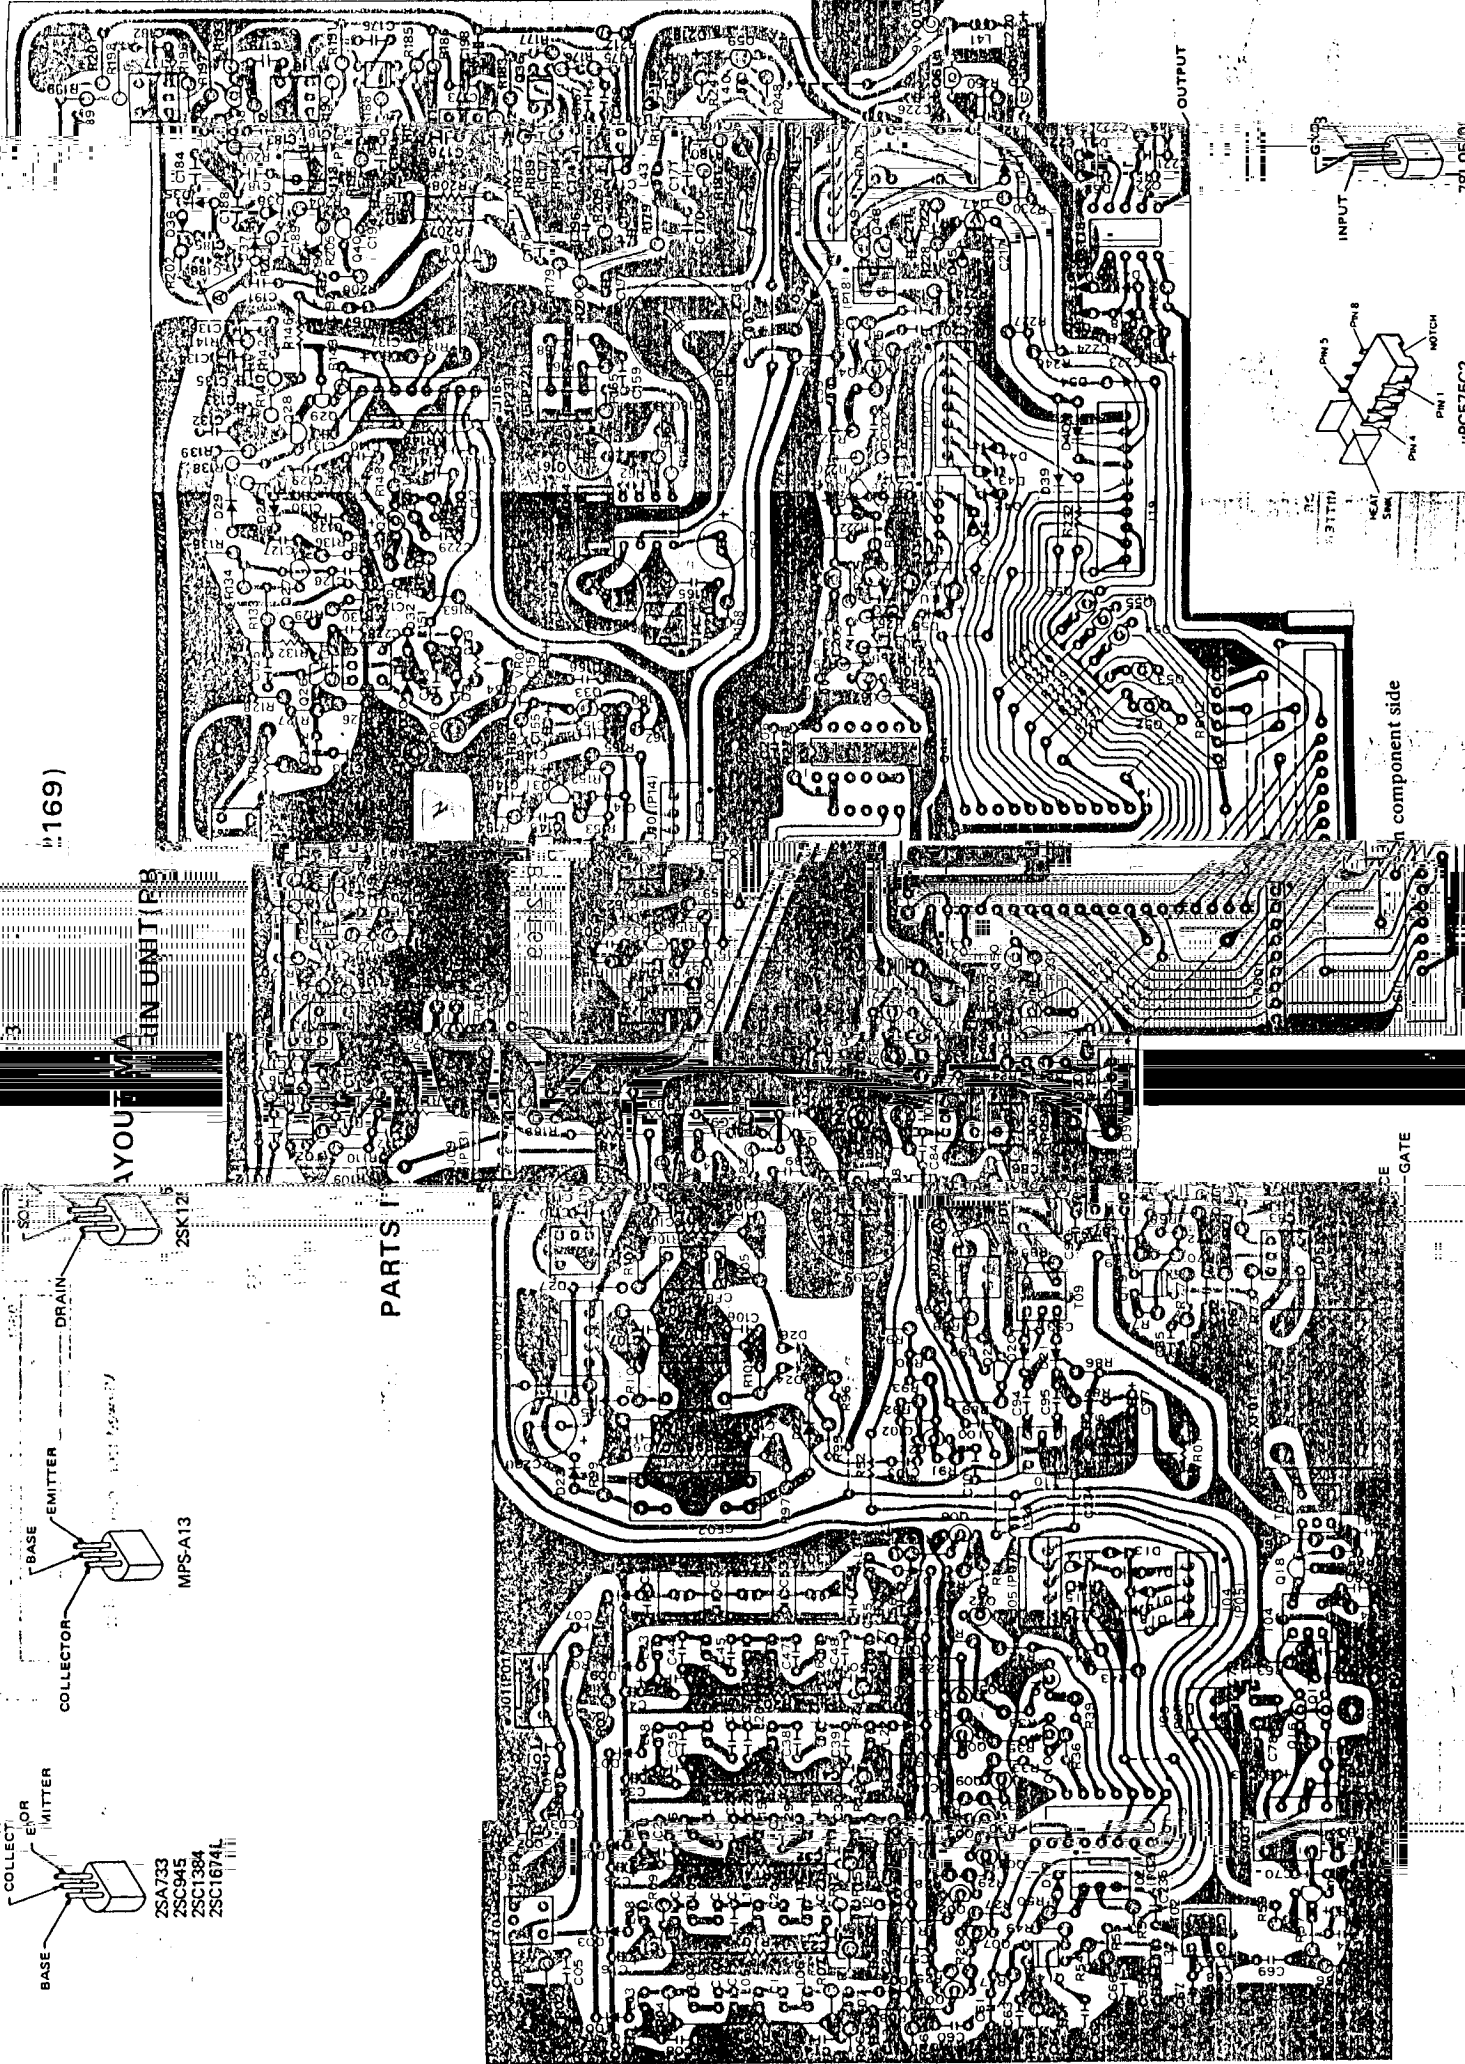

#169)


YOU MAIN UNIT (P)

PARTS I

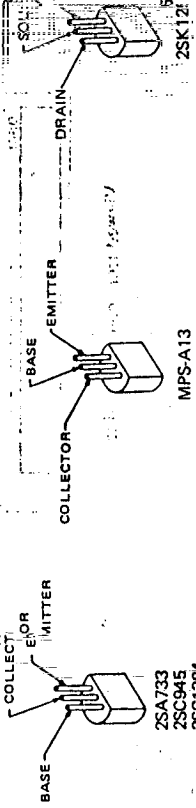

MPS-A13


- 2SA733
- 2SC945
- 2SC1384
- 2SC1674L

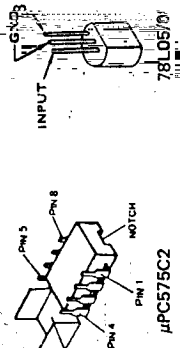

component side




E GATE

Viewed fr

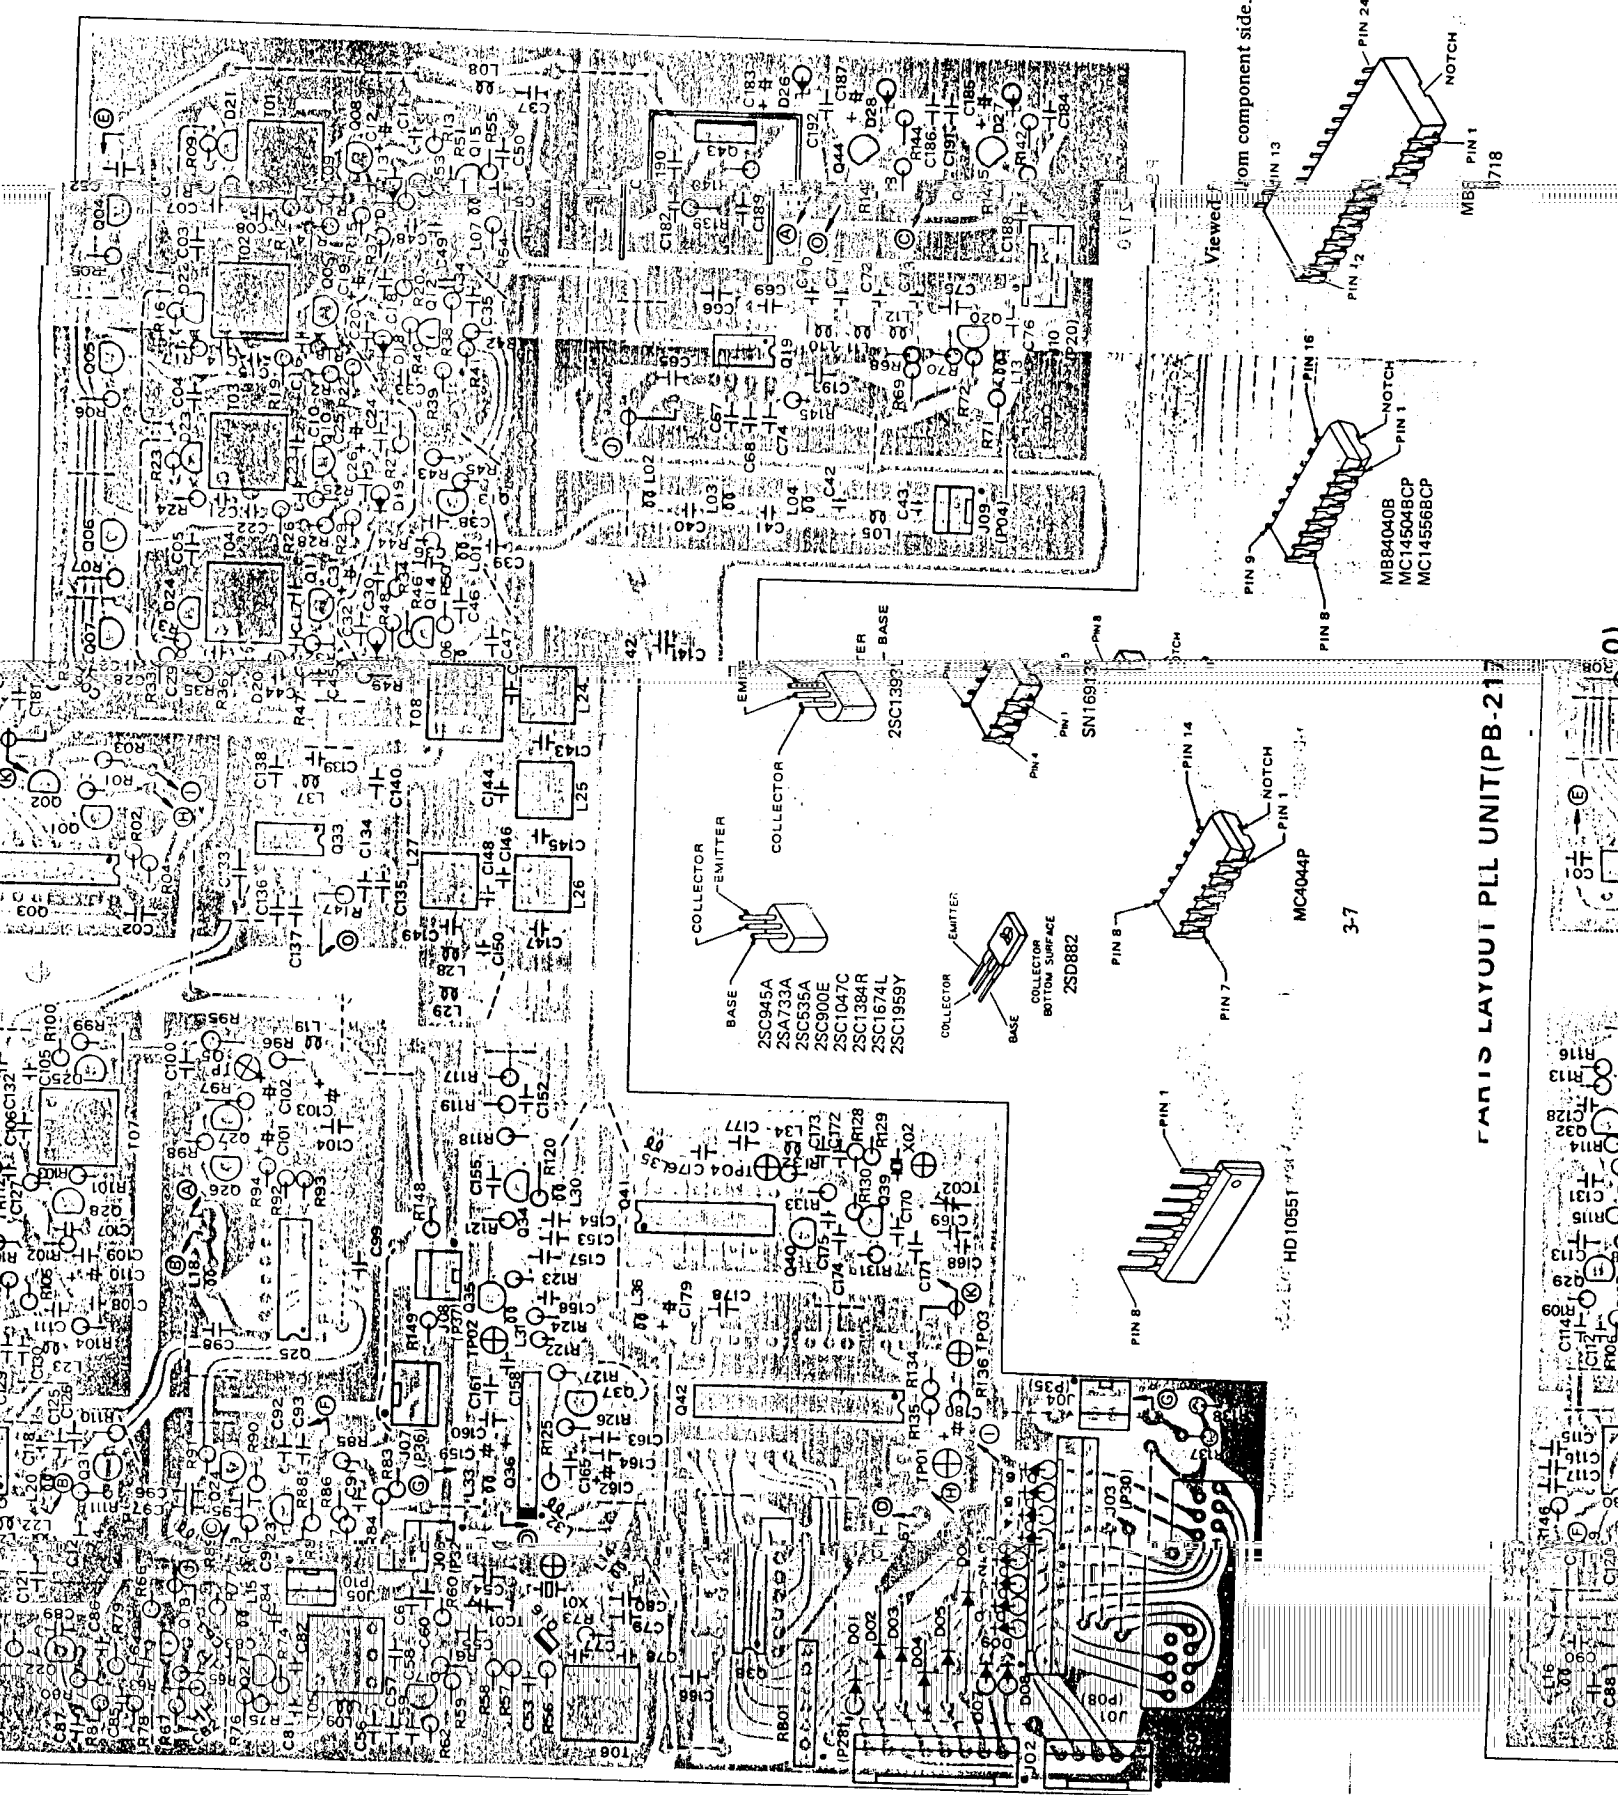


VIEWED FROM COMPONENT SIDE

VIEWED FROM COMPONENT SIDE

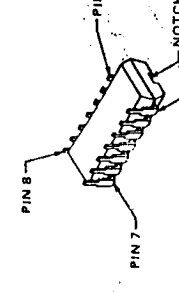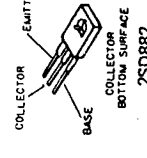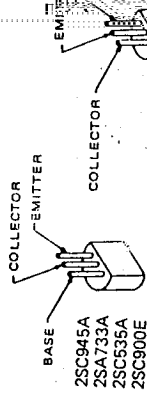


MC4044P

3-7

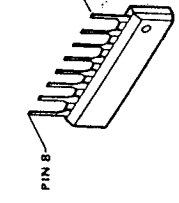


HD1055T


PARIS LAYOUT PLL UNIT(PB-21)

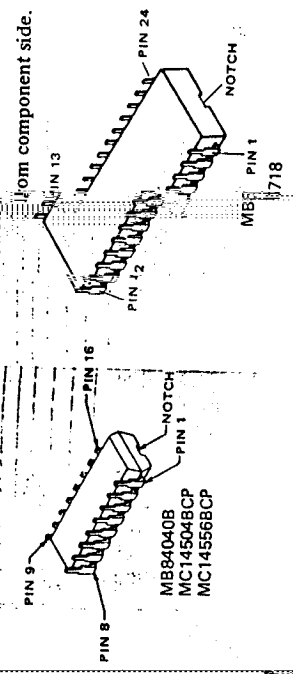


MB8400B
MC145048CP
MC145568CP



BOARD LAYOUT

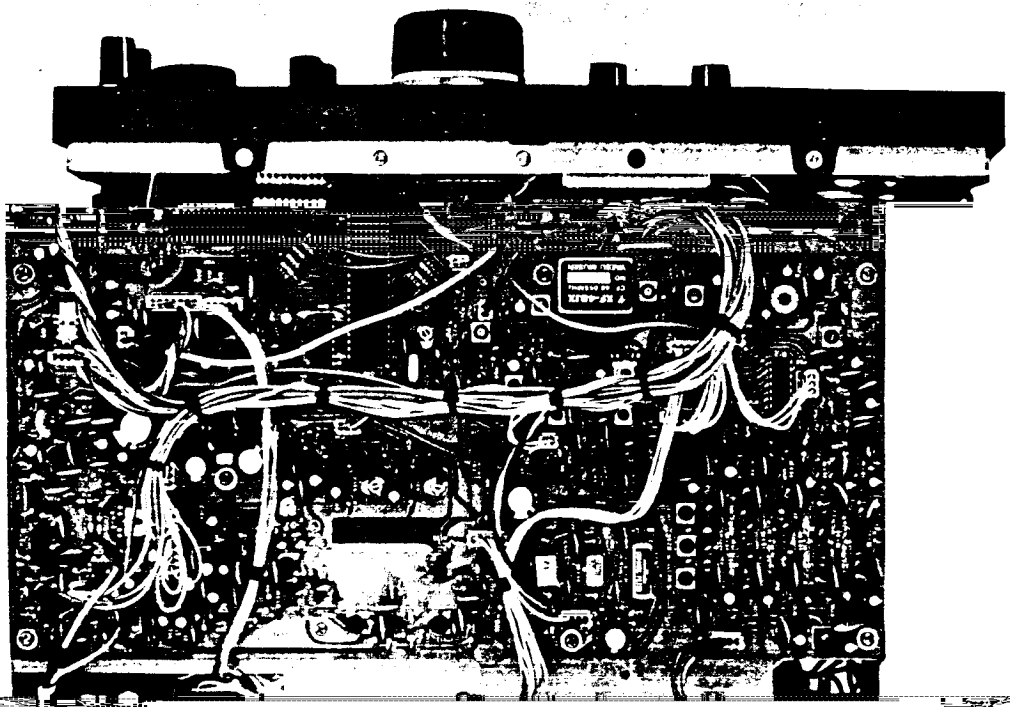


Top View

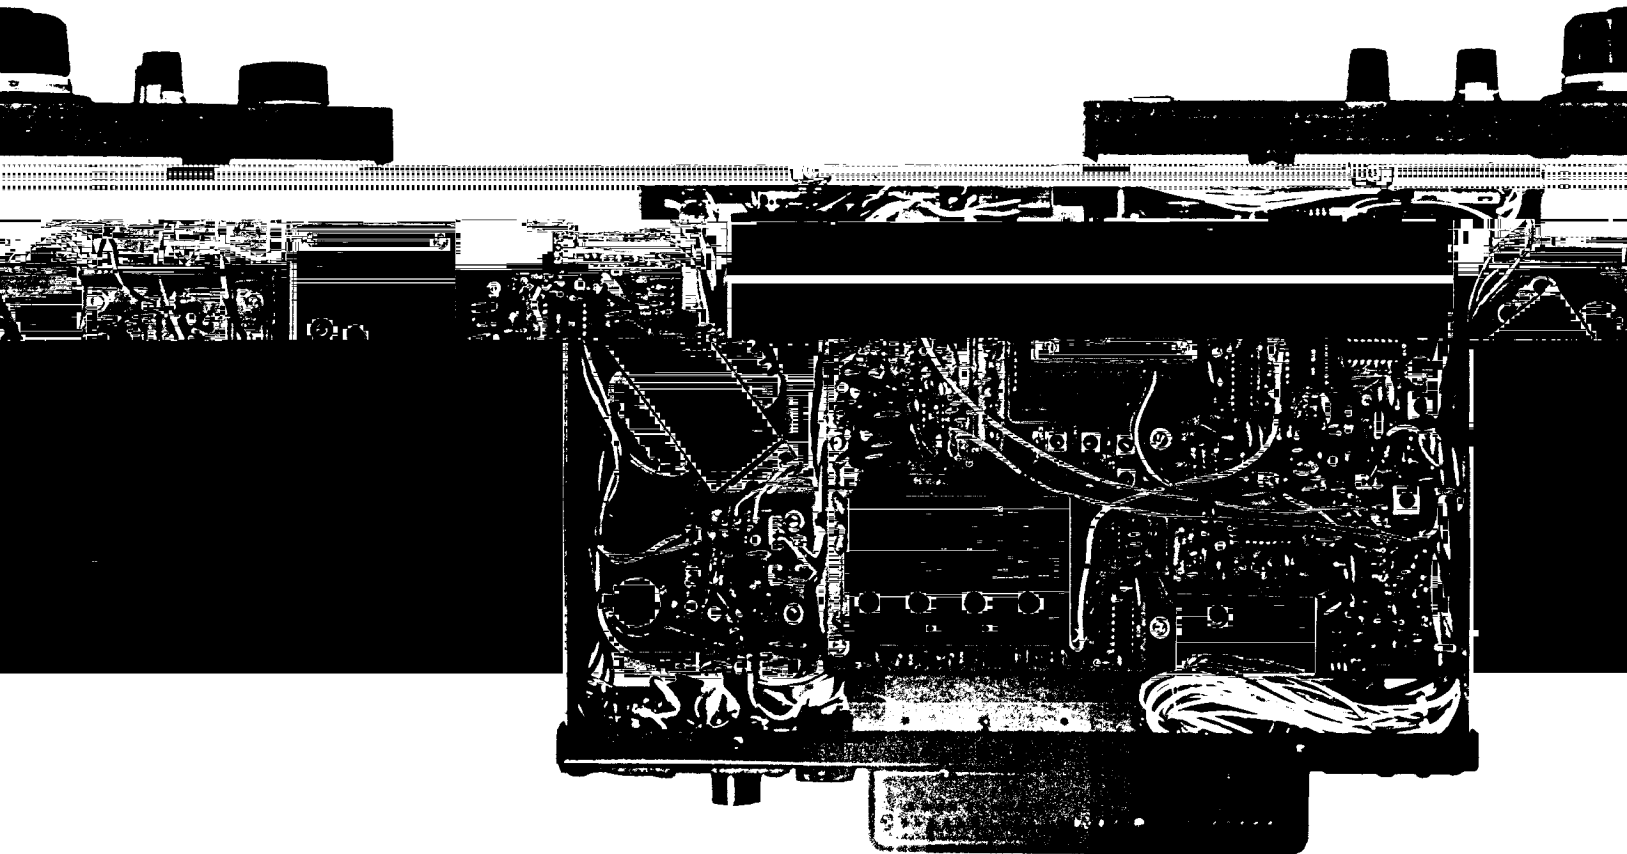


Bottom View

VEO UNIT PARTS LAYOUT

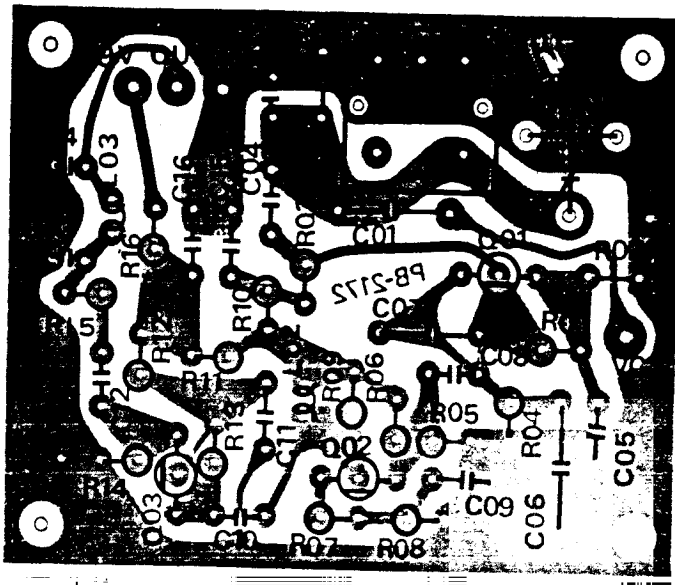


Component side



Viewed from component side

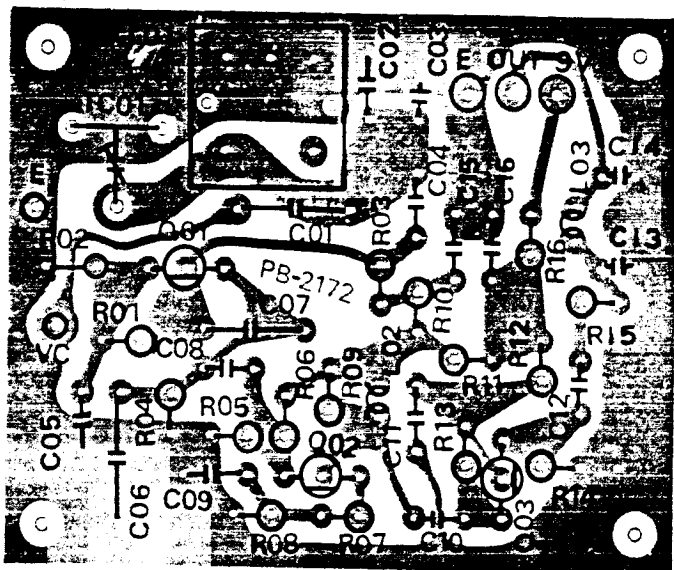


Viewed from solder side

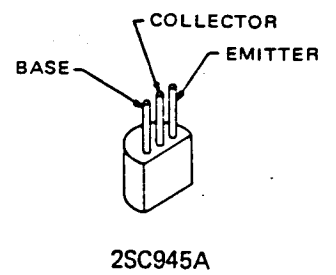


PB-2172 (NO. 3...) VFO UNIT

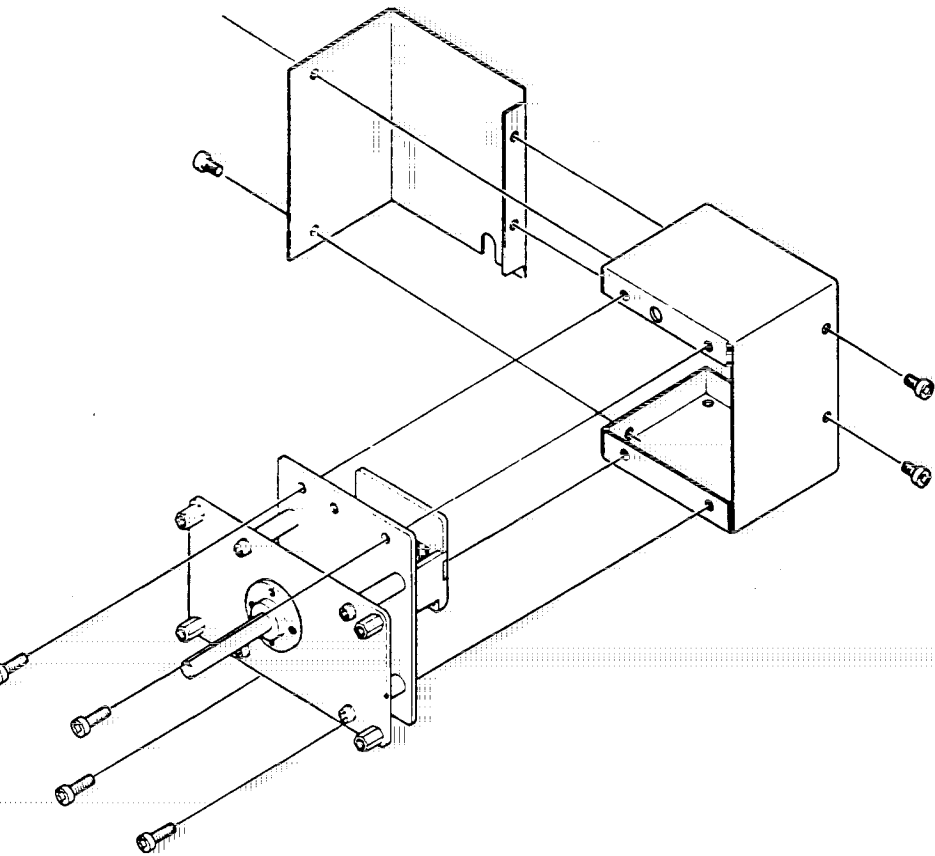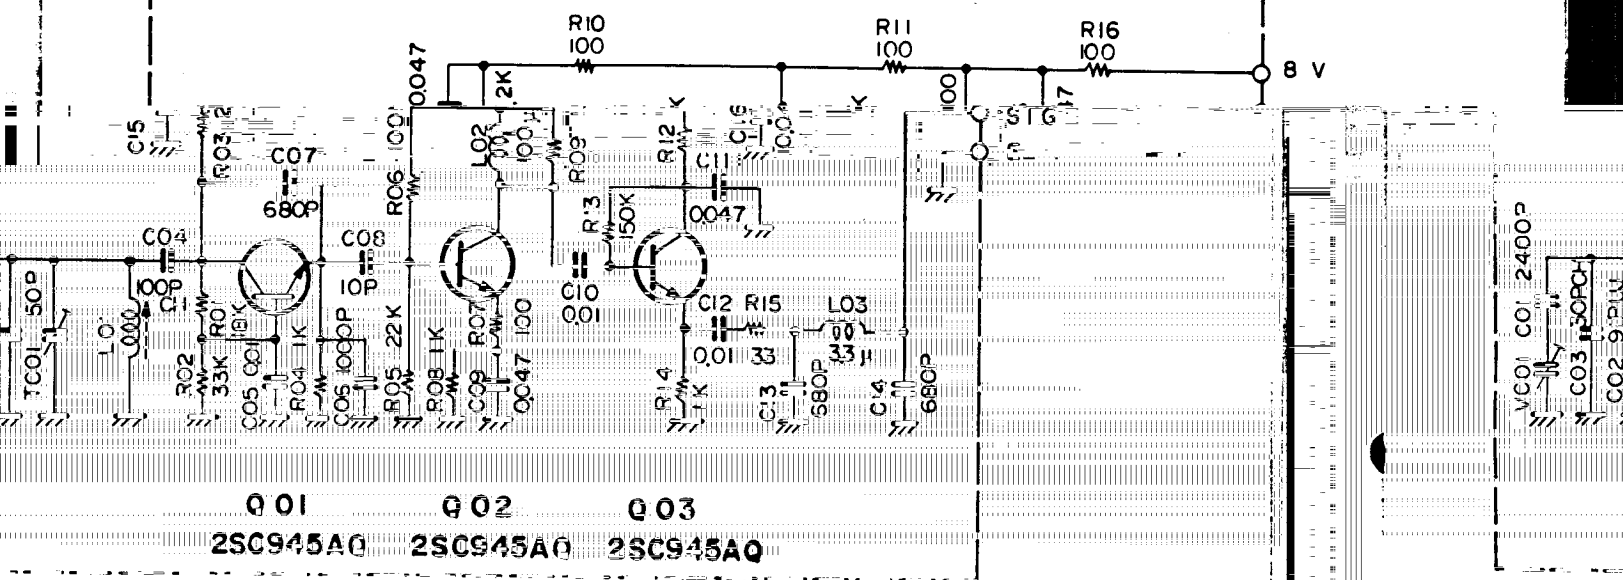



FM UNIT PARTS LAYOUT

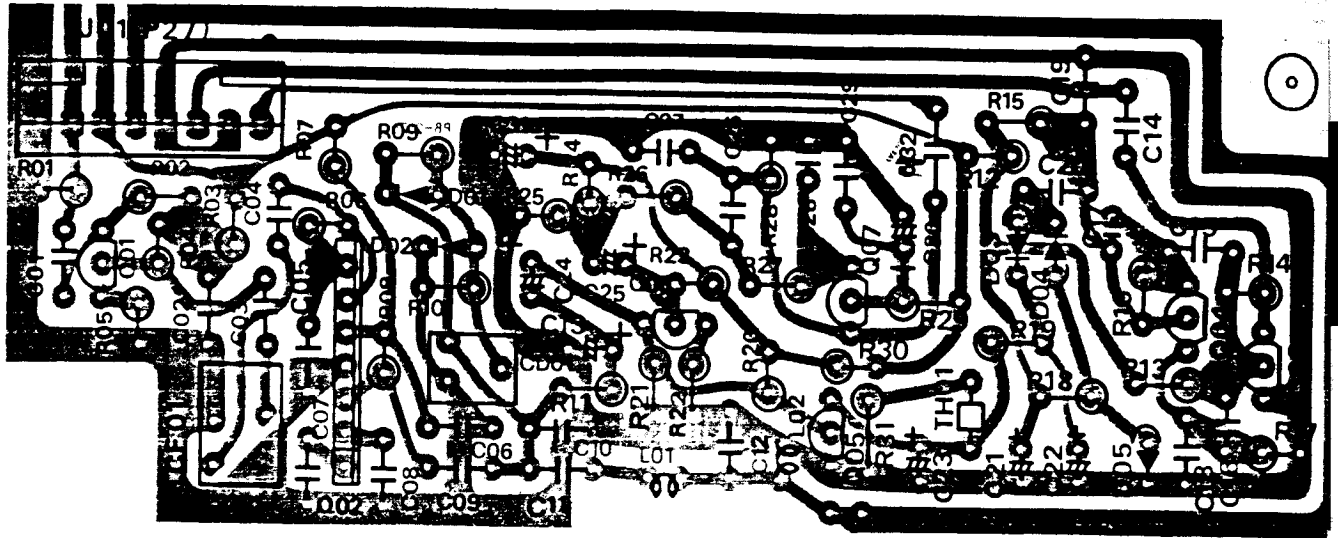

Viewed from component side

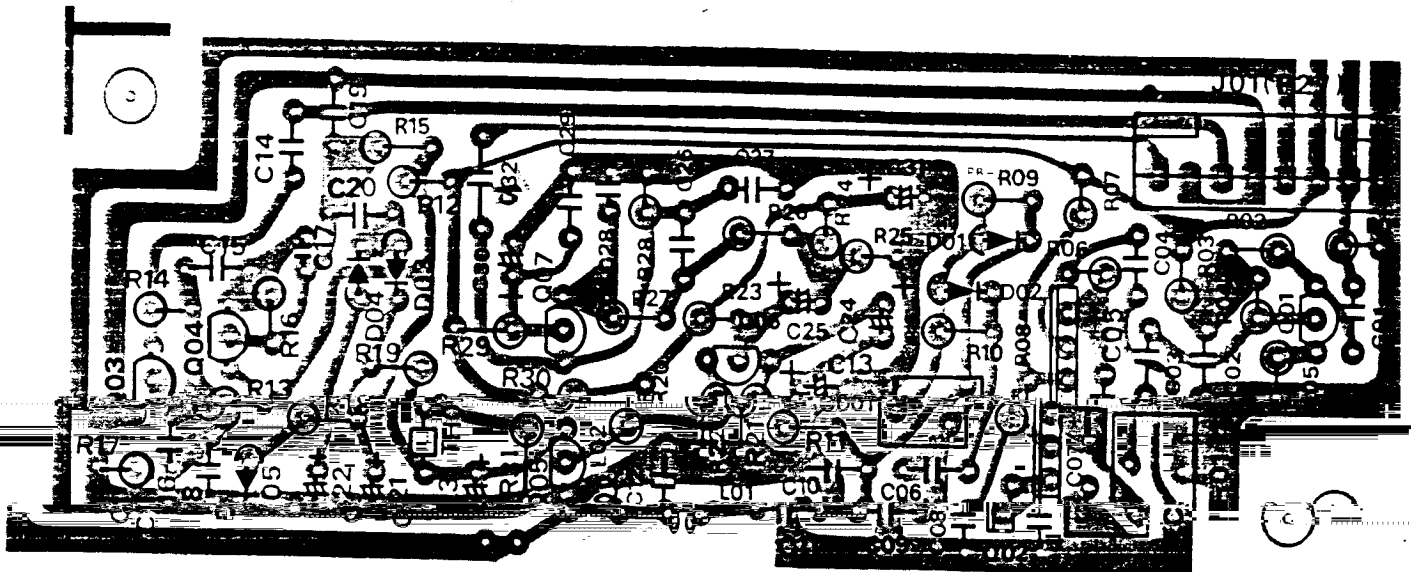

Viewed from foil side

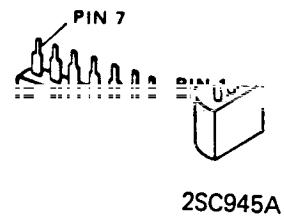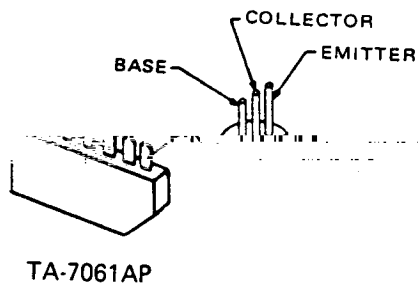

PB-2176 (NO.7...)
FM UNIT

Q01
2SC945AQ

Q02
TA-7061AP


Q03
2SC945AQ

Q04
2SC945AQ


Q05
2SC945AQ

Q06
2SC945AQ


Q07
2SC945AQ

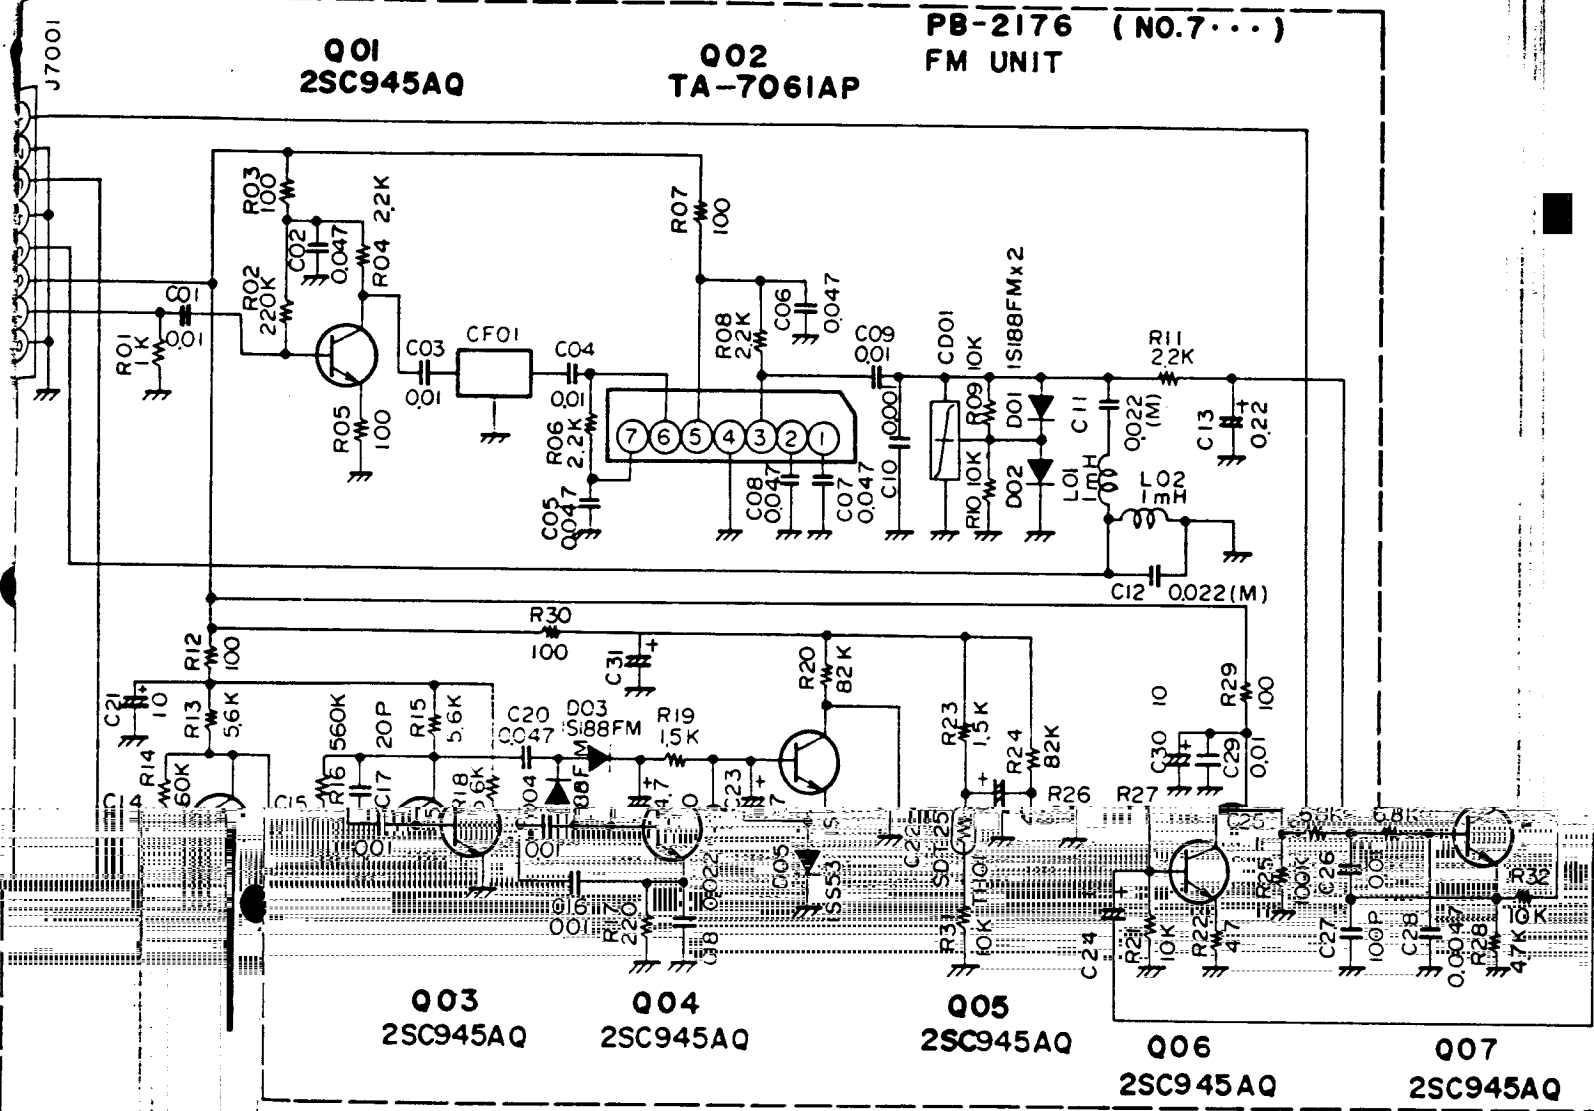


POWER SUPPLY UNIT PARTS LAYOUT

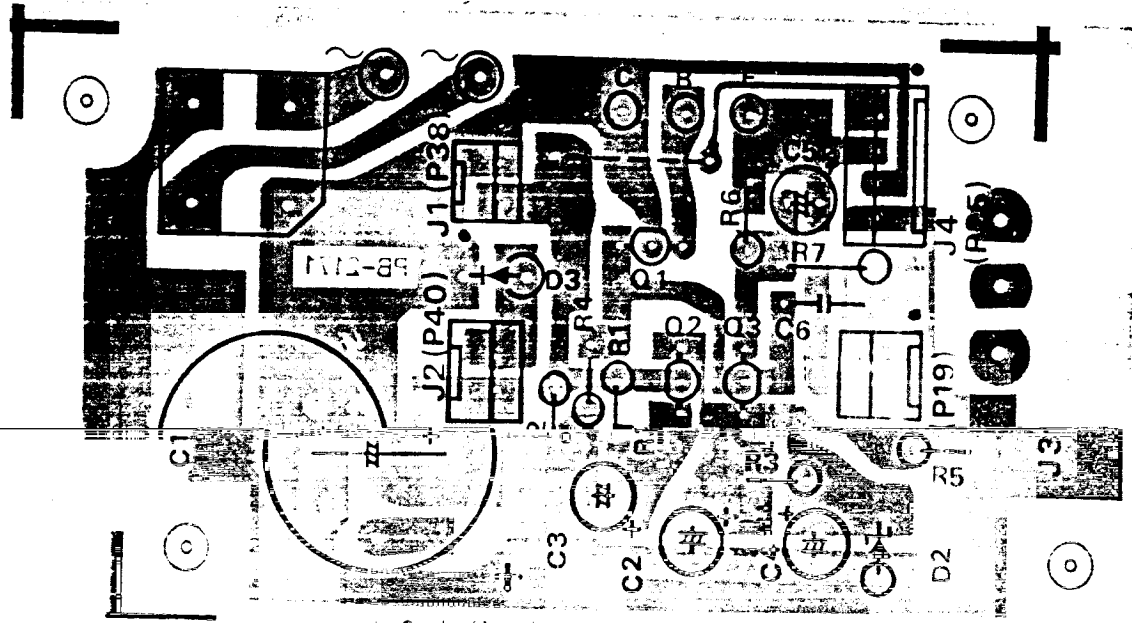


Viewed from component side

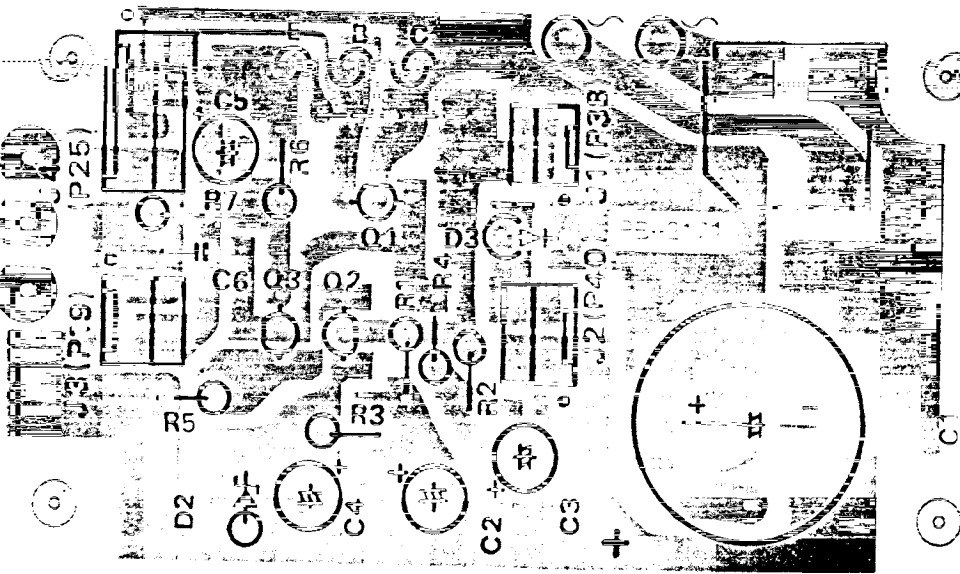


Viewed from foil side

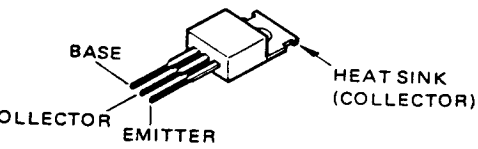


2SD288K

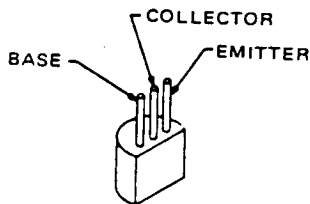


2SC945A

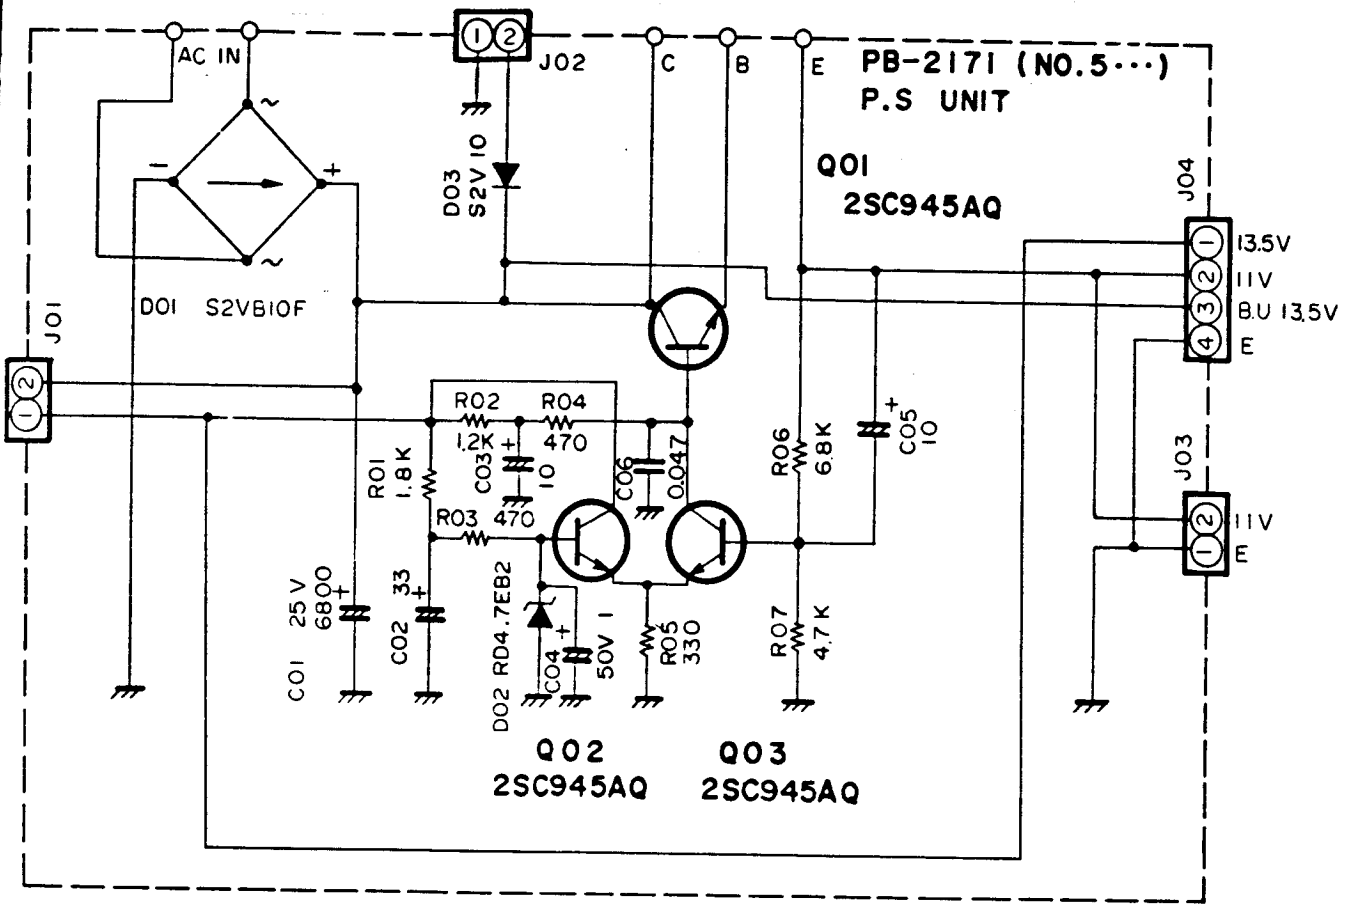


SWITCH UNIT PARTS LAYOUT


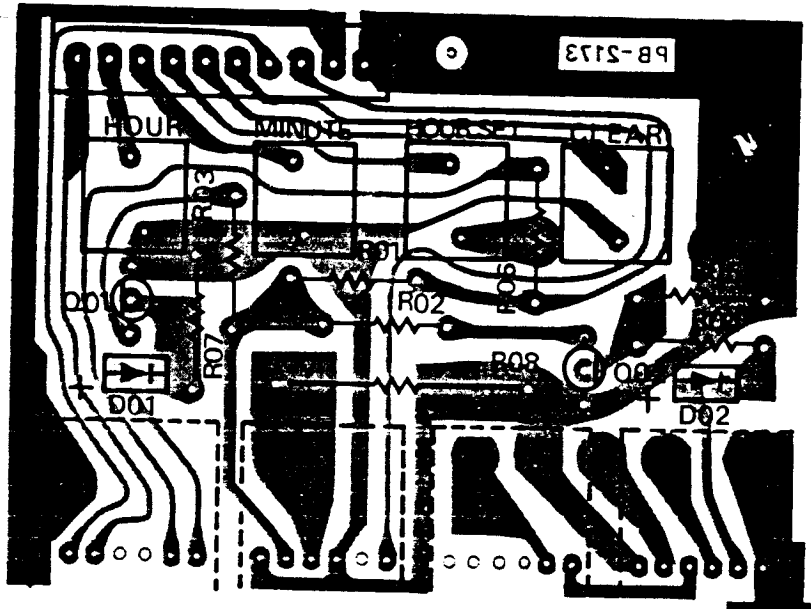


Viewed from component side

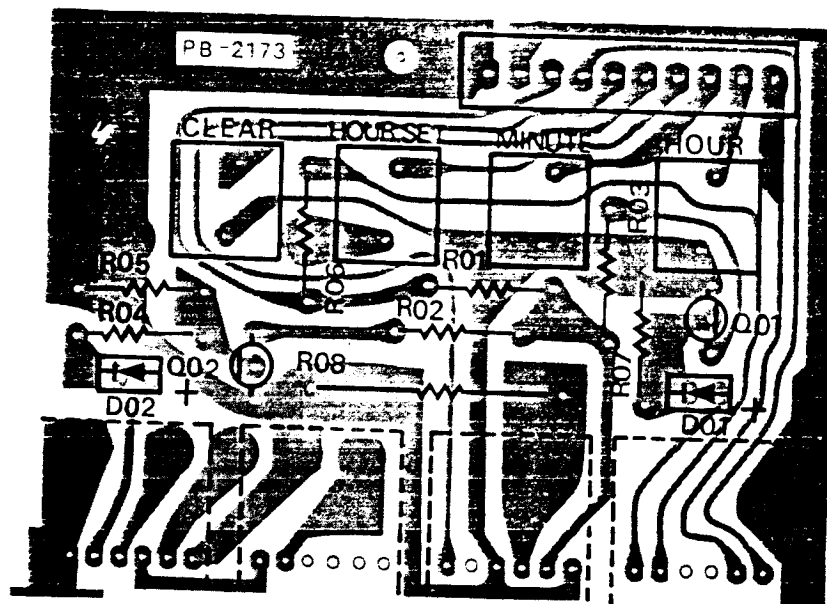


Viewed from foil side

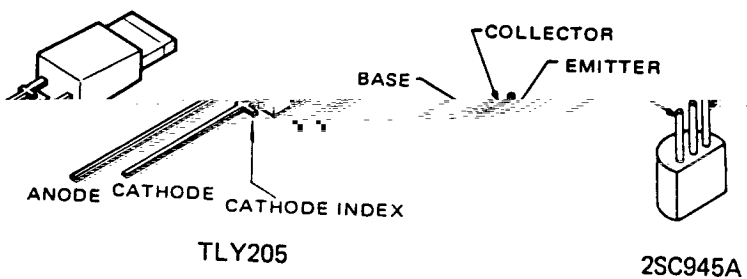


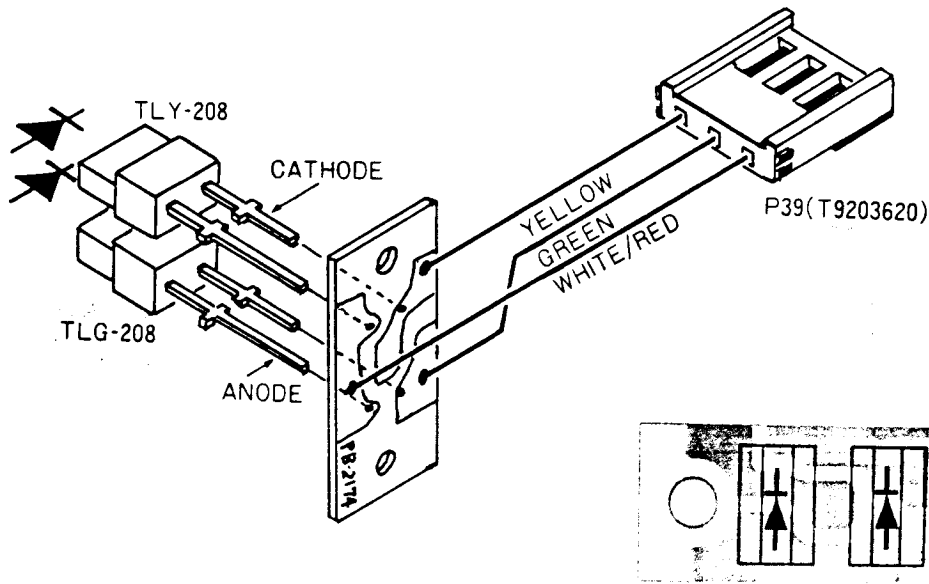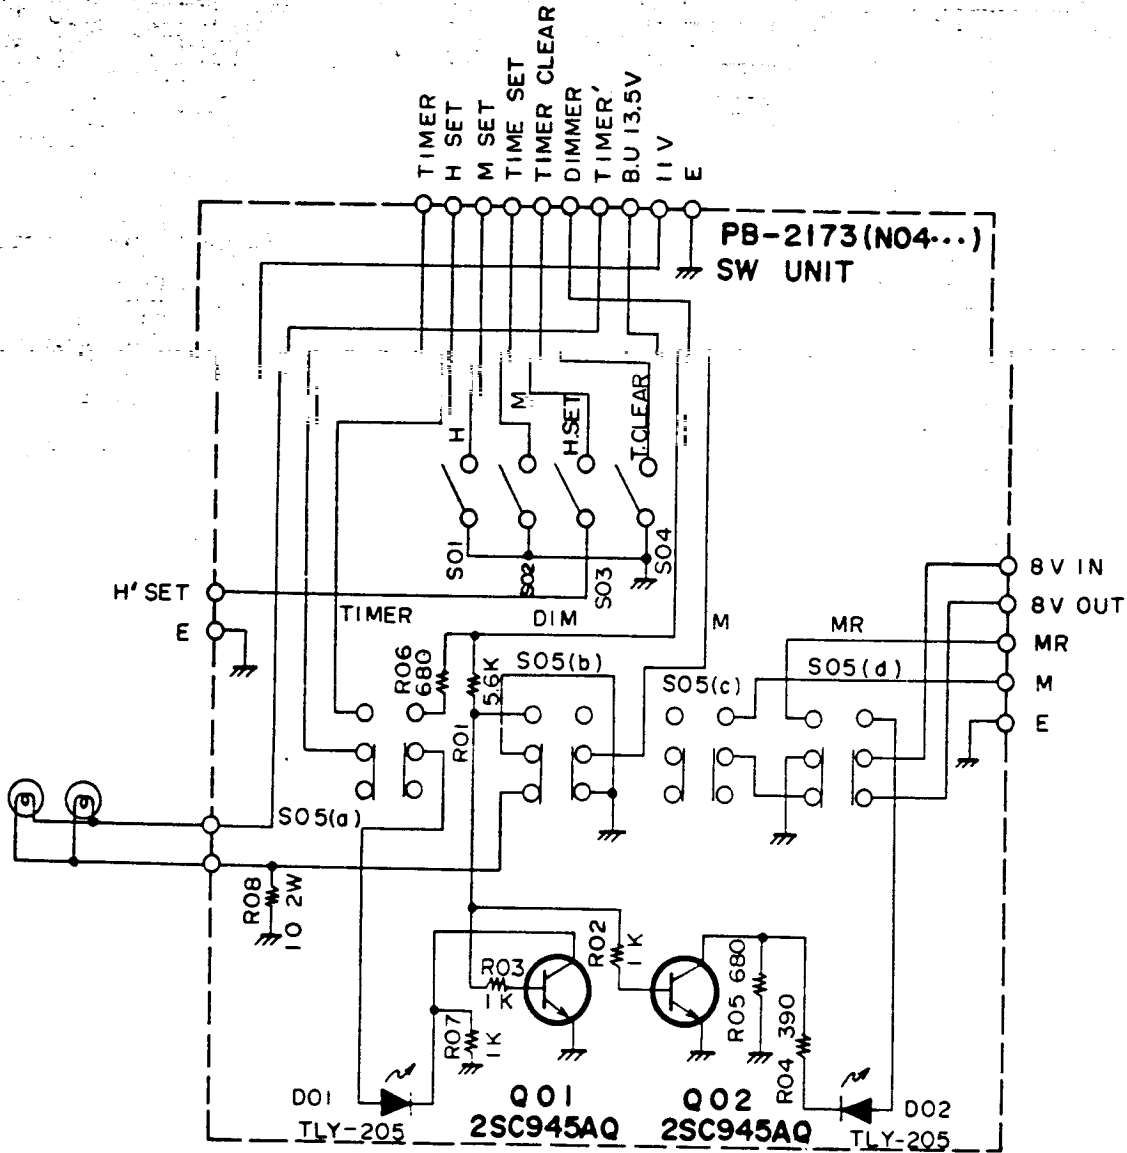

SERVICING

PARTS LAYOUT MEMORY UNIT(PB-2175)

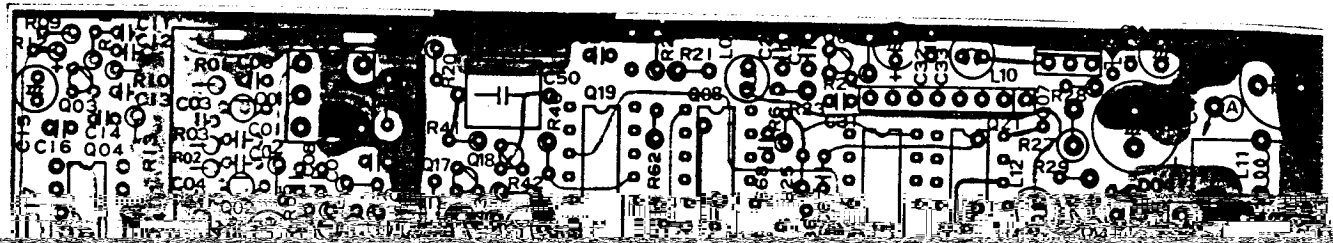

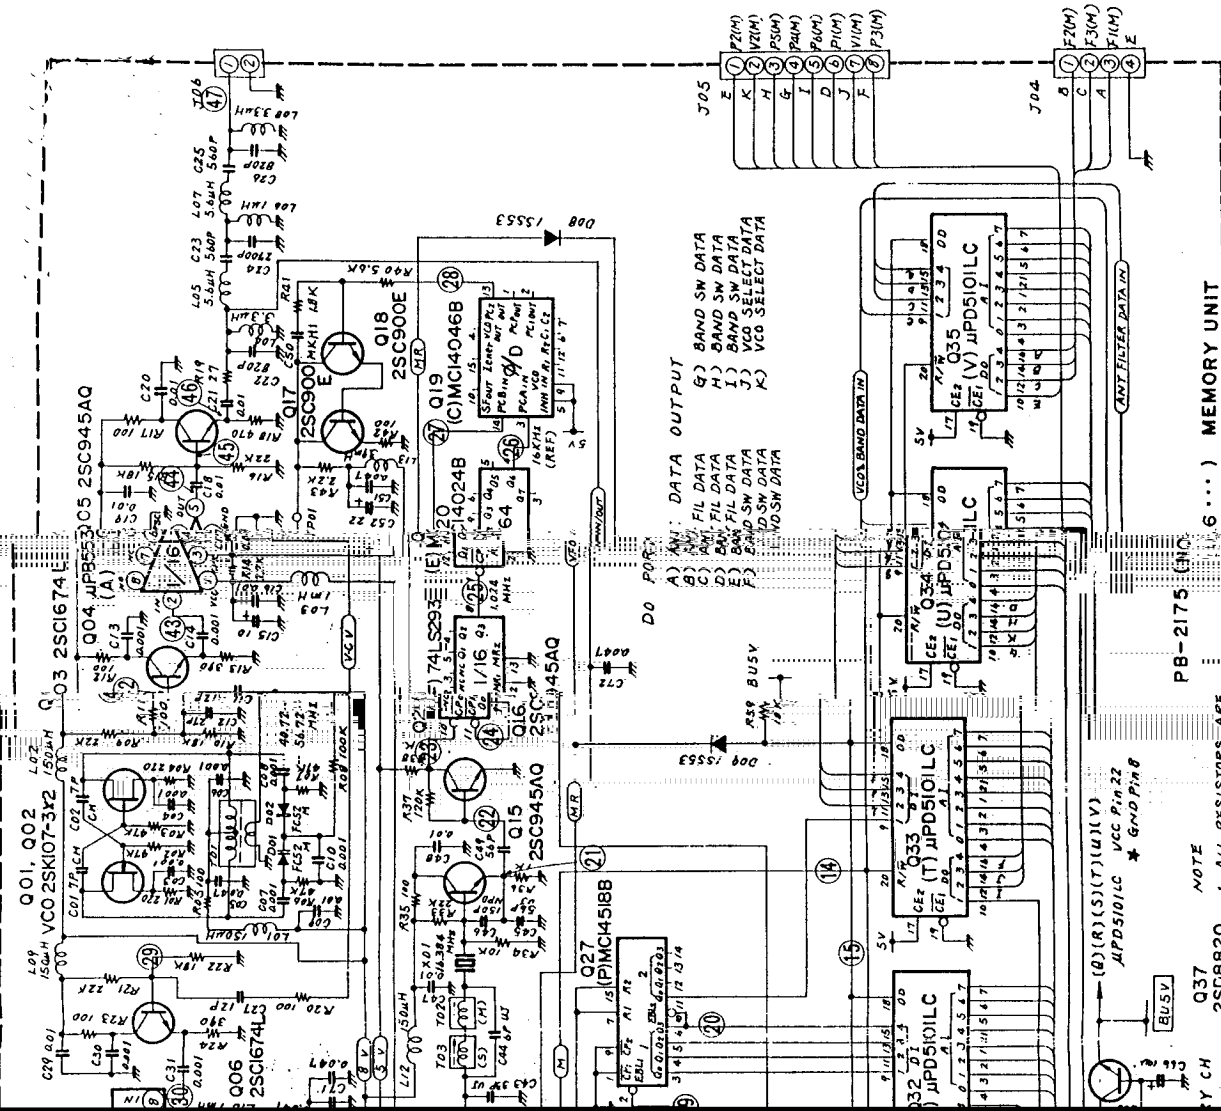

FRG-7700
CIRCUIT DIAGRAM

- DO PORT**
- A) ANI: DATA OUTPUT
 - B) ANI: FIL DATA
 - C) ANI: FIL DATA
 - D) BAND SW DATA
 - E) BAND SW DATA
 - F) VCO SELECT DATA
 - G) BAND SW DATA
 - H) BAND SW DATA
 - I) BAND SW DATA
 - J) VCO SELECT DATA
 - K) BAND SW DATA
 - L) BAND SW DATA

PB-2175 (INC. 6...)


Q37 2SD6820

NOTE
1. ALL RESISTORS ARE IN Ω UNLESS OTHERWISE NOTED
2. ALL CAPACITORS ARE IN μF UNLESS OTHERWISE NOTED
3. ALL ELECTROLYTIC CAPACITORS ARE 16V UNLESS OTHERWISE NOTED

JMC1408908
Pin 2

CHECK POINT

TIMING CHART

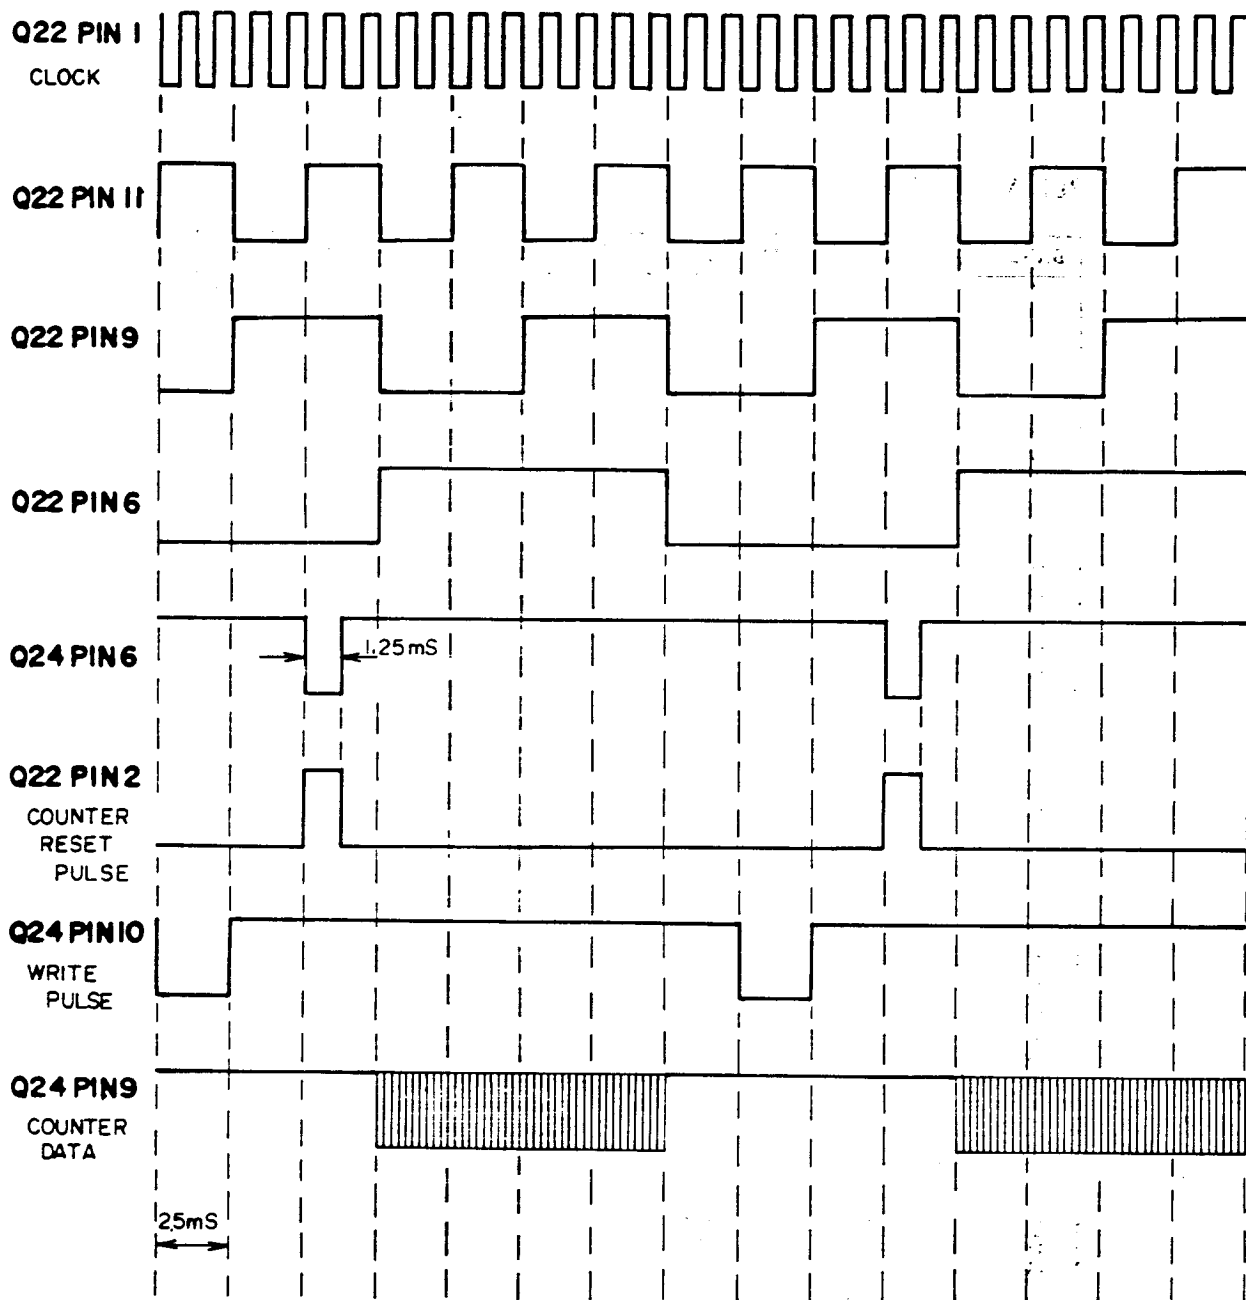

FRG - 7700
MEMORY UNIT



PLL VCO SELECTION

BAND	Q2001	Q2002	Q2004	Q2005	Q2006	Q2007	Q2008	Q2009	Q2010	Q2011
0	-	-	-	-	-	ON	-	-	-	ON
1	-	-	-	-	-	ON	-	-	-	ON
2	-	-	-	-	-	ON	-	-	-	ON
3	-	-	-	-	-	ON	-	-	-	ON
4	-	-	-	-	-	ON	-	-	-	ON
5	-	-	-	-	-	ON	-	-	-	ON
6	ON	-	-	-	ON	-	-	-	ON	-
7	ON	-	-	-	ON	-	-	-	ON	-
8	ON	-	-	-	ON	-	-	-	ON	-
9	ON	-	-	-	ON	-	-	-	ON	-
10	ON	-	-	-	ON	-	-	-	ON	-
11	ON	-	-	-	ON	-	-	-	ON	-
12	ON	-	-	-	ON	-	-	-	ON	-
13	-	ON	-	ON	-	-	-	-	ON	-
14	-	ON	-	ON	-	-	-	ON	-	-
15	-	ON	-	ON	-	-	-	ON	-	-
16	-	ON	-	ON	-	-	-	ON	-	-
17	-	ON	-	ON	-	-	-	ON	-	-
18	-	ON	-	ON	-	-	-	ON	-	-
19	-	ON	-	ON	-	-	-	ON	-	-
20	-	ON	-	ON	-	-	-	ON	-	-
21	ON	ON	ON	-	-	-	ON	-	-	-
22	ON	ON	ON	-	-	-	ON	-	-	-
23	ON	ON	ON	-	-	-	ON	-	-	-
24	ON	ON	ON	-	-	-	ON	-	-	-
25	ON	ON	ON	-	-	-	ON	-	-	-
26	ON	ON	ON	-	-	-	ON	-	-	-
27	ON	ON	ON	-	-	-	ON	-	-	-
28	ON	ON	ON	-	-	-	ON	-	-	-
29	ON	ON	ON	-	-	-	ON	-	-	-
1	-	-	-	-	-	ON	-	-	-	ON
3	-	-	-	-	-	ON	-	-	-	ON
7	ON	-	-	-	ON	-	-	-	ON	-
10	ON	-	-	-	ON	-	-	-	ON	-
14	-	ON	-	ON	-	-	-	-	ON	-
18	-	ON	-	ON	-	-	-	ON	-	-
21	ON	ON	ON	-	-	-	-	ON	-	-
24	ON	ON	ON	-	-	-	ON	-	-	-
28	ON	ON	ON	-	-	-	ON	-	-	-

PLL DIVIDING RATIO

BAND	Q2042 DIVIDING RATIO	Q2042 (MB-8718) PIN No.					
		13	14	15	16	17	18
0	1/4	0	0	1	0	0	0
1	1/5	1	0	1	0	0	0
2	1/6	0	1	1	0	0	0
3	1/7	1	1	1	0	0	0
4	1/8	0	0	0	1	0	0
5	1/9	1	0	0	1	0	0
6	1/10	0	0	0	0	1	0
7	1/11	1	0	0	0	1	0
8	1/12	0	1	0	0	1	0
9	1/13	1	1	0	0	1	0
10	1/14	0	0	1	0	1	0
11	1/15	1	0	1	0	1	0
12	1/16	0	1	1	0	1	0
13	1/17	1	1	1	0	1	0
14	1/18	0	0	0	1	1	0
15	1/19	1	0	0	1	1	0
16	1/20	0	0	0	0	0	1
17	1/21	1	0	0	0	0	1
18	1/22	0	1	0	0	0	1
19	1/23	1	1	0	0	0	1
20	1/24	0	0	1	0	0	1
21	1/25	1	0	1	0	0	1
22	1/26	0	1	1	0	0	1
23	1/27	1	1	1	0	0	1
24	1/28	0	0	0	1	0	1
25	1/29	1	0	0	1	0	1
26	1/30	0	0	0	0	1	1
27	1/31	1	0	0	0	1	1
28	1/32	0	1	0	0	1	1
29	1/33	1	1	0	0	1	1
1	1/5	1	0	1	0	0	0
3	1/7	1	1	1	0	0	0
7	1/11	1	0	0	0	1	0
10	1/14	0	0	1	0	1	0
14	1/18	0	0	0	1	1	0
18	1/22	0	1	0	0	0	1
21	1/26	1	0	1	0	0	1
24	1/28	0	0	0	1	0	1
28	1/32	0	1	0	0	1	1
29	1/33	1	1	0	0	1	1

1 - HI LEVEL
0 - LOW LEVEL

MAIN UNIT BPF SELECTION

BAND	J1005 PIN No.			Q1007	Q1008	Q1009	Q1010	Q1011	Q1012
	2	3	4						
0	0	0	0	-	-	-	-	-	ON
1	1	0	0	-	-	-	-	ON	-
2	0	1	0	-	-	-	ON	-	-
3	0	1	0	-	-	-	ON	-	-
4	1	1	0	-	-	ON	-	-	-
5	1	1	0	-	-	ON	-	-	-
6	1	1	0	-	-	ON	-	-	-
7	1	1	0	-	-	ON	-	-	-

0	0	1	-	ON	-	-	-	-	-
0	0	1	-	ON	-	-	-	-	-
0	0	1	-	ON	-	-	-	-	-
0	0	1	-	ON	-	-	-	-	-
0	0	1	-	ON	-	-	-	-	-
0	0	1	-	ON	-	-	-	-	-
0	0	1	-	ON	-	-	-	-	-
0	1	1	ON	-	-	-	-	-	-
0	1	1	ON	-	-	-	-	-	-
0	1	1	ON	-	-	-	-	-	-
0	1	1	ON	-	-	-	-	-	-
0	1	1	ON	-	-	-	-	-	-
0	1	1	ON	-	-	-	-	-	-
0	1	1	ON	-	-	-	-	-	-
0	1	1	ON	-	-	-	-	-	-
0	1	1	ON	-	-	-	-	-	-
0	1	1	ON	-	-	-	-	-	-
1	0	0	-	-	-	-	ON	-	-
0	1	0	-	-	-	ON	-	-	-
1	1	0	-	-	ON	-	-	-	-
0	0	1	-	ON	-	-	-	-	-
0	0	1	-	ON	-	-	-	-	-
0	1	1	ON	-	-	-	-	-	-
0	1	1	ON	-	-	-	-	-	-
0	1	1	ON	-	-	-	-	-	-
0	1	1	ON	-	-	-	-	-	-
0	1	1	ON	-	-	-	-	-	-



8
9
10
11
12
13
14
15
16
17
18
19
20
21
22
23
24
25
26
27
28
29
1
3
7
10
14
18
21
24
28
29

1 - HI LEVEL ON - ON
 0 - LOW LEVEL - - OFF

BAND SWITCH CONTACT POSITION

BAND	BAND SWITCH (S2001)										
	S1						S2				
	PIN No. (common No. 4)						PIN No. (common No. 8)				
	8	7	6	5	2	3	1	2	3	6	7
0	-	-	ON	-	-	-	-	-	-	-	-
1	ON	-	ON	-	-	-	ON	-	-	-	-
2	-	ON	ON	-	-	-	-	ON	-	-	-
3	ON	ON	ON	-	-	-	-	ON	-	-	-
4	-	-	-	ON	-	-	ON	ON	-	-	-
5	ON	-	-	ON	-	-	ON	ON	-	-	-
6	-	-	-	-	ON	-	ON	ON	-	ON	-
7	ON	-	-	-	ON	-	ON	ON	-	ON	-
8	-	ON	-	-	ON	-	-	-	ON	ON	-
9	ON	ON	-	-	ON	-	-	-	ON	ON	-
10	-	-	ON	-	ON	-	-	-	ON	ON	-
11	ON	-	ON	-	ON	-	-	-	ON	ON	-
12	-	ON	ON	-	ON	-	-	-	ON	ON	-
13	ON	ON	ON	-	ON	-	-	-	ON	-	ON
14	-	-	-	ON	ON	-	-	-	ON	-	ON
15	ON	-	-	ON	ON	-	-	-	ON	-	ON
16	-	-	-	-	-	ON	-	ON	ON	-	ON
17	ON	-	-	-	-	ON	-	ON	ON	-	ON
18	-	ON	-	-	-	ON	-	ON	ON	-	ON
19	ON	ON	-	-	-	ON	-	ON	ON	-	ON
20	-	-	ON	-	-	ON	-	ON	ON	-	ON
21	ON	-	ON	-	-	ON	-	ON	ON	ON	ON
22	-	ON	ON	-	-	ON	-	ON	ON	ON	ON
23	ON	ON	ON	-	-	ON	-	ON	ON	ON	ON
24	-	-	-	ON	-	ON	-	ON	ON	ON	ON
25	ON	-	-	ON	-	ON	-	ON	ON	ON	ON
26	-	-	-	-	ON	ON	-	ON	ON	ON	ON
27	ON	-	-	-	ON	ON	-	ON	ON	ON	ON
28	-	ON	-	-	ON	ON	-	ON	ON	ON	ON
29	ON	ON	-	-	ON	ON	-	ON	ON	ON	ON
1	ON	-	ON	-	-	-	ON	-	-	-	-
3	ON	ON	ON	-	-	-	-	ON	-	-	-
7	ON	-	-	-	ON	-	ON	ON	-	ON	-
10	-	-	ON	-	ON	-	-	-	ON	ON	-
14	-	-	-	ON	ON	-	-	-	ON	-	ON
18	-	ON	-	-	-	ON	-	ON	ON	-	ON
21	ON	-	ON	-	-	ON	-	ON	ON	ON	ON
24	-	-	-	ON	-	ON	-	ON	ON	ON	ON
28	-	ON	-	-	ON	ON	-	ON	ON	ON	ON
29	ON	ON	-	-	ON	ON	-	ON	ON	ON	ON

ON - ON
 - - OFF

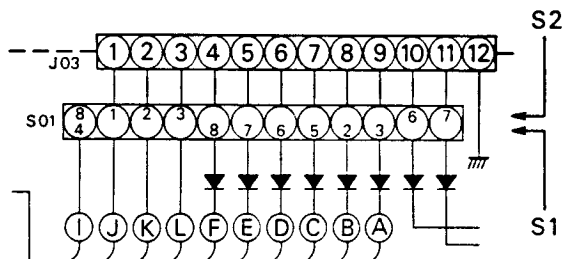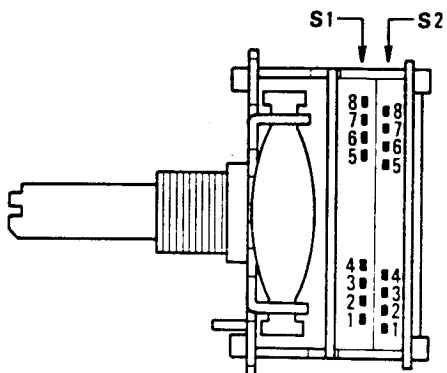

**SOLDERING AND DESOLDERING TECHNIQUE
ON PRINTED CIRCUIT BOARDS**

NOTES ON USE OF CMOS IC's:

700 circuit boards are tough, but mis-
soldering can cause circuit traces to
this does not cause permanent damage
, much servicing trouble can result,
the tendency for this lifted trace to
w simple precautions will keep your
ds in A-1 condition.

y a 12 to 30 watt chisel-tip soldering
es, some "repairmen" have been
to use small blowtorches on cards.

y a soldering iron equipped with a
re cord, with the tip grounded. Also
le is a soldering iron isolated through
ormer. An old soldering iron or gun
ve 117 volts on the tip, and will
ny cause more damage than it repairs!

ONLY 60/40 ROSIN CORE SOLDER.
core solder should be thrown away if
nd it in your radio shop!

solder sucker and solder tape to ensure
essional repair job.

do lift a trace, don't worry! Read on
out how to repair traces like a pro.

As CMOS devices are extremely sensitive to damage
from static electricity, special precautions must be
observed.

In storage, use only sponge specially designed for
CMOS components.

When installing a CMOS IC in a socket, or on a
circuit board, be certain that the power is off. In
addition, the technician should rest his hand on the
chassis as the component is inserted, so as to place
his hand at the same potential as the chassis (better
to discharge small amounts of static electricity
through your fingers than through a \$5 IC !).

When soldering a CMOS IC onto a circuit board,
use a low wattage iron, and be sure to ground the
tip, with a three-wire cord if the tip is not grounded
through a three-wire power cord.

The FRG-7
handling dur
"lift." While
to the board
because of
break. A few
circuit board

1. Use only
iron. Y
known t
2. Use only
three-wi
acceptab
a transf
may ha
certain

3. USE C
Acid
you fi
4. Use a
a prof
5. If you
to find

INSERTION OF PARTS ON CIRCUIT BOARDS

Below are acceptable ways of inserting
components into circuit board mounting holes.

(c) Vertical mounting

(d) Preformed disc ceramic
capacitor




(e) Preformed resistor, diode, etc.



(a) Bend leads slightly


(b) Straight-in mounting

All of the b
components



BASIC SOLDERING PRACTICE

EXAMPLES OF POOR SOLDERING PRACTICE

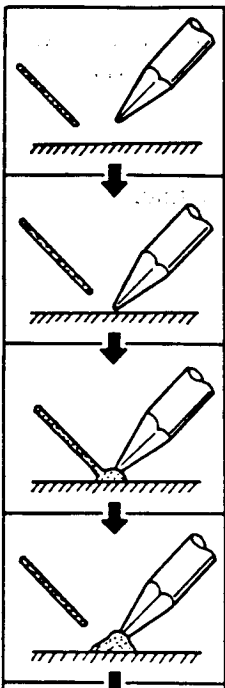

(1) Prepare soldering iron and solder.

(2) Apply soldering iron to surface to be soldered.

(3) Apply solder to heated surface.




(4) When enough solder is applied, remove solder. Continue to apply heat until solder flows cleanly.

(5) Remove iron from work.


Do not apply more heat than necessary for good solder flow.

Soldering to terminal posts:


(Be certain to apply heat to both post and wire)

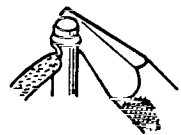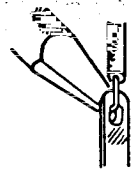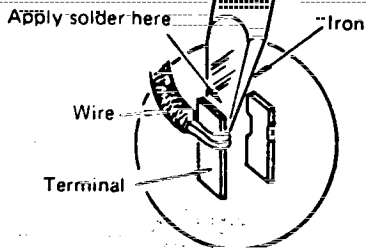


Solder bridge (caused by use of too much solder)




"Cold joint" (caused by insufficient heat to part of work, resulting in poor solder flow)

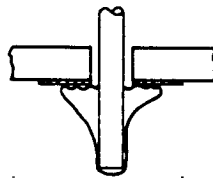

Lifted trace (caused by too much heat on circuit board foil)

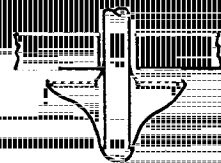

Unstable joint (caused by insufficient heat or solder)

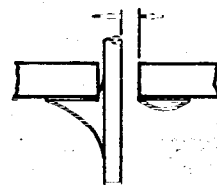

MAINTENANCE AND ALIGNMENT

GENERAL

The FRG-7700 has been carefully aligned and tested at the factory prior to shipment. With normal usage, it should not require other than the usual attention given to electronic equipment. Service or replacement of a major component may entail substantial realignment; under no circumstances, however, should realignment be attempted unless the operation of the receiver is fully understood, and the malfunction has been definitely traced to misalignment rather than

MAIN UNIT

(1) Counter Clock Frequency Adjustment

Connect a frequency counter to TP₁₀₀₇. Adjust TC₁₀₀₃ for a reading of 3.2768 MHz on the counter.

(2) SSB Carrier Frequency Adjustment

- a. Connect a frequency counter to TP₁₀₀₅, and set the MODE switch to the USB position. Adjust TC₁₀₀₂ for a reading of 456.5 kHz on

(3) First and Second IF Adjustment

Set the MODE switch to LSB/CW, the ATT switch to DX, and rotate the ATT control fully counterclockwise. Connect a signal generator to the antenna jack, J₁, and set its frequency to 8.01 MHz. Tune the receiver to 8.01 MHz, set the signal generator output to a level sufficient to obtain deflection of the S-meter, and adjust T₁₀₀₄ - T₁₀₀₈ and T₁₀₁₁ - T₁₀₁₄ for maximum S-meter reading.

(4) S-Meter Sensitivity and Full Scale Adjustment

a. Preset the controls, switches, and dial frequency as in step 3. Set the signal generator output level to 8 dB (ref: 0 dB = 1μV). Adjust VR₁₀₀₂ so that the S-meter just begins to move off the left-hand peg on its scale.

Adjust VR₁₀₀₄ for a full scale reading on the S-meter.


(5) NB Adjustment

- a. Connect a VTVM to the source of Q₁₀₃₇, and a signal generator to antenna jack J₁. Set the signal generator output level to 20 dB, output frequency to 8.01 MHz, and adjust T₁₀₁₅ - T₁₀₁₇ for a minimum reading on the VTVM.
- b. Connect a noise generator to antenna jack J₁, and press the NB switch. Adjust VR₁₀₀₁ for a minimum noise level from the speaker.

(6) Trap Adjustment

Connect a signal generator to antenna jack J₁, and set its frequency to the first IF frequency, 48.055 MHz. Set the signal generator output level to a level sufficient to obtain deflection on the S-meter, then adjust VR₁₀₀₂ for a minimum reading on the S-meter.

b. Set the signal generator output level to 90 dB.

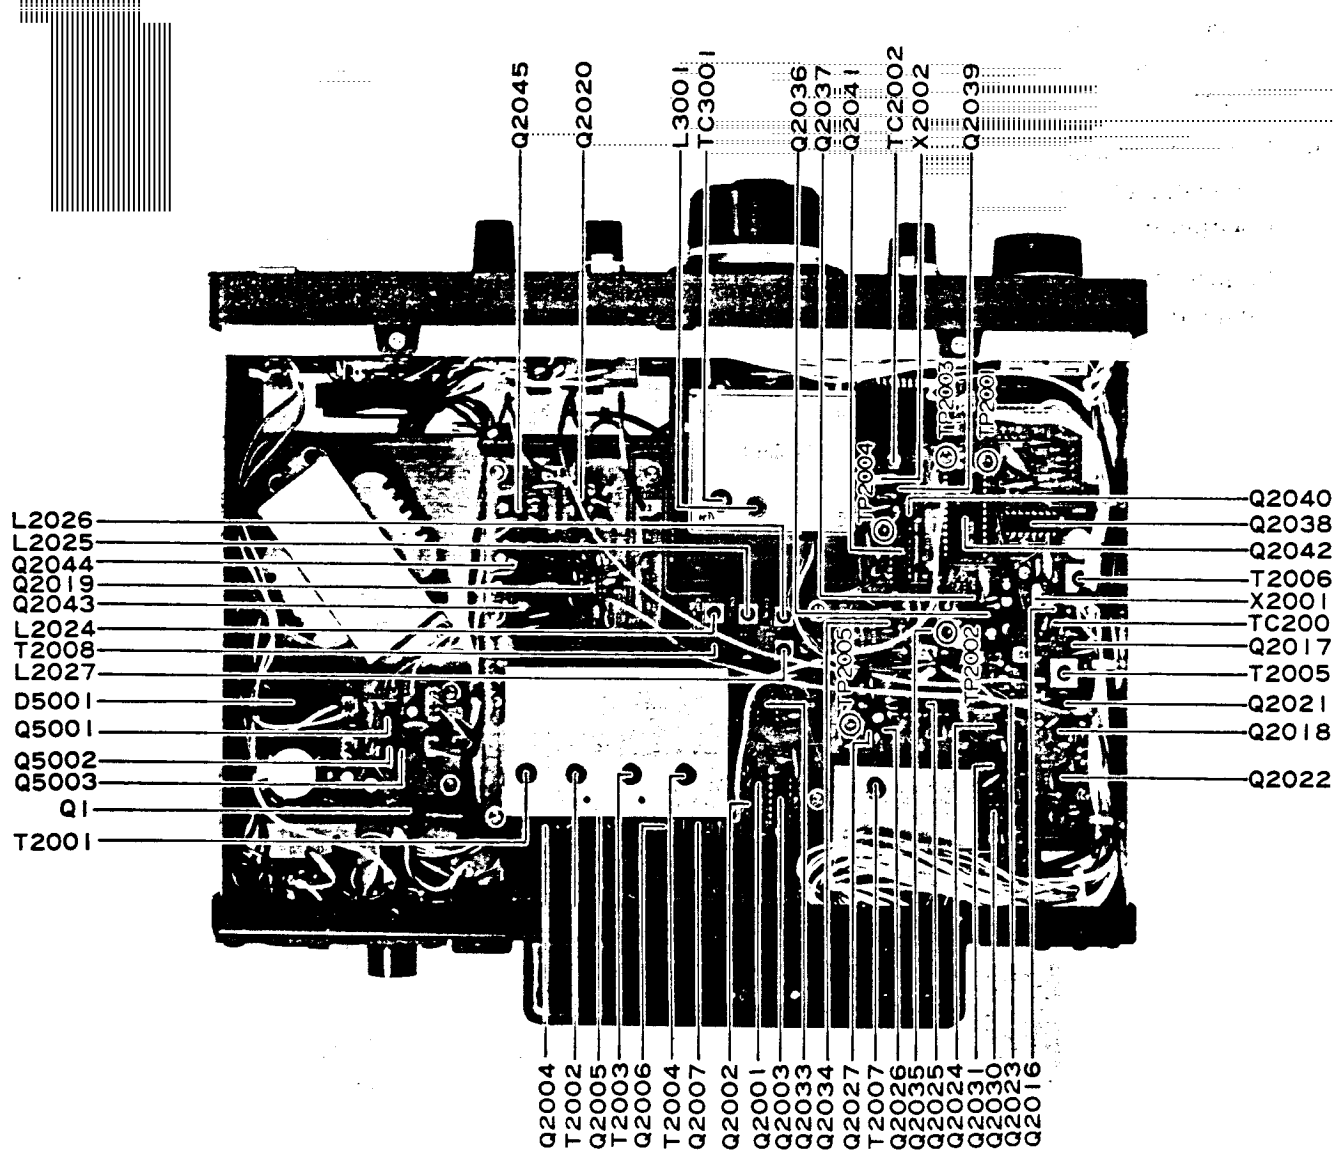

BOTTOM VIEW

PLL UNIT

(1) PLL Reference Oscillator Adjustment

Set the MR switch to off, and connect a frequency counter to pin 9 of Q₂₀₄₁. Adjust TC₂₀₀₂ for a reading of exactly 3.2 MHz on the counter.

(2) PLL Local Alignment

a. Connect the RF probe of a VTVM to pin 1 of J₂₀₀₅. Adjust T₂₀₀₅ and T₂₀₀₆ for a maximum meter reading on the VTVM (typical value: 100-200 mV RMS).

b. Connect a frequency counter to pin 1 of J₂₀₀₅. Adjust TC₂₀₀₁ for a reading of exactly 47.6 MHz on the counter.

(3) VCV Line Adjustment

a. Connect the DC probe of a VTVM to TP₂₀₀₅ (PLL Unit), and rotate the main dial to the "1000" position on the analog dial. Adjust T₂₀₀₇ to secure a reading of 7 volts on the VTVM.

b. Rotate the main dial to the "0" position on the analog dial. Make certain that the voltage is within the range of 1.5 – 2.0 volts.

c. Connect the VTVM DC probe to TP₂₀₀₃, and rotate the main dial to the "1000" position.

Set the BAND switch to the 5 MHz band, adjust T₂₀₀₄ to obtain a reading of 7.4 volts on the VTVM.

d. Change the BAND switch to the 12, 20, 29 MHz band positions, and adjust VCO T₂₀₀₃, T₂₀₀₂, T₂₀₀₁, respectively, to obtain readings of 7.4 volts on the VTVM.

e. Set the BAND switch to the 21, 13 MHz band positions, and rotate the main dial to the "0" position on the analog dial. Make certain that the voltages at TP₂₀₀₃ are within the range of 1.5 – 2.0 volts.


MEMORY UNIT

(1) M FINE Adjustment

Set the M FINE control to the 12 o'clock position and connect a frequency counter to pin 9 of Q₆₀₂₁. Adjust T₆₀₀₃ for a reading of 8.192 MHz on the counter.

(2) VCV Line Adjustment

Initially set the MR switch in the OFF position and connect a VTVM to TP₆₀₀₁. Rotate the main dial to the "0" position on the analog skirt, and push the M button. Then press the MR button and adjust T₆₀₀₁ to obtain a reading of 6.6 volts on the VTVM.

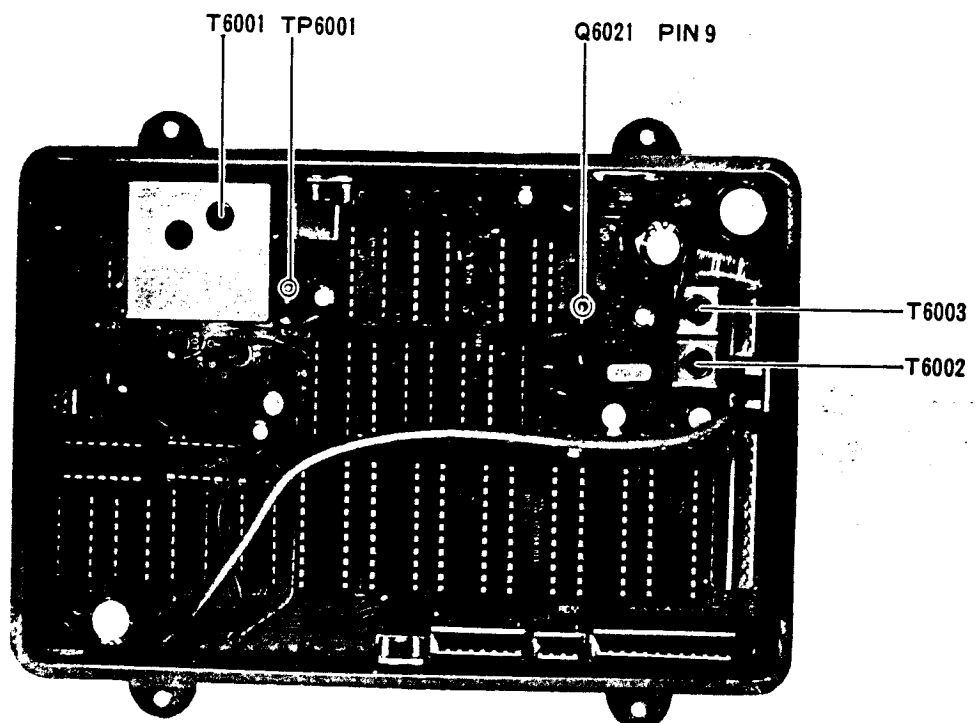


MEMORY UNIT

TROUBLESHOOTING

(1) No operation (Fuse blows)

- (Fuse OK)
- (all mode)
- (USB, LSB, CW mode)
- (AM mode)
- (FM mode)
- put
- not operative
- nit not operative
- r not operative
- not operative (SSB, CW, FM)

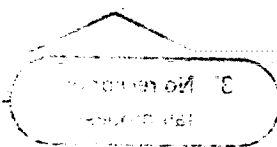

- (2) No operation
- (3) No reception
- (4) No reception
- (5) No reception
- (6) No reception
- (7) No audio out
- (8) Tone control
- (9) Squelch circu
- (10) Noise Blanke
- (11) AGC switch

- (12) AGC switch not operative (AM mode)
- (13) ATT circuit not operative

Check Power Transformer PT-1, Silicon Bridge D500i, BU 13.5V line

Check P.S unit PB-2171, P.S. line

Check or change Power Transformer PT-1, Silicon Bridge D500i

Check P.S unit PB-2171

Check P.S line

1 No operation (Fuse blows)

Power Switch OFF Fuse blows

YES

NO

Power Switch ON Fuse blows

2 No operation (Fuse OK)

Check Power Transformer P1-1 Silicon Bridge D500i


NG



OK



Check for Short +1i, +13.5V line

NG

OK

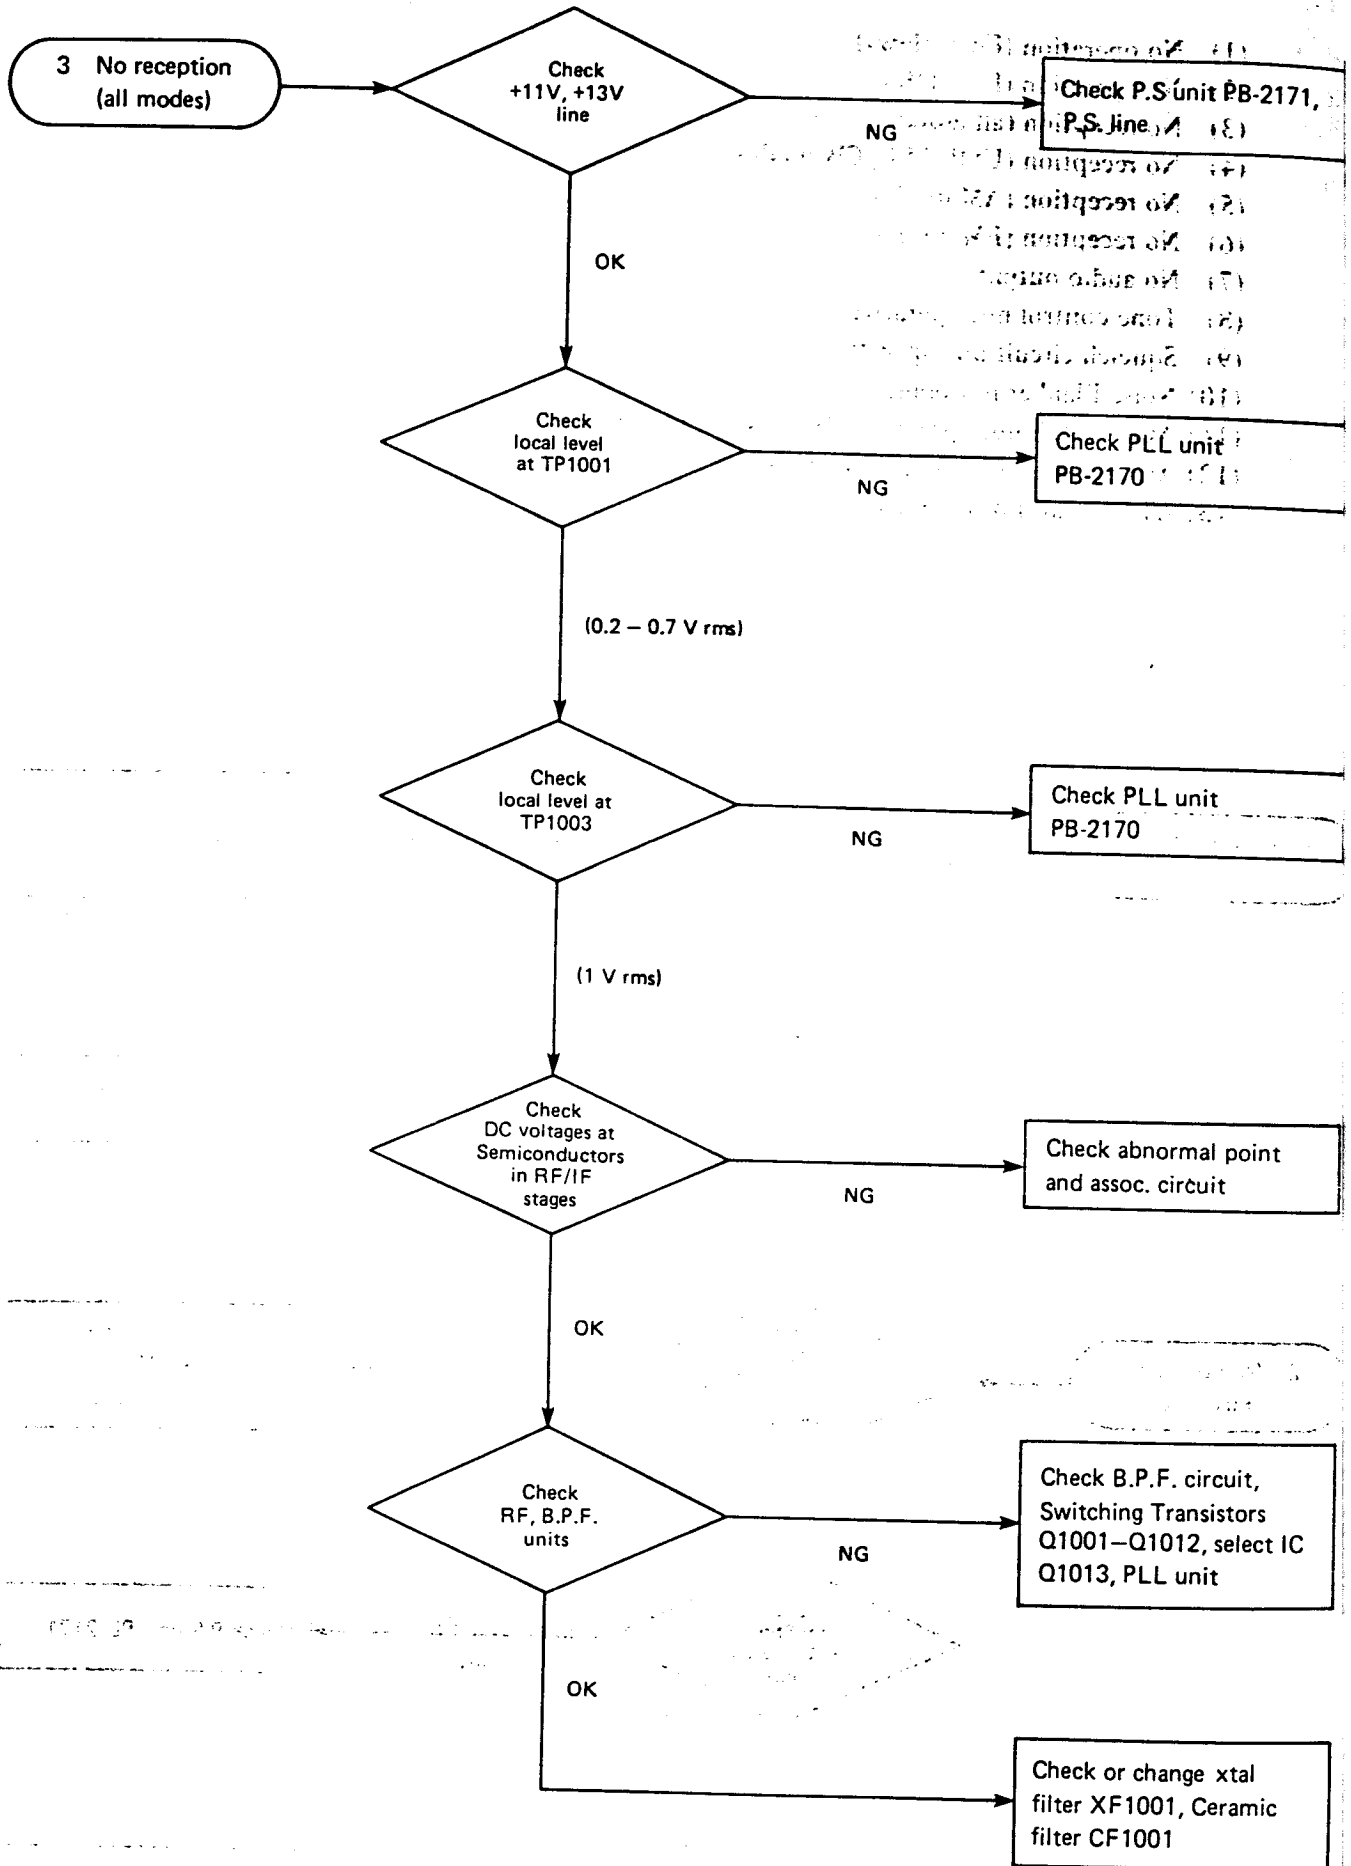

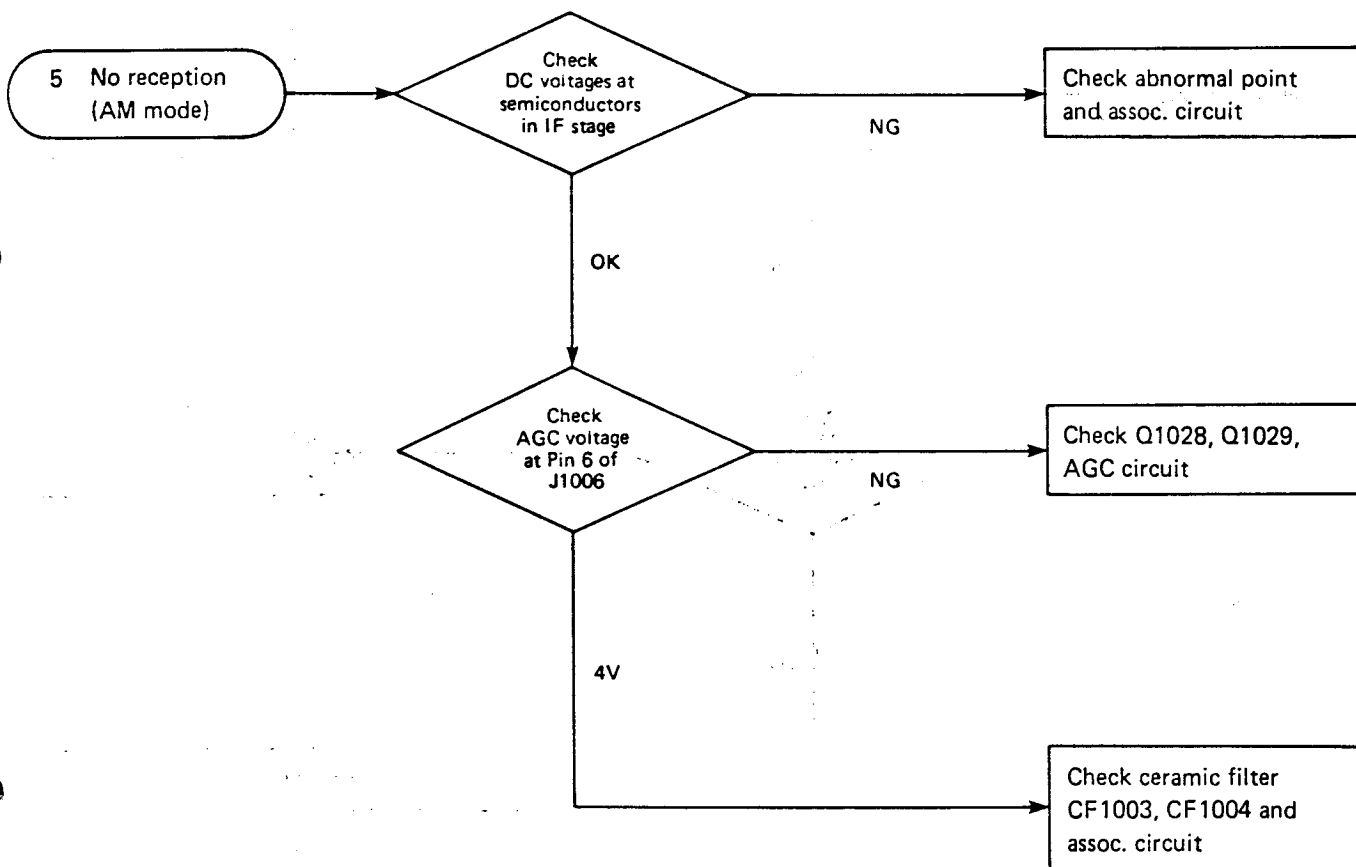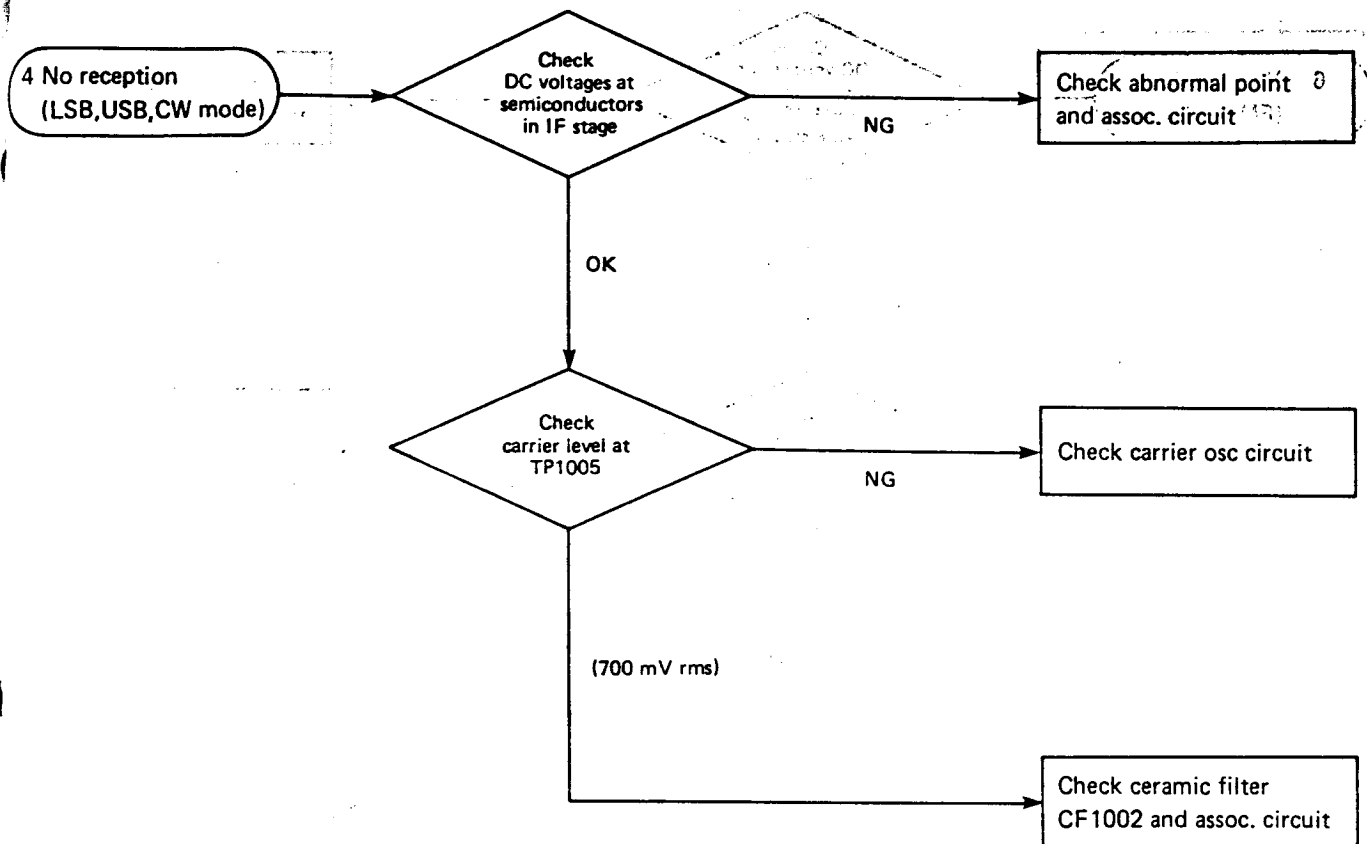

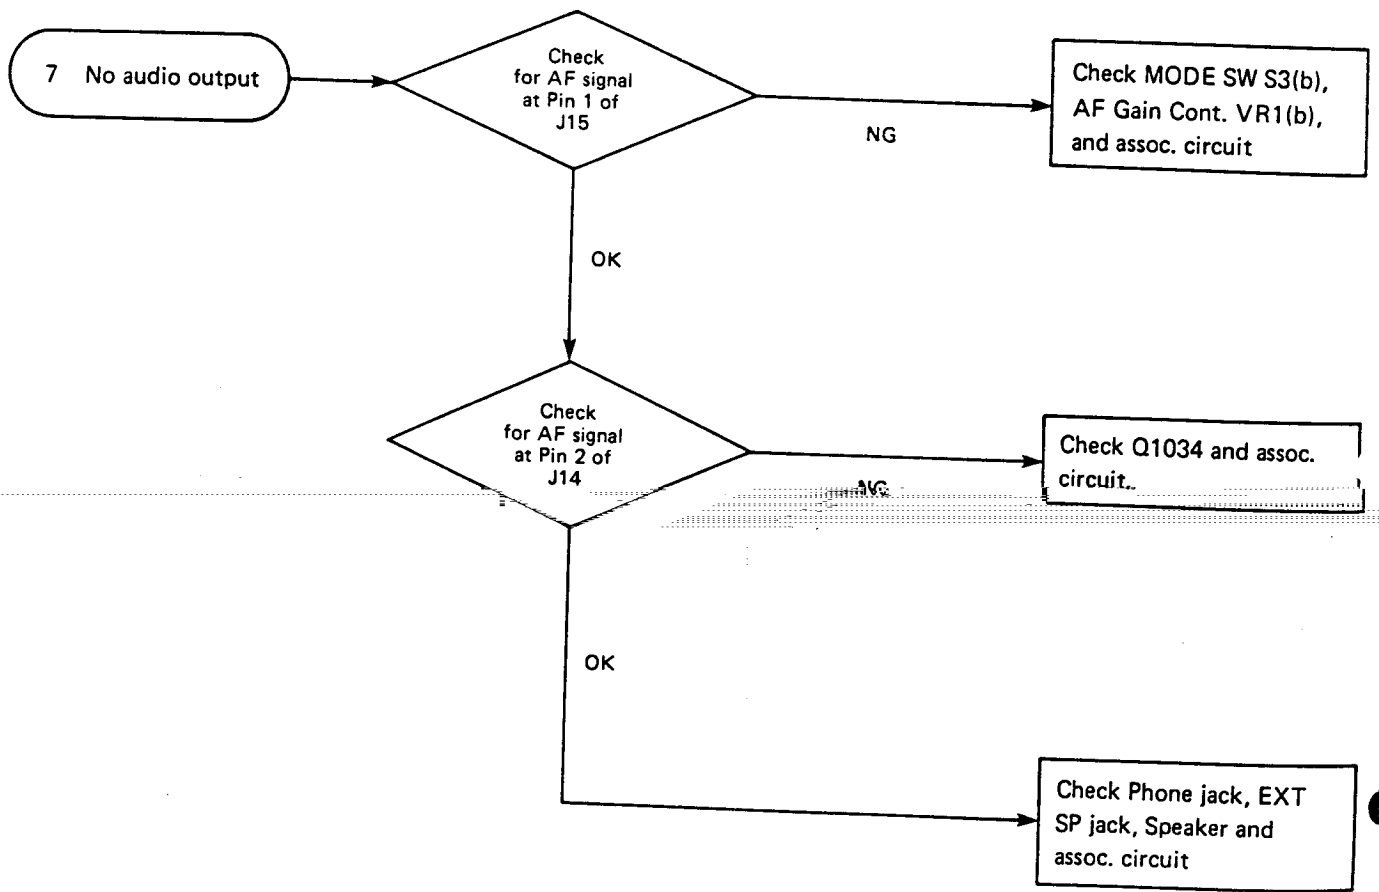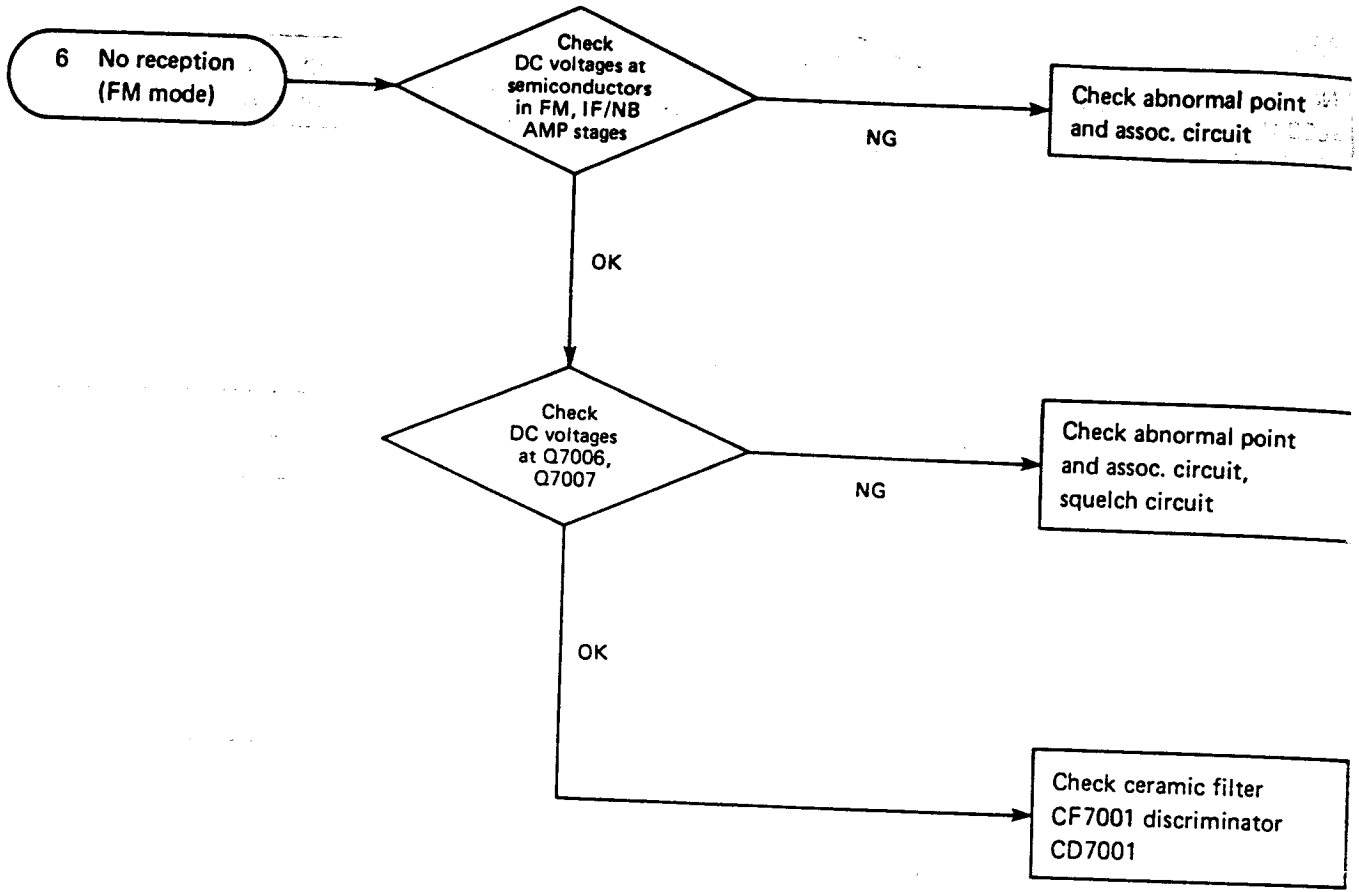

SERVICING

Check or change
Tone control VR1(a),
C1058

8 Tone control not
operative

Check or replace C701,
C7012, L7001, L7002

Squelch circuit
not-operative

noise level
at Pin 6 of
J7001 NG

Check or change squelch
control VR3(a)

(10 mV)

Check
noise level
at Pin 3 of
J7001

NG

Check Q7003, Q7004,
D7003—D7005 and
assoc. circuit




(0—10 mV)


Check
DC voltage
at base of
Q7005


NG

Check Q7005 and
assoc. circuit


(0.44—0.64V)
(Threshold 0.56V)

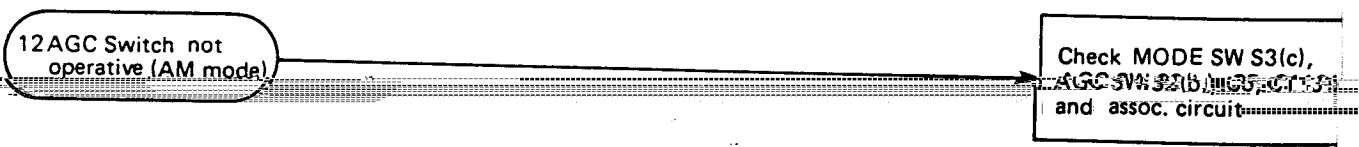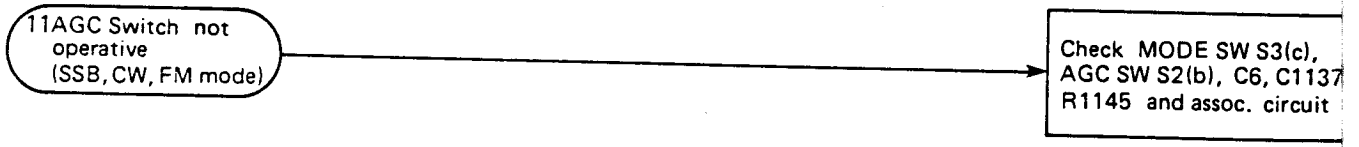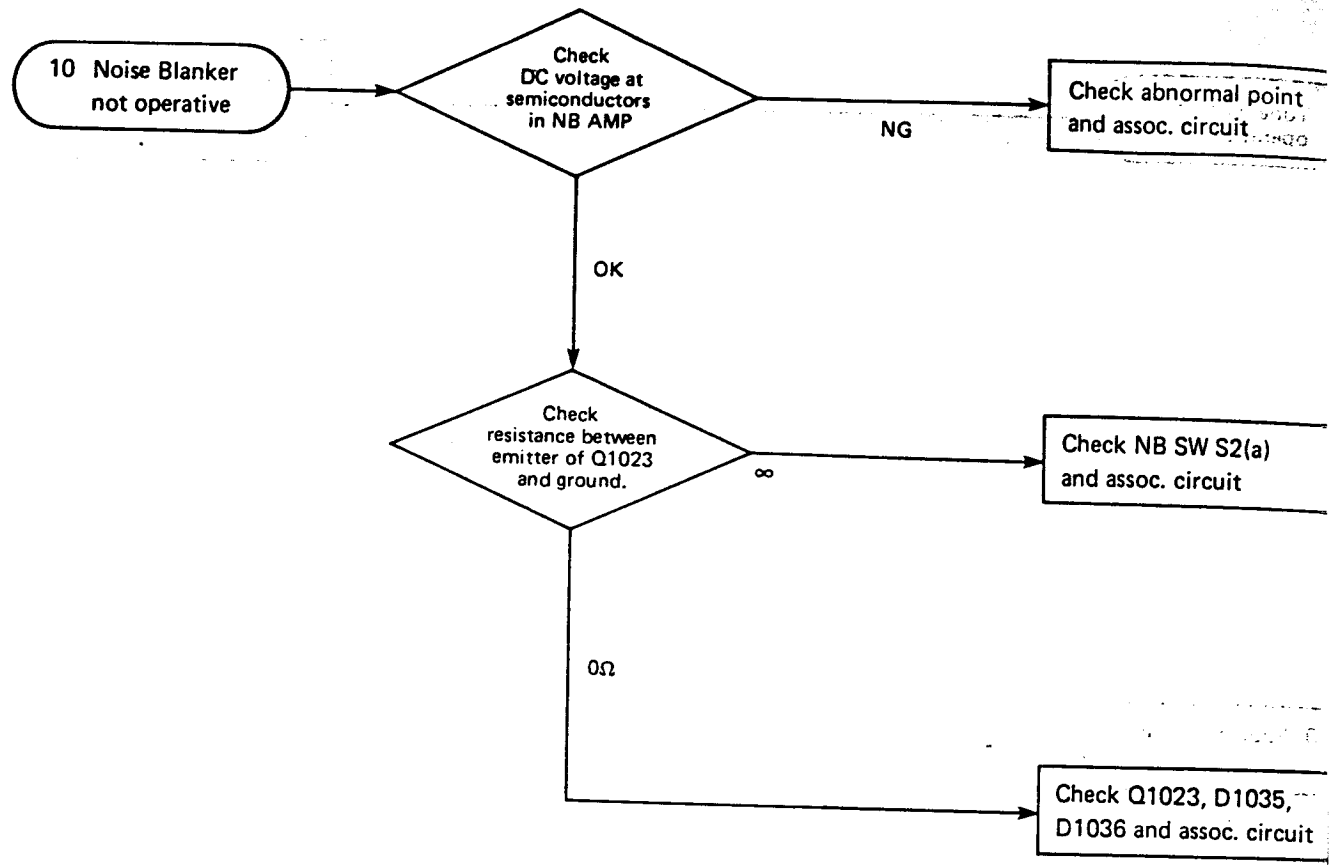

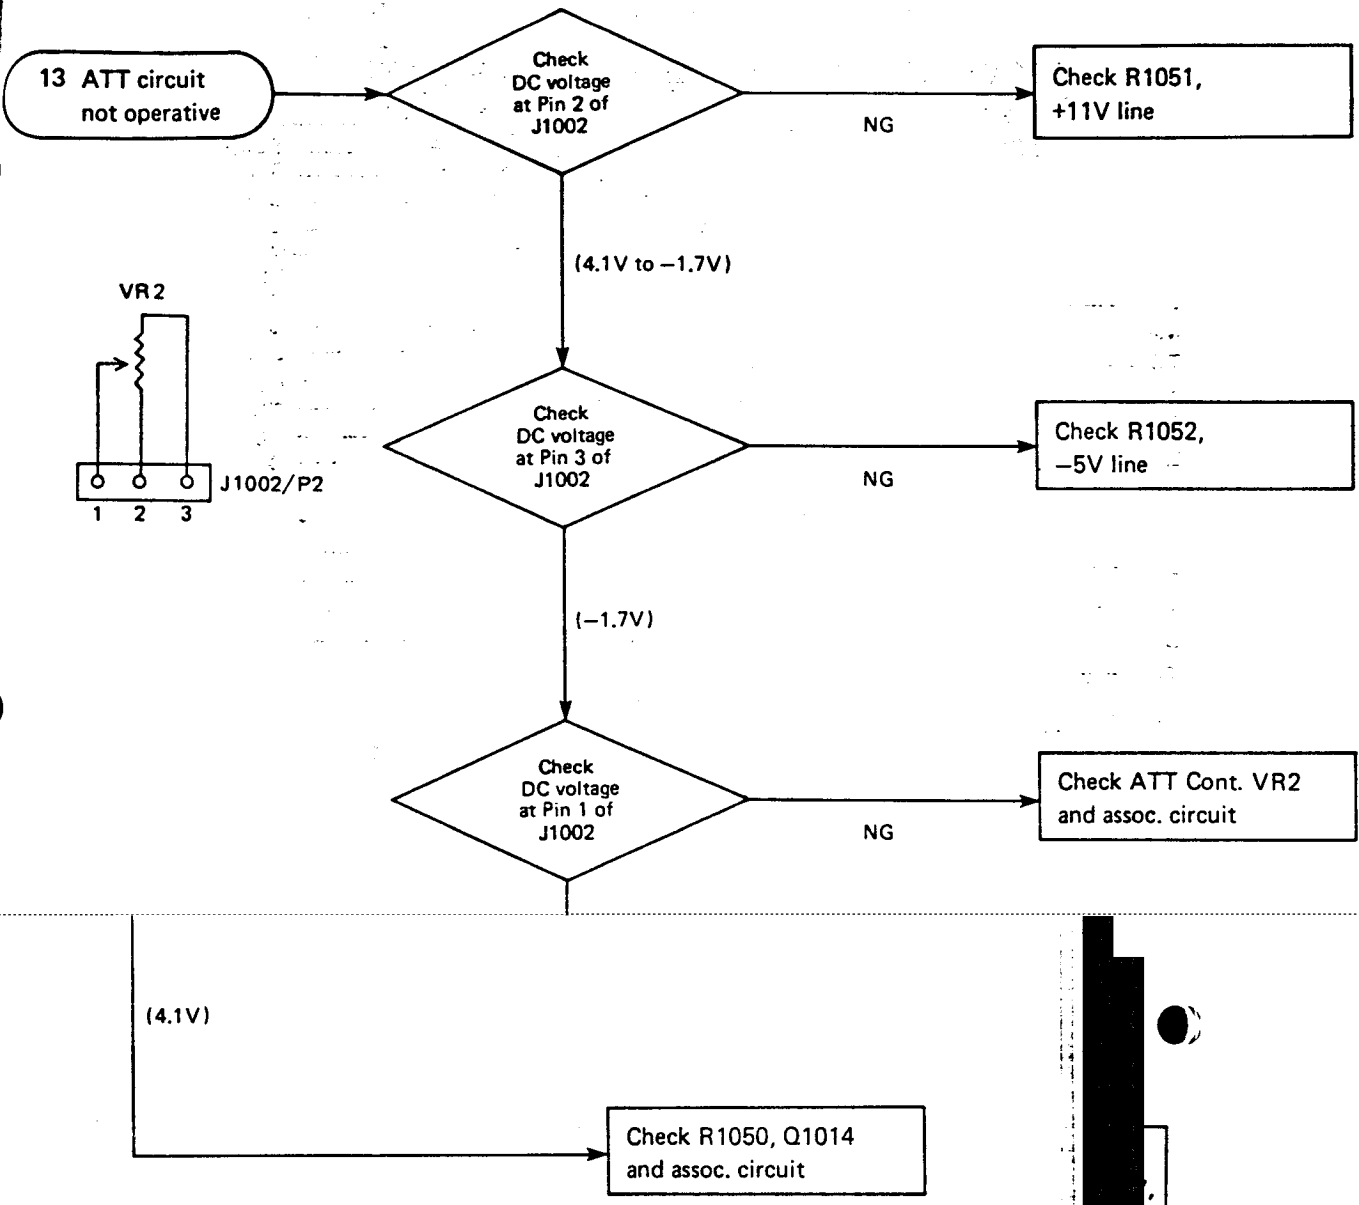

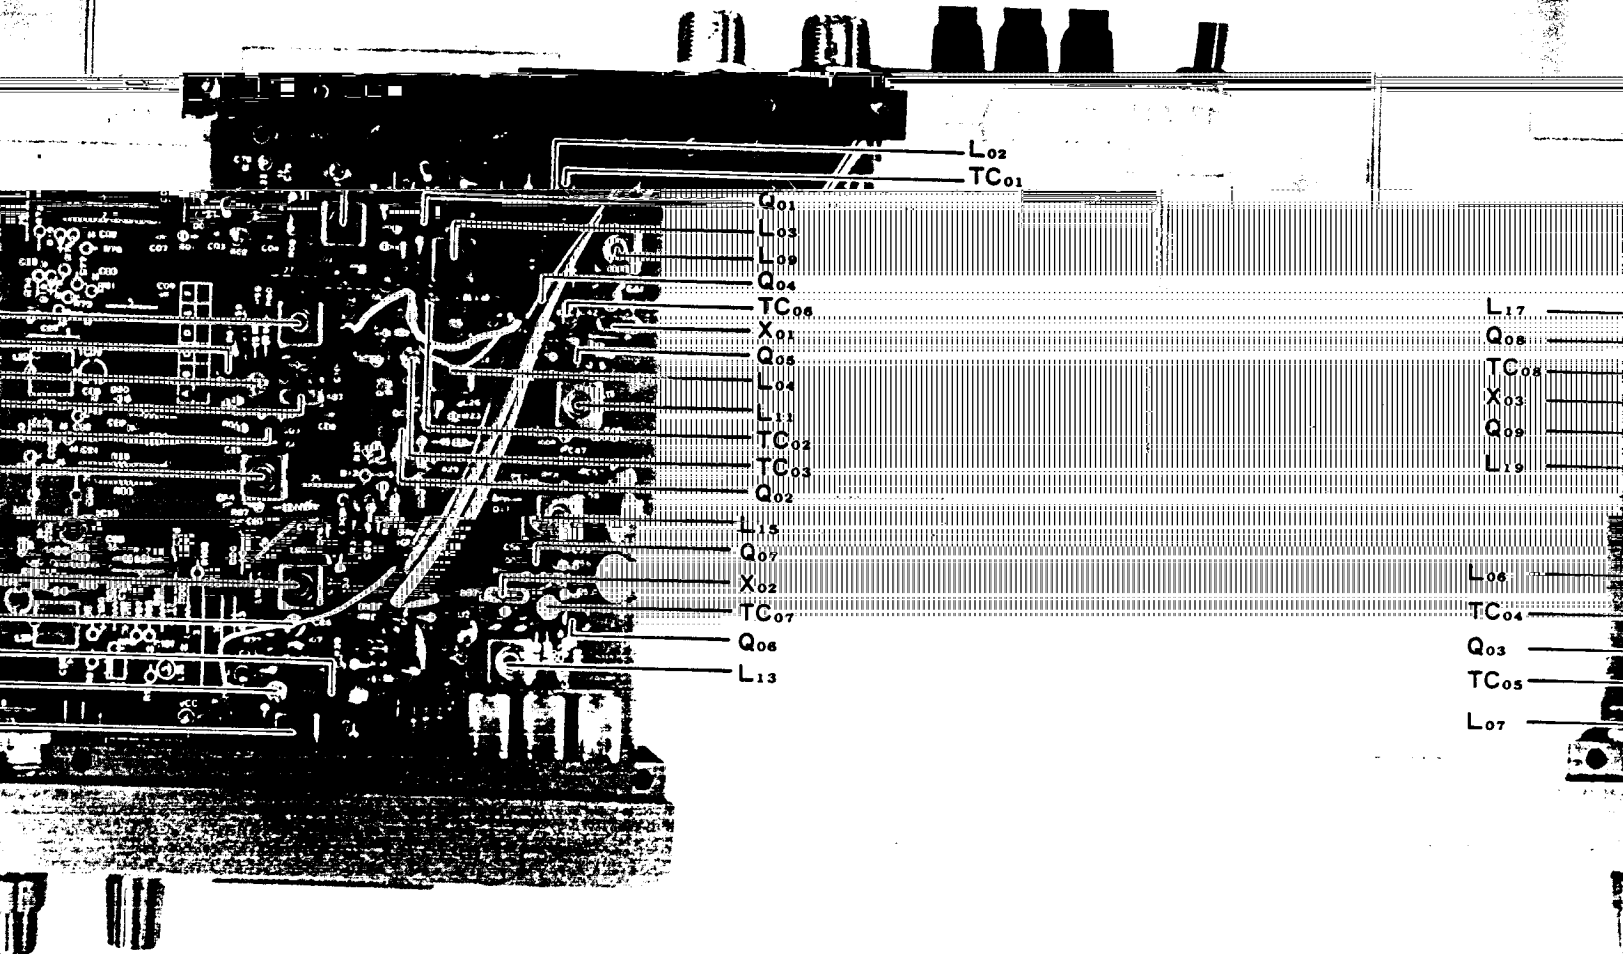

FRV-7700 (Model: A, C)

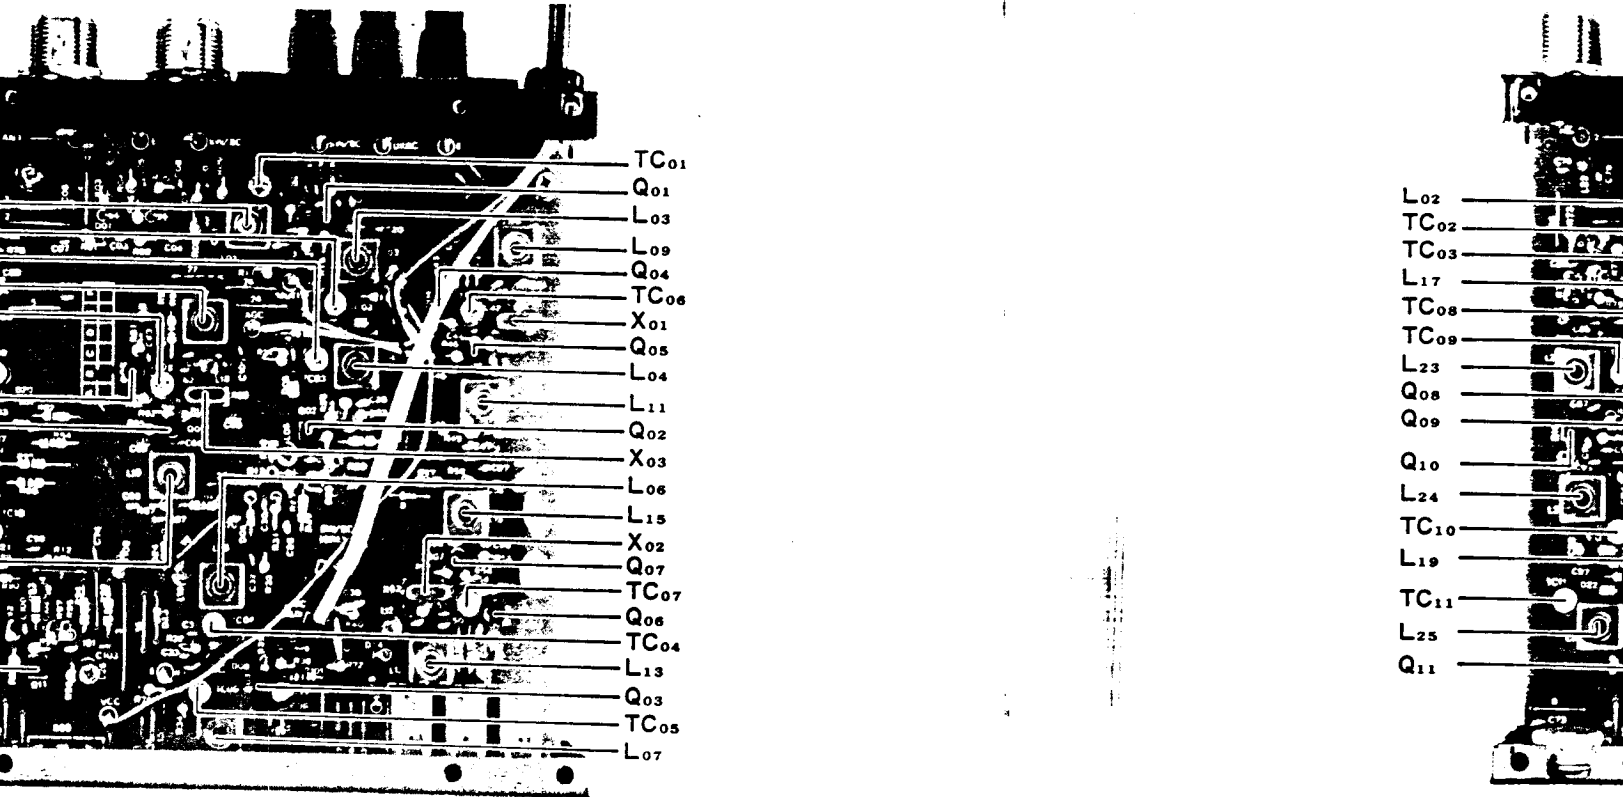

FRV-7700 (Model: B, C, E, F)

PARTS LIST AND ORDERING FORMS

If you live in the United States, you may order parts from Yaesu Electronics Corporation. In other countries, you should order parts from the Yaesu agent for your country. In countries where Yaesu is not currently represented, you may order spare parts directly from Yaesu Musen Company, Ltd. in Tokyo.

When ordering, please specify exact model number of the transceiver that the part is for. Many parts are standard, such as resistors and disc ceramic capacitors, but you should use particular care when ordering such items as electrolytics, tantalum capacitors, and the like.

The parts list to follow identifies the board that the parts belong to, as well as part description. A "Part Number" is also specified, and this number will be used by our parts department to locate the item you require. (See note below.)

Shipment of parts from Yaesu (USA) is usually made by UPS, COD. Allow at least a week for the parts to be processed.

parts are standard, such as resistors and disc ceramic capacitors, but you should use particular care when ordering such items as electrolytics, tantalum capacitors, and the like.

The parts list to follow identifies the board that the parts belong to, as well as part description. A "Part Number" is also specified, and this number will be used by our parts department to locate the item you require. (See note below.)

Shipment of parts from Yaesu (USA) is usually made by UPS, COD. Allow at least a week for the parts to be processed.

PARTS ORDER - EXAMPLE

QUANTITY	RECEIVER IDENTIFICATION	LOCATION	PART NUMBER
1	REC-7700	RB-2469	G380125

JAPAN
0723
Cincinnati, OH 45246

(cut here)

YAESU MUSEN COMPANY, LTD. - C.P.O. BOX 1500, TOKYO, JAPAN
YAESU ELECTRONICS CORPORATION - P.O. Box 49, Paramount, CA 90661
YAESU ELECTRONICS CORPORATION - 9812 Princeton-Glendale Rd., Glendale, CA 91201

ORDER BLANK

QUANTITY	CIRCUIT DESIGNATION

QUANTITY	RECEIVER IDENTIFICATION	LOCATION	PART NUMBER

I authorize shipment via: Best Way Parcel Post
 UPS Other

Ship To:
(Print or Type)

Name: _____
Address: _____
City: _____ State: _____
Country: _____

Zip: _____

YAESU MUSEN COMPANY, LTD. - C.P.O. BOX 1500, TOKYO, JAPAN
 YAESU ELECTRONICS CORPORATION - P.O. Box 49, Paramount, CA 90723
 YAESU ELECTRONICS CORPORATION - 9812 Princeton-Glendale Rd., Cincinnati, OH.45246

ORDER BLANK

QUANTITY	RECEIVER IDENTIFICATION	LOCATION	PART NUMBER	CIRCUIT DESIGNATION

I authorize shipment via: Best Way Parcel Post
 UPS Other

Ship To: Name: _____
 (Print or Type) Address: _____
 City: _____ State: _____ Zip: _____
 Country: _____

(cut here)

YAESU MUSEN COMPANY, LTD. - C.P.O. BOX 1500, TOKYO, JAPAN
 YAESU ELECTRONICS CORPORATION - P.O. Box 49, Paramount, CA 90723
 YAESU ELECTRONICS CORPORATION - 9812 Princeton-Glendale Rd., Cincinnati, OH 45246

ORDER BLANK

QUANTITY	RECEIVER IDENTIFICATION	LOCATION	PART NUMBER	CIRCUIT DESIGNATION

I authorize shipment via: Best Way Parcel Post
 UPS Other

Ship To: Name: _____
 (Print or Type) Address: _____
 City: _____ State: _____
 Country: _____

Zip: _____

REPAIR PARTS

T011 STRAS

CF1002	H3900041	CFM-455J1	R1219,1229,1254	J02245562	Carbon film 1/4W SJ 5.6kΩ
CF1003	H3900240	CFG455H	R1232,1242,1243	J01245562	" " " TJ 5.6kΩ
CF1004	H3900220	LF-H12	R1090,1126,1141,1169,1198	J02245682	" " " SJ 6.8kΩ
RESISTOR					
R1213	J10276339	Carbon composition 1/2W GK 3.3Ω	R1051	J02245822	" " " " 8.2kΩ
R1257	J10276689	" " 1/2W GK 6.8Ω	R1004,1006,1007,1009,1011,1012,1015,1018,1021,1023,1047,1049,1056,1067,1100,1104,1108,1112,1115,1121,1124,1127,1128,1131,1140,1153,1157,1171,1179,1182,1190,1203,1209,1210,1212,1230,1233,1249,1250	J02245103	" " " " 10kΩ
R1163,1248,1252	J00245100	Carbon film 1/4W VJ 10Ω			
R1055,1066,1071,1116,1125,1145,1183,1191,1244,1245	J00245220	" " " " 22Ω			
R1066	J02245220	" " " TJ 22Ω			
R1084	J02245330	" " " SJ 33Ω			
R1063,1114,1123,1181,1189,1258	J02245470	" " " " 47Ω			
R1057,1162,1176,1214	J02245560	" " " " 56Ω	R1048,1111,1187,1207	J01245103	" " " TJ 10kΩ
R1058,1062	J02245680	" " " " 68Ω	R1065,1149	J02245123	" " " SJ 12kΩ

1059, 1075, 1077, 1097, 1098, 1113, 129, 139, 159, 194, 216, 224,	J02245101	" " " TJ 100Ω	R1069,1220	J02245183	15kΩ
10, 16, 10,	J02245101	" " " TJ 100Ω	R1177	J02245183	18kΩ
J02245151	" " " SJ 150Ω	R1088,1193	J02245223		
J02245221	" " " 220Ω	R1165,1204,1227	J02245347		47kΩ
J02245331	" " " 330Ω	R1018,1160,1484,1215	J02245683		68kΩ
J02245391	" " " 390Ω	R1068,1070,1109,1120,1134,1438,1185,1186,1231	J02245104		100kΩ
J02245471	" " " 470Ω	R1067,1234	J02245124		120kΩ
2245561	" " " 560Ω	R1166	J02245154		150kΩ
2245681	" " " 680Ω	R1142,1173,1199	J02245224		220kΩ
2245821	" " " 820Ω	R1208	J01245224		TJ 220kΩ
2245102	" " " 1kΩ	R1080,1091,1152,1156,1172	J02245334		SJ 330kΩ
1245102	" " " TJ 1kΩ	R1147	J02245394		" " " 390kΩ
2245122	" " " SJ 1.2kΩ	R1043-1045	J02245564		" " " 560kΩ
2245152	" " " 1.5kΩ	R1050	J02245225		" " " 2.2MΩ
2245222	" " " 2.2kΩ	BLOCK RESISTOR			
2245222	" " " TJ 2.2kΩ	RB1001	J40900019	RA1/16K8R-100kΩ	100kΩx8
2245332	" " " SJ 3.3kΩ	RB1002	J40900020	RA1/16K5R-100kΩ	100kΩx5
2245472	" " " 4.7kΩ	POTENTIOMETER			
1245472	" " " TJ 4.7kΩ	VR1003	J51740501	EVNB3AA00B52	500Ω
1245512	" " " 5.1kΩ	VR1002	J50702202	EVL50A00B23	2kΩ
2245562	" " " 5.6kΩ	VR1001	J51721502	EVL53A00B53	5kΩ
		VR1004	J51721203	EVL53A00B24	20kΩ
		CAPACITOR			
		C1213	K00172010	DD104SL010C50V02	50WV SL 1pF
		C1067	K00172030	DD104SL030C50V02	" " 3pF
		C1068	K00173070	DD104SL070D50V02	" " 7pF
		C1010,1012	K00175120	DD104SL120J50V02	" " 12pF
		C1017,1021	K00175180	DD104SL180J50V02	" " 18pF
		C1079	K00175220	DD104SL220J50V02	" " 22pF
		C1081,1018,1020	K00175270	DD104SL270J50V02	" " 27pF
		C1026,1030,1147,1151	K00175330	DD104SL330J50V02	" " 33pF

R1024, 1072, 1082, 1093, 1094, 1117, 1122, 1129, 1135, 1150, 1155, 1180, 1188, 1197, 1201, 1218, 1223, 1225, 1236	R1005,1008,1010,1013,1014,1017,1018,1020,1022,1083,098,1102,1106,1132
R1053	R1054,1222
R1161,1168,1256	R1109
R1086,1087,1221	R1246
R1130,1195,1247	R1081,1092,1143,1200,1206,1235,1253
R1002,1003,1046,1060,1061,1076,1078,1136,1217	R1144
	R1137
	R1095
	R1089,1148,1151,1154,1158,1164,1170,1205
	R1237-1241
	R1025,1028,1031,1034,1037,1040,1226,1251,1255
	R1001,1085,1099,1103,1107,1110,1202,1228
	R1146
	R1052
	R1026,1027,1039,1030,1032,1035,1035,1036,1038,1039,1041,1042,1097,1101,1105,1175,1192,1196

REPAIR PARTS

C1027,1029,1212	K00175470	DD104SL470J50V02 50WV SL 47pF	C1013,1016,1022, 1025,1031,1034, 1040,1043,1049, 1055,1064,1065, 1075,1077,1083, 1088,1096,1097, 1130,1131,1133, 1135,1139,1155, 1157,1192,1195, 1197,1198,1207, 1208,1210,1211, 1217,1219,1220, 1225,1226	K40120106	16RL10	16W	10μF
C1019	K00175560	DD104SL56GJ50V02 " " 56pF					
C1001,1002,1036, 1038	K00175680	DD104SL680J50V02 " " 68pF					
C1035,1039	K00175820	DD104SL820J50V02 " " 82pF					
C1162	K10176101	DD104YB101K50V02 " 100pF					
C1028,1044,1048, 1051,1054,1056	K00175121	DD105SL121J50V02 " SL 120pF	C1223,1224	K40179014	50RE10	50WV	10μF
C1153	K00175151	DD104SL151J50V02 " " 150pF	C1137,1163,1239	K40129002	16RE47	16WV	47μF
			C1230	K40120107	16RL100	"	100μF
C1045,1047	K00175181	DD104SL181J50V02	C1161	K40149010	25RE330	25WV	330μF
			C1164	K40120477	16RL470	16WV	470μF
C146,150	K00175221	DD107SL221J50V02 " " 220pF	C199	K40120108	16R-1000	16WV	1000μF
C1037,1145,1149	K00175271	DD107SL271J50V02 " " 270pF	C1001-1003	K91000016	TRIMMER CAPACITOR	20V	500pF
C1046,1098	K10176371	DD104YB371K50V02 " 470pF	L1033	L1190113	FL3H R22M		0.22μH
C1052,1053,1221, 1232	K10176561	DD104YB561K50V02 " 660pF	L1001	L1190109	FL3H R33M		0.33μH
C1135,1186,1227	K10176102	DD104YB102K50V02 " 0.004μF	L1003	L1190009	FL4H R33M		0.33μH
C1141	K50177223	50F2U223M " 0.002μF	L1004	L1190010	FL4H R39K		0.39μH
C1128	K10176392	DD107YB392K50V02 " 0.002μF	L1003	L1190107	FL4H R39K		0.39μH
C1060,1069,1078, 1080,1081,1084, 1089,1094,1095, 1101,1111-1113, 1117,1118,1122, 1123,1125,1143, 1167,1173,1176, 1179,1182,1184, 1187-1189,1193, 1200,1202,1205, 1214,1218,1233	K10170103	DD201YF103Z5L5 " 0.01μF	L1009	L1190101	FL4H R39K		0.39μH
C1229	K50177223	50F2U223M " 0.022μF	L1020	L1190014	FL4H R100K		10μH
C1003,1005,1007, 1008,1014,1015, 1023,1024,1032, 1033,1041,1042, 1050,1056-1059, 1061-1063,1066, 1070,1072,1074, 1076,1082, 1085-1087, 1090-1093,1099, 1100,1102-1110, 1114-1116, 1119-1121,1124, 1126,1127,1129, 1132,1134,1136, 1140,1154,1156, 1168-1172,1174, 1175,1177,1178, 1180,1181,1183, 1191,1196,1201, 1203,1206,1215, 1216,1228, 1232,1234,1235	K13170473	DB207YF473Z5L5 " 0.047μF	L1008,1042	L1190112	FL4H 120K		12μH
C1144,1159	K50177473	50F2U473M " 0.047μF	L1014,1016	L1190021	FL5H 180K		18μH
C1209	K23170003	RPE112F104V50V " 0.1μF	L1013,1017	L1190023	FL5H 220K		22μH
	K50177104	50F2U104M " 0.1μF	L1025	L1190073	FL5H 270K		27μH
			L1018,1022	L1190025	FL5H 330K		33μH
			L1019,1021	L1190027	FL5H 390K		39μH
			L1024,1026,1028, 1030	L1190031	FL5H 680K		68μH
			L1023,1027	L1190016	FL5H 101K		100μH
			L1029	L1190018	FL5H 121K		120μH
			L1039-1042	L1190020	FL5H 151K		150μH
			L1036	L1190001	EL0710 251K		250μH
			L1032	L1190114	FL5H 821K		820μH
			L1002,1034,1035, 1038,1043,1044	L1190017	FL5H 102K		1mH
			L1031	L1190040	S4 1mH		1mH
				L9190016	Shield Case (7mm)		
					TRANSFORMER		
			T1001	L0020789A			
			T1002	L0020863			
			T1003	L0020883			
			T1004,1007	L0020858			
			T1005	L0020857			
			T1006	L0020858			
			T1008	L0020860			
			T1009,1010	L0020861			

REPAIR PARTS

		CONNECTOR			
J1003,1006,1007,1013,1014,1018	P0090120	PI051-02M	R2048,2050,2053,2055,2061,2063,2067,2070,2072,2075,2076,2080,2081,2088,2098,2102,2107,2108,2114,2115,2120,2130,2135,2140,2145-2147	J02245101	Carbon film 1/4W SJ 100Ω
J1002,1010,1015,1020	P0090121	PI051-03M			
J1001,1004,1008	P0090132	PI051-04M			
J1005,1009,1011	P0090133	PI051-05M			
J1012,1017	P0090135	PI051-07M			
J1016	P0090136	PI051-08M	R2077	J02245151	" " " " 150Ω
J1019	P1090196	FJ-10-001	R2117	J02245181	" " " " 180Ω
			R2062, 2124	J02245221	" " " " 220Ω
	Q5000011	Wrapping Terminal C	R2089,2142,2144	J02245331	" " " " 330Ω
			R2041,2049,2054,2066,2071,2082,2095,2109,2116	J02245391	" " " " 390Ω
			R2013,2020,2027,2034,2104,2136	J02245471	" " " " 470Ω
			R2094,2122	J02245561	" " " " 560Ω
			R2015,2022,2029,2036,2037,2039,2058,2110,2119,2126,2131,2132	J02245102	" " " " 1kΩ

PLL UNIT

Symbol No.	Part No.	Description			
PB-2170A	F0002170A	Printed Circuit Board			
	C0021700	P.C.B with Components			
			R2091,2137	J02245152	" " " " 1.5kΩ
		TRANSISTOR, IC			
Q2004-2007	G3107331Q	TR 2SA733A-Q	R2005-2008,2038,2073,2096,2118,2125,2134	J02245222	" " " " 2.2kΩ
Q2016	G3305351	" 2SC535A			
Q2026,2027	G3309000E	" 2SC900E	R2138,2148,2149	J02245272	" " " " 2.7kΩ
Q2001,2002,2008-2011,2014,2015,2018,2020-2024,2028,2029,2031,2032,2037,2039,2040	G3309451Q	" 2SC945A-Q	R2057,2060,2092,2093,2097	J02245472	" " " " 4.7kΩ
Q2012	G3310473	" 2SC1047C	R2011,2018,2025,2032,2046,2069,2079,2103,2105,2112,2129	J02245103	" " " " 10kΩ
Q2044,2045	G3313840R	" 2SC1384R	R2012,2019,2026,2033,2047,2056,2059,2068,2078,2101,2106,2113,2128	J02245223	" " " " 22kΩ
Q2017,2035	G3313930L	" 2SC1393L			
Q2034	G3316740L	" 2SC1674L			
Q2013	G3319590Y	" 2SC1959Y			
Q2043	G3408820Q	" 2SD8820			

Q2042	G1090153	IC MB8718	R2002,2004,2086,2087	J02245471	" " " " 47kΩ
Q2041	G1090311	" MB84040B			
Q2036	G1090296	" HD10551	R2074	J02245683	" " " " 68kΩ
Q2025	G1090087	" MC4044P	R2001,2003,2009,2010,2016,2017,2023,2024,2030,2031,2051,2065,2090,2099,2100,2111,2133	J02245104	" " " " 100kΩ
Q2038	G1090312	" MC14504BCP			
Q2003	G1090128	" MC14556BCP			
Q2019,2030,2033	G1090012	" SN16913P			
			R2127	J02245154	" " " " 150kΩ
		DIODE			
D2001-2020	G2090027	Si 1SS53			
D2021-2025	G2090043	Varactor MV-104	RB2001	J40900017	BLOCK RESISTOR RA1/16-6R1MΩ 1/16W 1MΩx6
D2027,2028	G2090156	Zener RD5.6EB2			
D2026	G2090155	Zener RD9.1EB2			
			C2048,2062	K00179001	CAPACITOR DD104SL0R5C50V02 50WV SL 0.5pF
		CRYSTAL			
X2001	H0102337	HC-18/U 47.6MHz	C2085,2111,2127	K00172010	DD104SL010C50V02 " " 1pF
X2002	H0102338	" 6.4MHz	C2148	K00172020	DD104SL020C50V02 " " 2pF
		RESISTOR			
R2139	J10276479	Carbon composition 1/2W TJ 4.7Ω	C2034,2045	K00172030	D104SL030C50V02 " " 3pF
R2123,2141,2143	J02245100	Carbon film 1/4W SJ 10Ω	C2070,2073,2081,2112,2139	K00172050	DD104SL050C50V02 " " 5pF
R2083-2085	J02245150	" " " " 15Ω			
R2040,2043	J02245330	" " " " 33Ω			
R2044	J02245560	" " " " 56Ω	R2070,2072,2108	K06172050	DD104UJ050C50V02 " " UJ 5pF
R2121	J02245820	" " " " 82Ω	C2049,2086	K00173060	DD104SL060D50V02 " " SL 6pF
R2014,2021,2028,2035,2042,2045	J02245101	" " " " 100Ω			

REPAIR PARTS

C2108	K06173060	DD104UJ060D50V02 50WV UJ 6pF	C2163,2166,2167, 2172,2177,2178, 2182,2184,2186, 2188-2192	K13170473	DB207YF473Z5L5 50WV 0.047μF
C2142	K00173080	DD104SL080D50V02 SL 8pF			
C2148	K00175120	DD104SL120J50V02 SL 12pF	2162,2179		
C2033,2128,2141	K00175150	DD104SL150J50V02 " " 15pF	C2012,2018,2025, 2030	K40109002	10RE47 10WV 47μF
C2144	K00175180	DD104SL180J50V02 " " 18pF	TC2001,2002	K91000029	TRIMMER CAPACITOR ECV1ZW20x53 20pF
C2040,2042,2055, 2058,2082,2149, 2175	K00175220	DD104SL220J50V02 " " 22pF	L2002,2003,2005	L1190113	INDUCTOR FL-3H R22M 0.22μH
C2169	K02179009	DD104CH220J50V02 CH 22pF	L2001,2004	L1190011	FL-4H R47M 0.47μH
C2054	K06175220	DD104UJ220J50V02 " UJ 22pF	L2037	L1190013	FL-4H R68M 0.68μH
C2039,2041,2145	K00175270	DD104SL270J50V02 " SL 27pF	L2010-2012	L1190009	FL-4H 3R3M 3.3μH
C2143	K00179007	DD104SL300J50V02 " " 30pF	L2031	L1190014	FL-5H 100K 10μH
C2009,2016,2023, 2029,2107	K06175330	DD104UJ330J50V02 " UJ 33pF	L2028,2029	L1190025	FL-5H 330K 33μH
C2147	K00179008	DD104SL360J50V02 " SL 36pF	L2021,2022	L1190027	FL-5H 390K 39μH
C2077,2078	K02179014	DD106CH360J50V02 " CH 36pF	L2006,2007,2015	L1190029	FL-5H 470K 47μH
	K06175390	DD104UJ390J50V02 " UJ 39pF	L2008,2009,2014, 2016,2020,2023, 2030,2033,2035	L1190020	FL-5H 151K 150μH
C2007,2014,2021, 2027	K06175470	DD104UJ470J50V02 " " 47pF	L2013,2017-2019, 2032,2034,2036	L1190017	FL-5H 102K 1mH
C2119,2121	K00179510	DD104SL510J50V02 " SL 51pF	L2024,2026	L0020882	L.P.F
C2120	K00175101	DD105SL101J50V02 " " 100pF	L2025	L0020871	L.P.F
C2170,2171	K02175151	DD109CH151J50V02 " CH 150pF	L2027	L0020873	L.P.F
C2133	K30176271	Z17D271K05 " 270pF			
C2150	K10176391	DD104YB391K50V02 " 390pF			
C2061,2156	K12171102	DD105E102P50V02 " 0.001μF			TRANSFORMER

CONNECTOR	
P0090120	PI051-02M
P0090121	PI051-03M
P0090132	PI051-04M
P0090133	PI051-05M
P0090136	PI051-08M
P0090140	PI051-12M
Q5000011	Wrapping terminal C

C2001,2011,2013, 2018,2020,2024, 2026,2030,2032, 2035-2038,2046, 2047,2050-2053, 2056,2059, 2064-2069, 2074-2076,2080, 2083,2084, 2081-2091, 2093-2096,2098, 2100,2109, 2113-2118,2124, 2125,2129,2131, 2132,2134, 2136-2138,2140, 2152,2153,2155,	K13170103	DB201YF103Z5L5 " 0.01μF	J2004-2006,2008, 2009 J2007 J2010 J2001 J2002 J2003
C2002-2006,2057, 2060,2079,2092, 2097,2099,2104, 2126,2130,2135, 2154,2157,2161	K13170473	DB207YF473Z5L5 " 0.047μF	

2158,2160,2164,
2165,2172,2174,
2176,2181,2193

FM UNIT			INDUCTOR		
Symbol No.	Part No.	Description	Symbol No.	Part No.	Description
PB-2176	F0002176	Printed Circuit Board	L7001,7002	L1190017	FLSH 102K 1mH
	C0021760	P.C.B with Components			
			J7001	P0090167	CONNECTOR PI011-08M 8P
		TRANSISTOR & IC			
Q7001,7003-7007	G3309451Q	TR 2SC945A-Q			
Q7002	G1090059	IC TA-7061AP			
		DIODE			
D7001-7004	G2001880F	Ge 1S188FM			
D7005	G2090027	Si 1SS53			
			VFO UNIT		
			Symbol No.	Part No.	Description
			PB-2172	F0002172	Printed Circuit Board
				C0021720	P.C.B with Components
TH7001	G9090001	SDT-250			
					TRANSISTOR
CF7001	H3900030	LFB-15	Q3001-3003	G3309451Q	2SC945A-Q
					RESISTOR

Symbol No.	Part No.	Description	Symbol No.	Part No.	Description
R3007,3010-3012,3016	J0224510	Carbon film 1/4W 33Ω			
		" " " " 100Ω			
R3004,3008,3009,3014	J02245102	" " " " 1kΩ			
R3003	J02245222	" " " " 2.2kΩ			
R3001	J02245183	" " " " 18kΩ			
R3005	J02245223	" " " " 22kΩ			
R3002	J02245333	" " " " 33kΩ			
R3006	J02245104	" " " " 100kΩ			
R3013	J02245154	" " " " 150kΩ			
			CAPACITOR		
C3008	K02173100	DD104CH100D50V02 50WV CH10pF			
C3003	K06179009	DD105UJ560J50V02 " " 56pF			
C3004	K02175101	DD107CH101J50V02 " " 100pF			
C3002	K02179019	DD107CH910J50V02 " CH 91pF			
C3007	K30176681	LCQ18681K05 " 680pF			
C3013,3014	K10176681	DD104B681K50V02 " 680pF			
C3006	K30209001	DM19D102K1 100WV 1000pF			
C3001	K30209006	DM19D242K1 " 2400pF			
C3005,3010,3012	K13170103	DB201YF103Z5L5 50WV 0.01μF			
C3009,3011,3015,3016	K13170473	DB207YF473Z5L5 " 0.047μF			
			VARIABLE CAPACITOR		
VC3001	K90000034	C-613A132			
			TRIMMER CAPACITOR		
TC3001	K91000013	ECV-12W20x32 50pF			
			INDUCTOR		
L3001	L0020062	R12-5775			
L3003	L1190009	FL4H 3R3M 3.3μH			
L3002	L1190016	FL5H 101K 100μH			
			LAMP		
PL3001	Q1000043A	K0298-4-0 12V, 100mA			
			TERMINAL		
	Q5000020	MS-60121			

Symbol No.	Part No.	Description	Symbol No.	Part No.	Description
CD7001	H7900010	455D			
			RESISTOR		
R7022	J02245470	Carbon film 1/4W			
R7003,7005,7007,7012,7029,7030	J02245101	" " "			
R7017	J02245221	" " "			
R7001	J02245102	" " "			
R7019,7023	J02245152	" " "			
R7004,7006,7008,7011	J02245222	" " "			
R7028	J02245472	" " "			
R7013,7015,7018	J02245562	" " "			
R7026,7027	J02245682	" " "			
R7009,7010,7021,7031,7032	J02245103	" " "			
R7020,7024	J02245823	" " "			
R7025	J02245104	" " "			
R7002	J02245224	" " "			
R7014,7016	J02245564	" " "			
			CAPACITOR		
C7017	K00179005	DD104SL200J50V02 50WV S			
C7027	K00175101	DD105SL101J50V02 " "			
C7010,7016	K12171102	DD105E102P50V02 " "			
C7028	K13170472	DB201YF472Z5L5 " "			
C7001,7003,7004,7009,7014,7015,7019,7026,7029	K13170103	DB201YF103Z5L5 " "			
C7018	K13170223	DD109F223Z50V02 " "			
C7011,7012	K50177223	50F2U223M " "			
C7002,7005-7008,7020	K13170473	DB207YF473Z5L5 " "			
C7013	K70167224	CS15E1VR22M 35WV			
C7024,7025	K40170105	50RL1 50WV			
C7022,7023	K40140475	25RL4.7 25WV			
C7021,7030,7031	K40120106	16RL10 16WV			


REPAIR PARTS


R6052	J02245393	Carbon film 1/4W SJ 39kΩ				INDUCTOR
R6002,6003,6006,6007	J02245473	" " " " 47kΩ	L6006	L1190005	FL4H IR0M	1μH
R6008,6032,6044	J02245104	" " " " 100kΩ	L6004,6008	L1190009	FL4H 3R3M	3.3μH
R6037	J02245124	" " " " 120kΩ	L6005,6007	L1190111	FL4H 5R6K	5.6μH
R6045	J02245154	" " " " 150kΩ	L6001,6002,6009,6012,6014	L1190020	FL5H 151K	150μH
R6057	J02245184	" " " " 180kΩ	L6003,6010,6016	L1190017	FL5H 102K	1mH
R6061	J02245224	" " " " 220kΩ	L6011	L2030067B	S/N COIL	3mH
			L6013,6015	L1190035	FL7H 392J	3.9mH
		BLOCK RESISTOR				
RB6001	J40900018	RA1/16K9R100kΩ 1/16W 100kΩx9	T6001	L0020110		TRANSFORMER R12-4797A
			T6002	L0020864		VCO COIL
		CAPACITOR	T6003	L0020865		"
C6044	K06173060	DD104UJ060J50V02				

			50WV UJ 6pF			CONNECTOR
C6001,6002	K02173070	DD104CH070D50V02	J6006	P0090120	PI051-02M	2P
		" CH 7pF	J6004	P0090132	PI051-04M	4P
C6011,6027,6069	K00175120	DD104SL120J50V02	J6001	P0090133	PI051-05M	5P
		" SL 12pF	J6005	P0090136	PI051-08M	8P

DD104SL270J50V02	J6003	P0090140	PI051-12M	12P	C6012	K00175270
" " 27pF	J6002	P0090141	PI051-13M	13P	C6043	K06175330
DD104UJ330J50V02		Q5000011	Wrapping terminal C		C6067	K00175560
D104SL560J50V02					C6049	K02175560
" SL 56pF					C6045	K06179009
DD106CH560J50V02					C6046	K02175151
" CH 56pF					C6023,6025	K10176561
DD105UJ560J50V02					C6022,6026	K10176821
" UJ 56pF					C6003,6004,6006,6007,6008,6010,6013,6014,6030,6031,6068	K12171102
DD109CH151J50V02					C6024	K10179022
" " 150pF					C6009,6016-6021,6029,6033,6034,6038,6042,6047,6048,6054-6059,6061	K14179002
DD104B561K50V02					C6053	K50177103
" 560pF		R3054620	FOOT H-30		C6005,6036,6051,	K13170473
DD104B821K50V02						
" 820pF		Q0000002	Fuse 1A (AC100-120V)			
DD105E102P50V02		Q0000001	0.5A (AC200-240V)			
" 0.001μF			AC POWER CORD			
		T9013280	2 wire, 2 prong plug DC-546-007			
2222-660-02272		T9013282	3 wire, 3 prong plug (UL) UC-904-016			
" 2700μF		T9013284	3 wire, 2 prong EU plug EC-407-007			
RD204YM0.01μF		T9013283	3 wire, 3 prong Australian plug SC-411-001			
" 0.01μF						
50F2U103M						
DB207YF473Z5L5		S3000023	Mini Belt C			
6070,6073						

C6064	K23170003	RPE112F104Z50V				
		"	0.1μF			
C6050	K54200001	B32561-A1105J				
		100WV	1μF			
C6015,6032,6035,6039,6060,6066	K40120106	16RL10	16WV	10μF		
6062,6065	K40120226	16RL22	16WV	22μF		
C6063,2065	K40149003	25RE100	25WV	100μF		
C6041	K40120227	16RL220	16WV	220μF		
C6040	K40129031	16RC470	"	470μF		
C6037	K40089004	6.3RE1000	6.3WV	1000μF		
		MODULE				
RCM6001	Q80000005	RK1/16R-11R100kΩ/103Z50 (1/16W 100kx11, 50WV 0.01μFx11)				



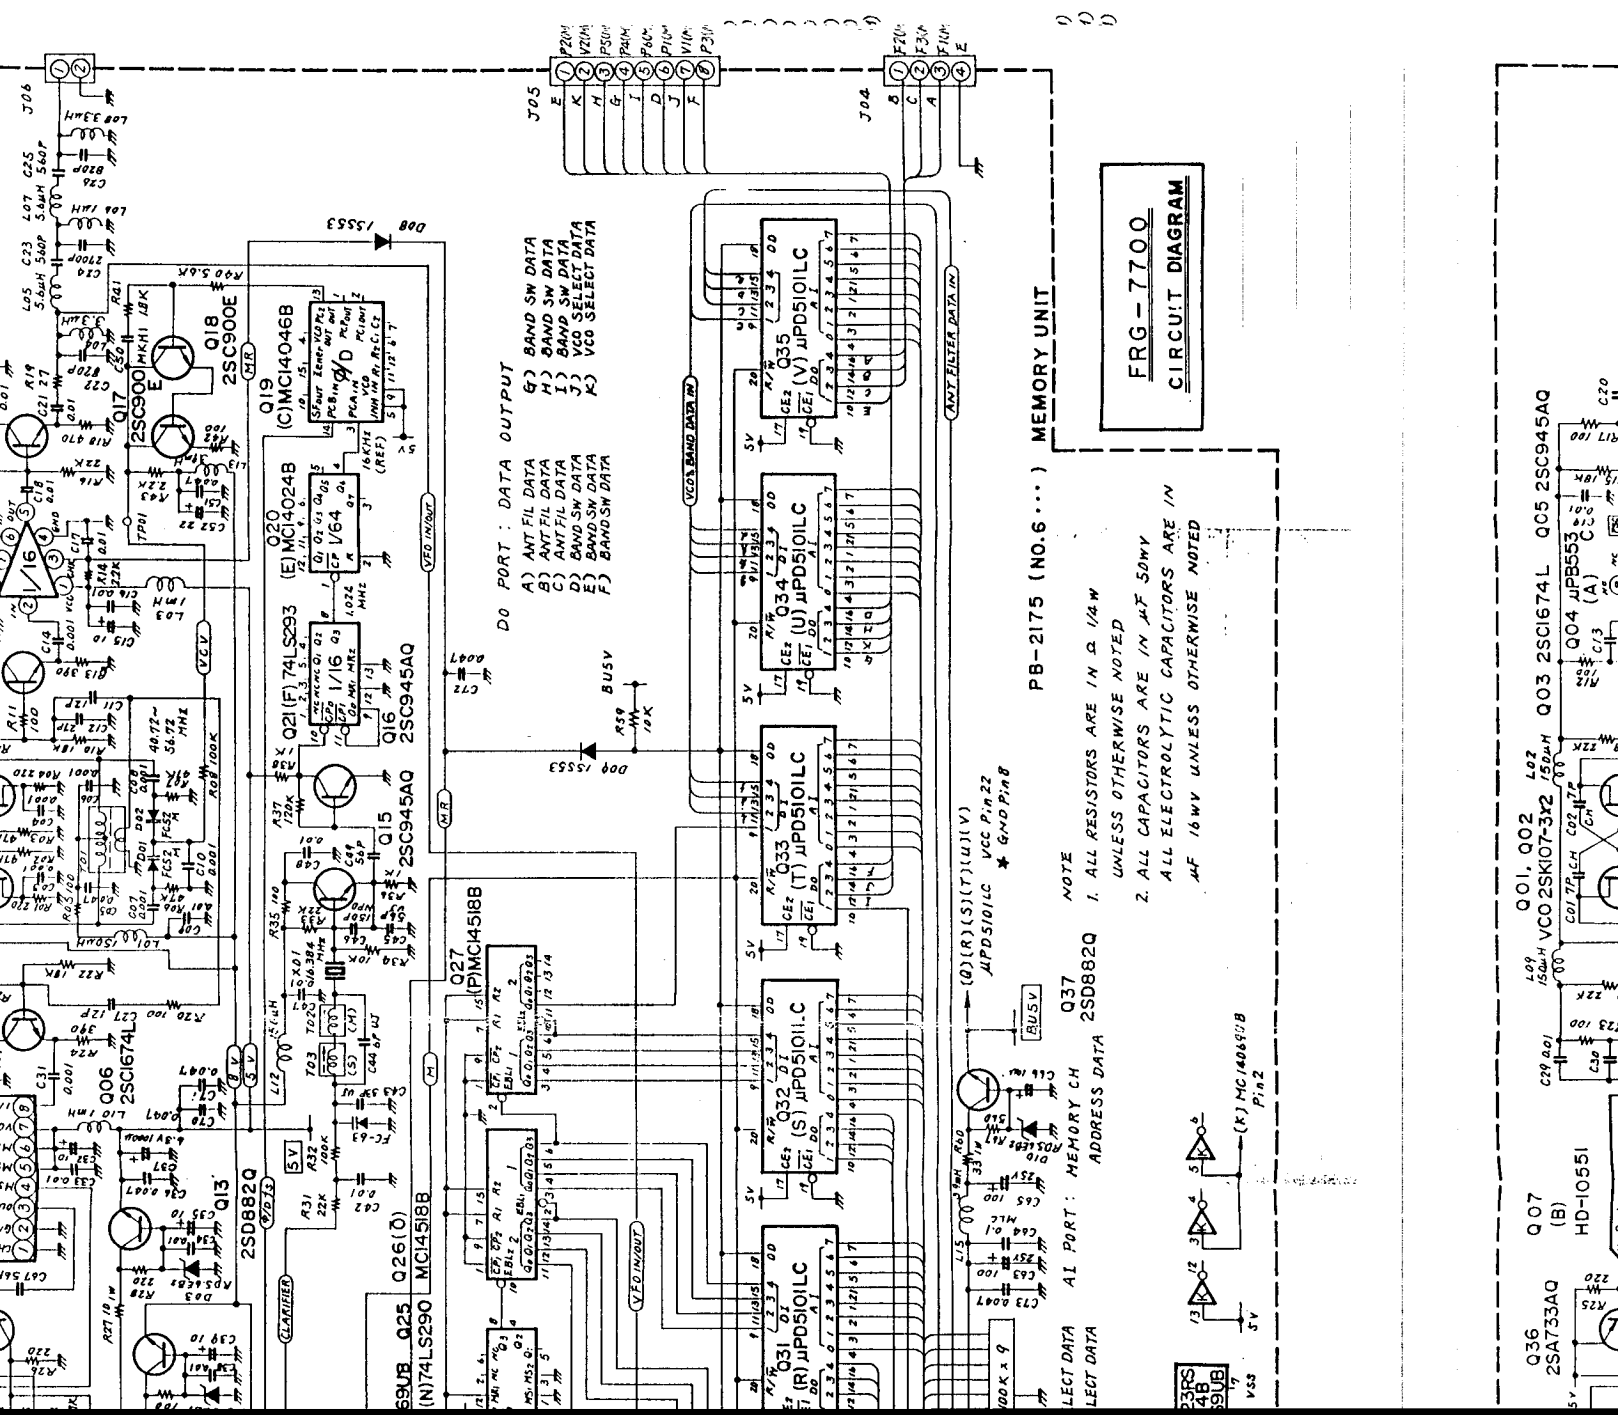

**FRG-7700
CIRCUIT DIAGRAM**

DO PORT: DATA OUTPUT

A) ANT FIL DATA
 B) ANT FIL DATA
 C) ANT FIL DATA
 D) BAND SW DATA
 E) BAND SW DATA
 F) BAND SW DATA
 G) BAND SW DATA

MEMORY UNIT



PB-2175 (NO.6...)


NOTE

1. ALL RESISTORS ARE IN Ω 1/4W UNLESS OTHERWISE NOTED
2. ALL CAPACITORS ARE IN μ F 50V ALL ELECTROLYTIC CAPACITORS ARE IN μ F 16V UNLESS OTHERWISE NOTED

Q37 MEMORY CH
 ADDRESS DATA 25D882Q

LECT DATA AI PORT:
 LECT DATA



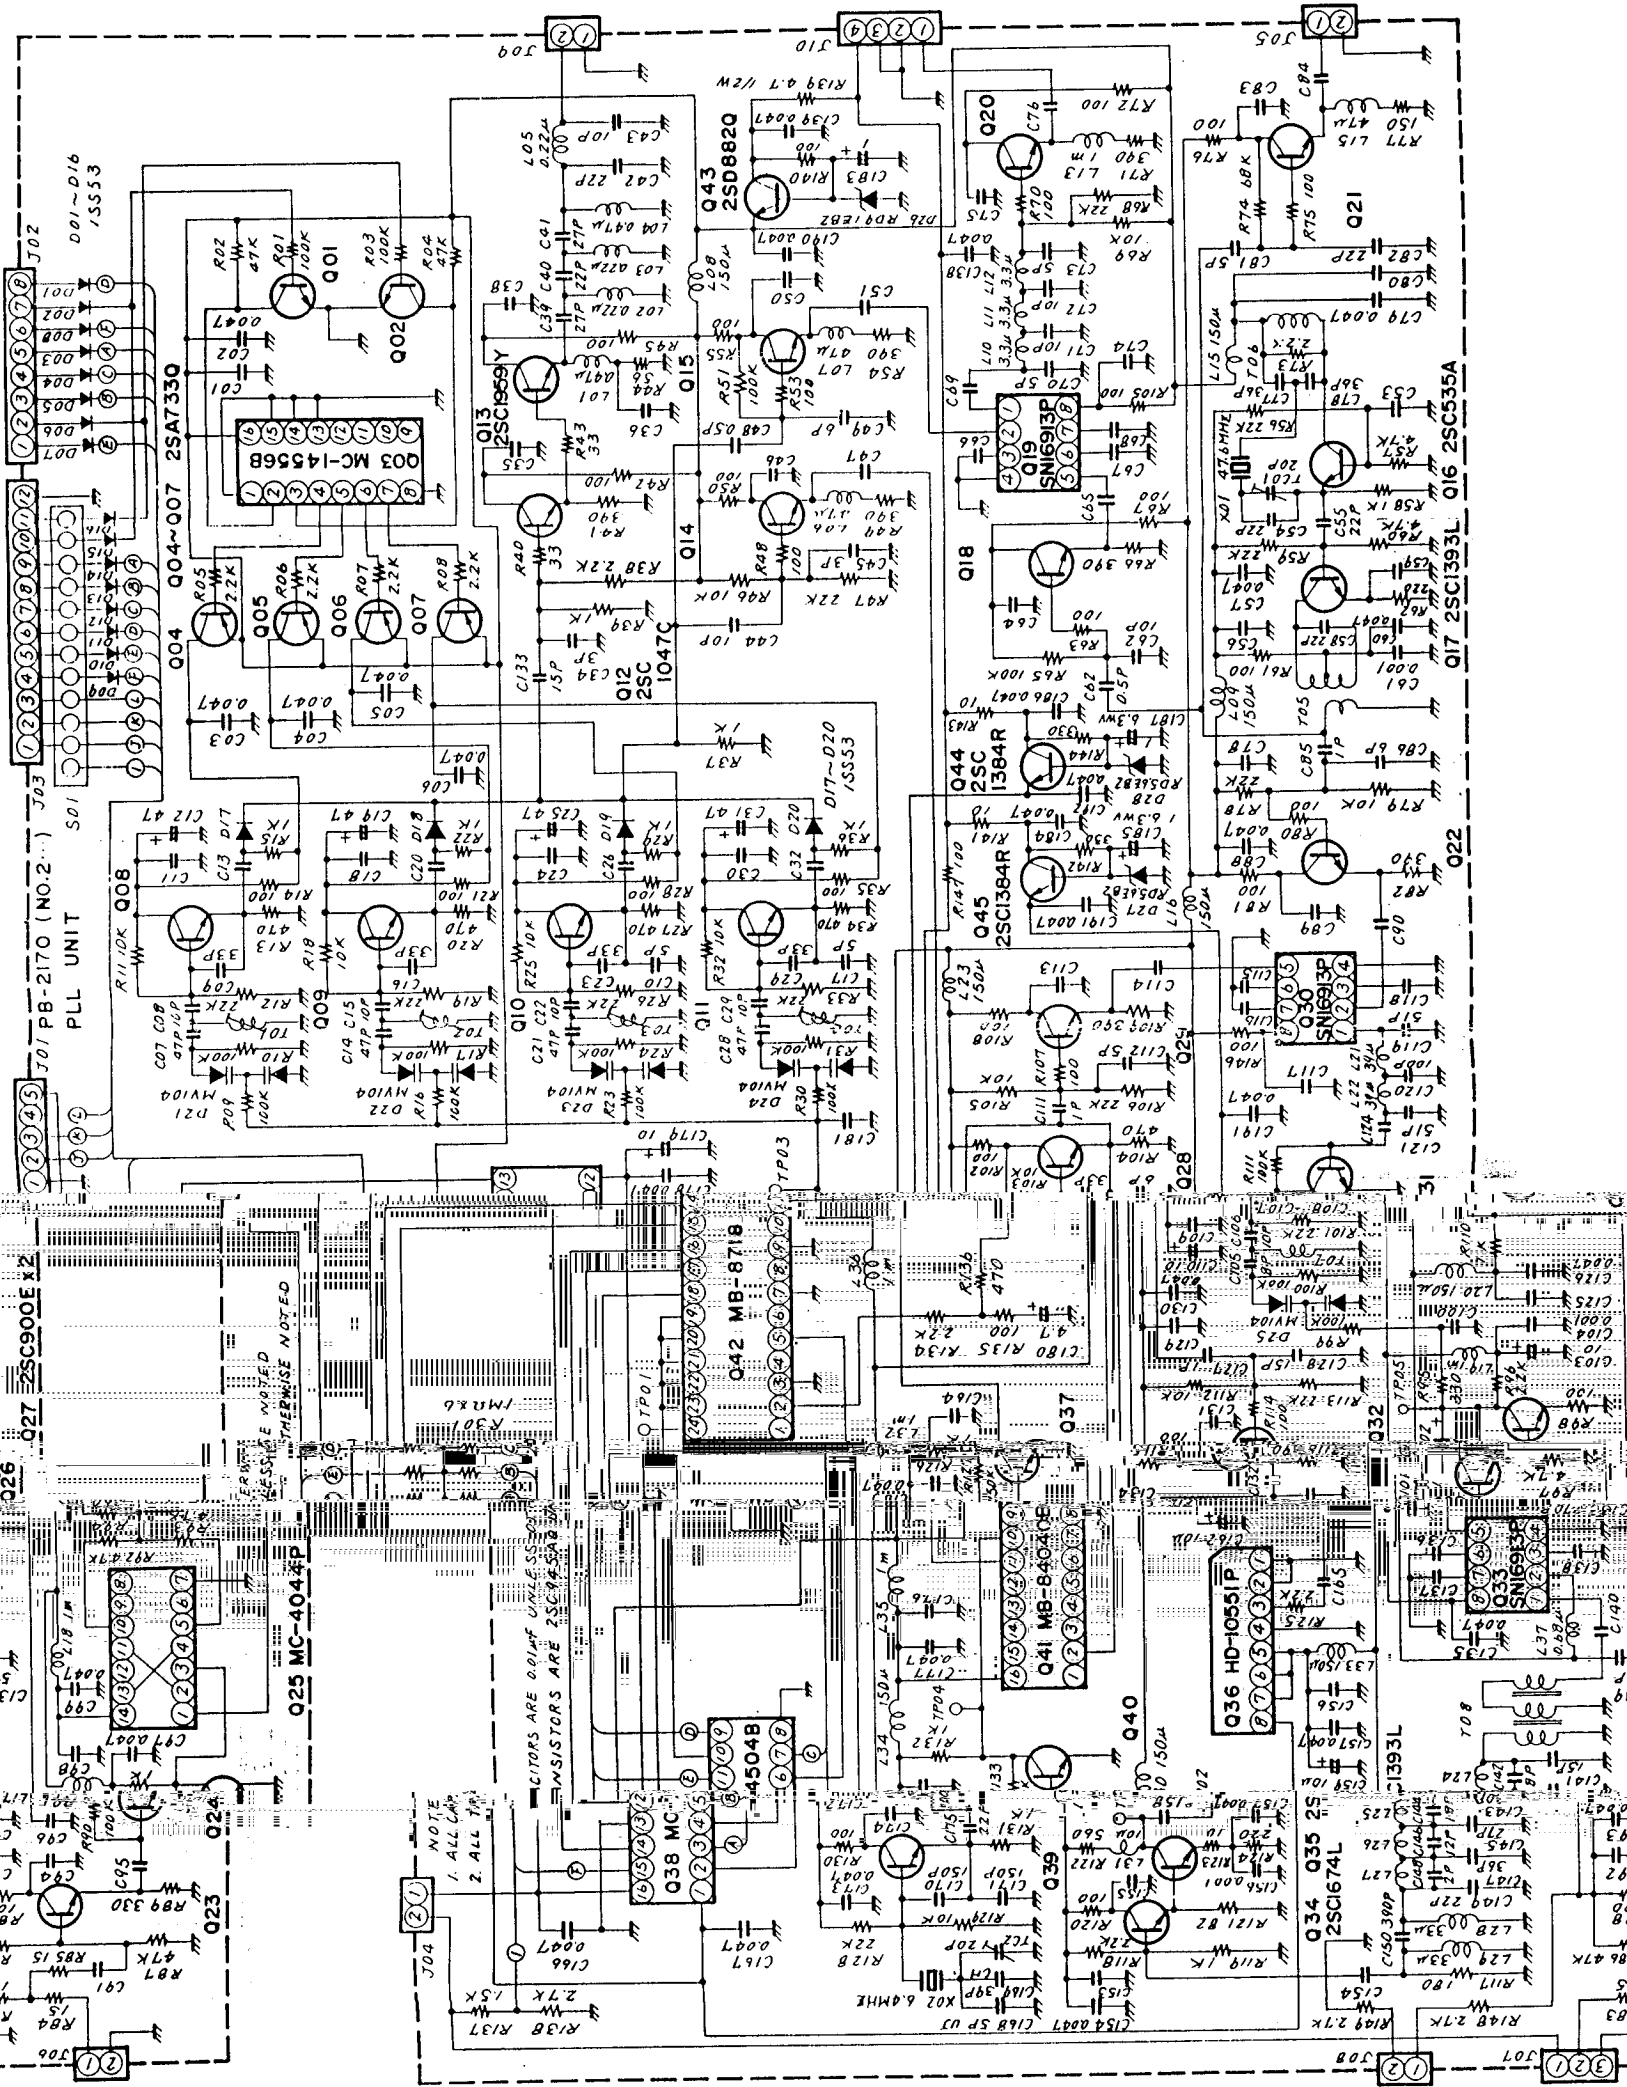

001-D16
15553

PLL UNIT

027 25C900E X2

025 MC-404 3P

023

024

025 MC-14568

026

027

028

029

030

031

032

033

034

035

036

037

038

039

040

041

042

043

044

045

046

047

048

049

050

051

052

053

054

055

056

057

058

059

060

061

062

063

064

065

066

067

068

069

070

071

072

073

074

075

076

077

002

003

004

005

006

007

008

009

010

011

012

013

014

015

016

017

018

019

020

021

022

023

024

025

026

027

028

029

030

031

032

033

034

035

036

037

038

039

040

041

042

043

044

045

046

047

048

049

050

051

052

053

054

055

056

057

058

059

060

061

062

063

064

065

066

067

068

069

070

071

072

073

074

075

076

077

078

079

080

081

082

083

084

085

086

087

088

089

090

091

092

093

094

095

096

097

098

099

100

101

102

103

104

105

106

107

108

109

110

111

112

113

114

115

116

117

118

119

120

121

122

123

124

125

126

127

128

129

130

131

132

133

134

135

136

137

138

139

140

141

142

143

144

145

146

147

148

149

150

151

152

153

154

155

156

157

158

159

160

161

162

163

164

165

166

167

168

169

170

171

172

173

174

175

176

177

178

179

180

181

182

183

184

185

186

187

188

189

190

191

192

193

194

195

196

197

198

199

200

201

202

203

204

205

206

207

208

209

210

211

212

213

214

215

216

217

218

219

220

221

222

223

224

225

226

227

228

229

230

231

232

233

234

235

236

237

238

239

240

241

242

243

244

245

246

247

248

249

250

251

252

253

254

255

256

257

258

259

260

261

262

263

264

265

266

267

268

269

M CH 55-4

55-4

J8 ACC

J5 HF/BC E MUTE

J1 ANT

56 ATT

J6 REMOTE

J7 EXT SP

55 SP


DC JACK

GND

57 V SELECT

F1 FUSE

AC JACK

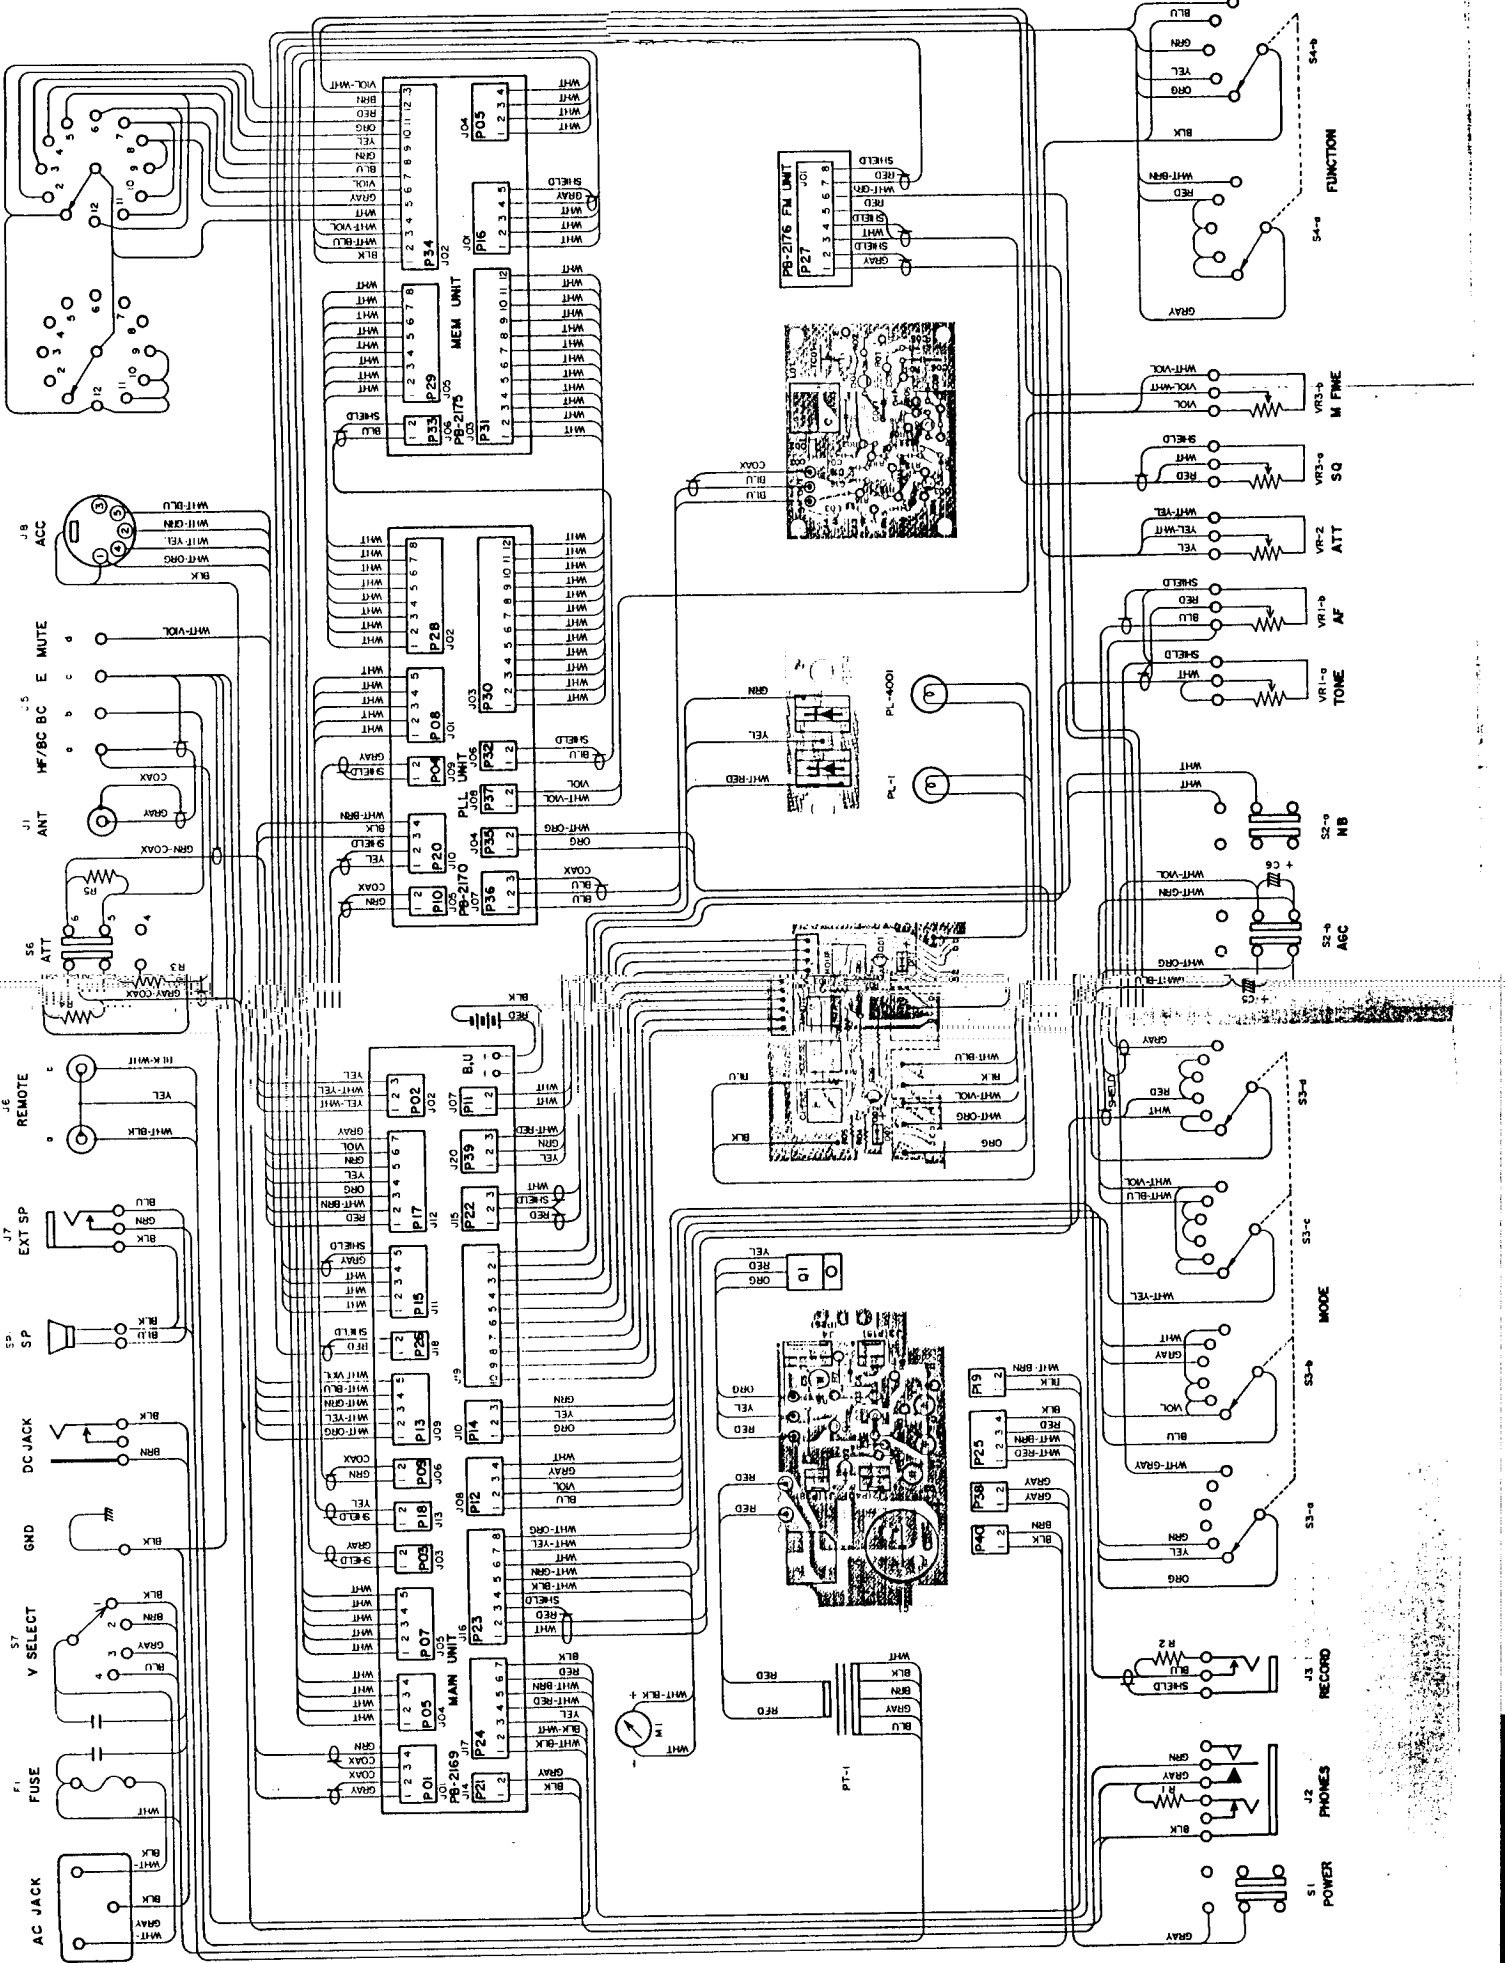

FUNCTION

M FINE

SQ

ATT

AF

TONE

MB

AGC

53-4

53-4

53-4

MODE

53-4

53-4

53-4

RECORD

53-4


PHONES

POWER

51

51


Main Foot: R30F
 Side Foot: R30Z
 Extend Foot: R30S
 Feet Pad: R30E

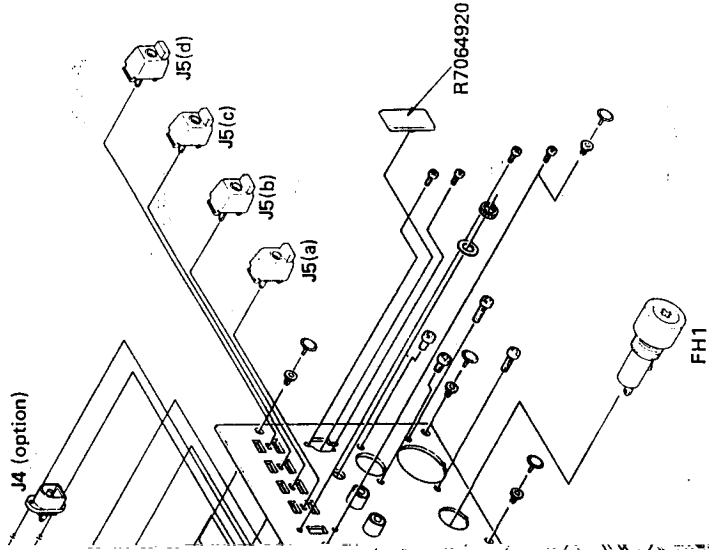

Battery Cover: R0064690
 Handle Assy: C5300828
 Handle End Cover: R3054410

4370
 5370
 4620
 .4630

REAR PANEL REMOVAL

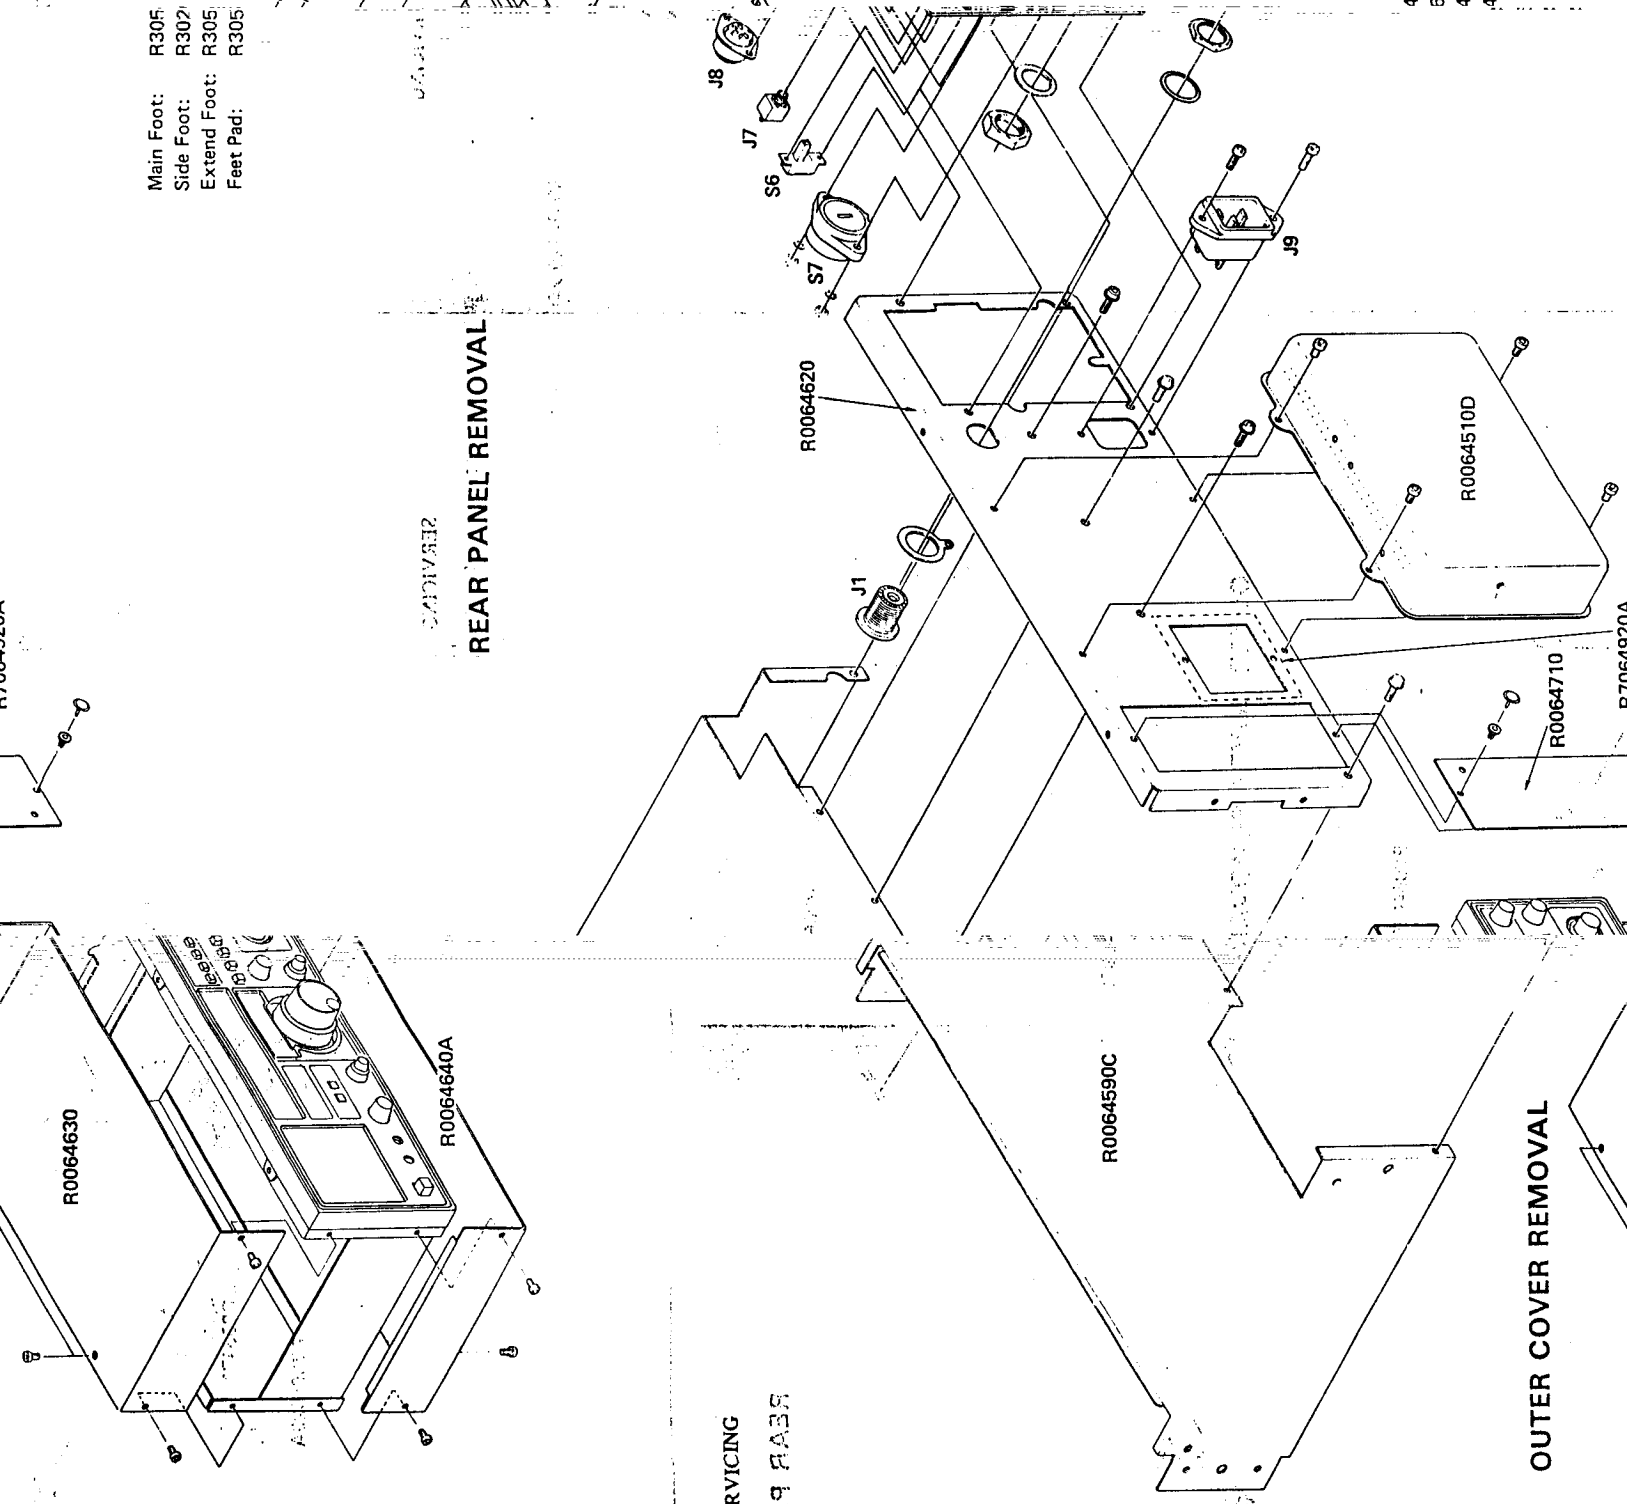

R0064630



R0064640A

SERVICING





REAR PANEL

OUTER COVER REMOVAL

PARTS LAYOUT MAIN UNIT(PB-2169)

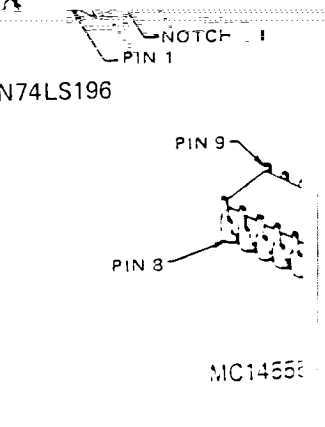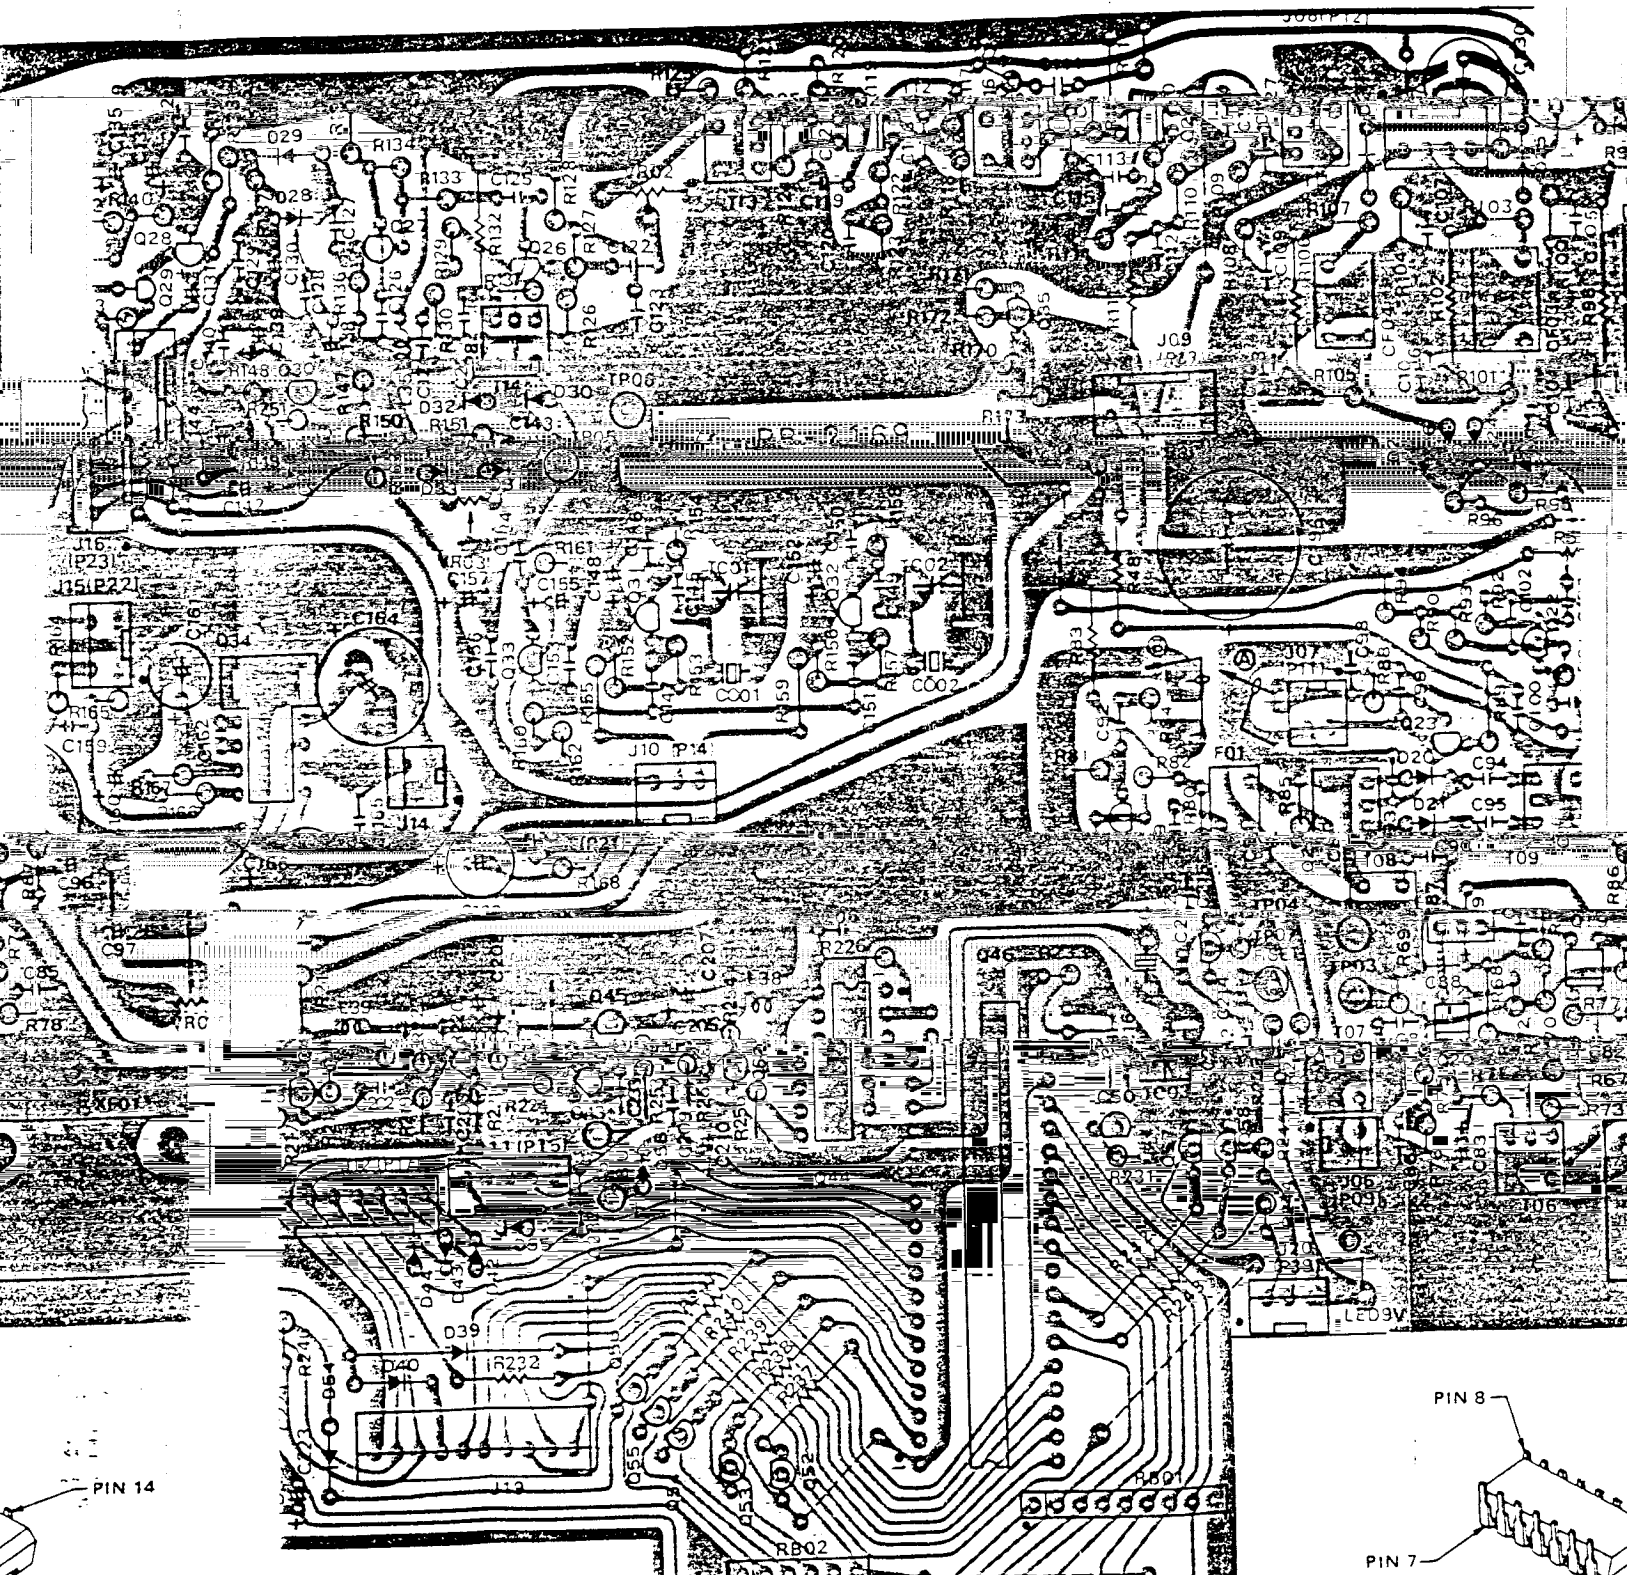

ays
ing
ese

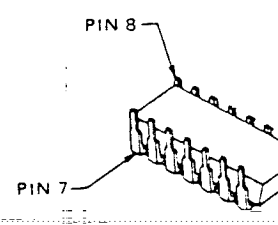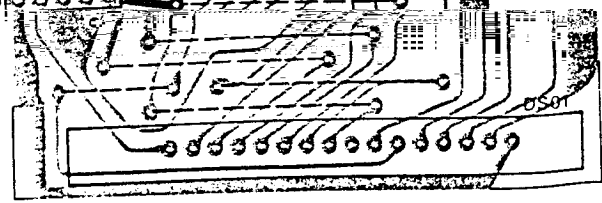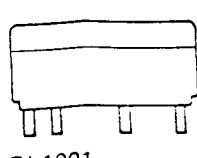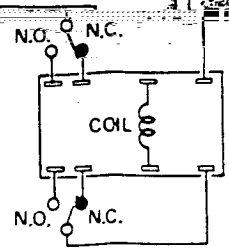

MAIN UNIT(PB-2169)

