

CRF-5100

US Model
Canadian Model
E Model
(for 120 V)



FM-AIR-PSB-SW-MW-LW 10-BAND PORTABLE RADIO

SPECIFICATIONS

Circuit:	superheterodyne	Selectivity:	40 dB at ± 10 kHz off-resonance at 1,400 kHz
Semiconductors:	13 transistors, 12 diodes 7 transistors for auxiliary circuit	Signal-to-Noise Ratio:	PSB 50 dB (54 dB input at 160 MHz) AIR 48 dB (44 dB input at 124 MHz) FM 55 dB (54 dB input at 100 MHz) LW 30 dB (60 dB/m input at 360 kHz) MW 37 dB (60 dB/m input at 1,000 kHz) SW 40 dB (44 dB input at mid range)
Frequency Ranges:	PSB 147 – 174 MHz (2.04 – 1.72 m) AIR 108 – 136 MHz (2.78 – 2.21 m) FM 87.5 – 108 MHz (3.43 – 2.78 m) LW 150 – 400 kHz (2000 – 750 m) MW 530 – 1,605 kHz (566 – 187 m) SW1 1.6 – 3.5 MHz (187 – 86 m) SW2 3.5 – 9.0 MHz (86 – 33 m) SW3 9.0 – 14.0 MHz (33 – 21 m) SW4 14.0 – 21.0 MHz (21 – 14 m) SW5 21.0 – 26.0 MHz (14 – 11 m)	Power Output at 1% distortion: 3 W at maximum: 4.7 W	
Intermediate Frequencies:	FM/AIR/PSB 10.7 MHz LW/MW/SW 455 kHz	Current Drain at zero signal: FM 56 mA, MW 50 mA at maximum output: 600 mA	
Antennas:	FM/AIR/ PSB/SW telescopic antenna or external antenna (impedance 75 Ω) LW/MW built-in ferrite bar antenna or external antenna (high impedance)	Jacks: record out 1 k Ω EARPHONE 4 Ω	
Sensitivity at 50 mW output:	PSB 1.3 μ V (2 dB), S/N = 6 dB AIR 1 μ V (0 dB), S/N = 6 dB FM { 0.8 μ V (-2 dB), S/N = 6 dB 3.2 μ V (10 dB), S/N = 30 dB LW 100 μ V/m (40 dB/m), S/N = 6 dB MW 24 μ V/m (27 dB/m), S/N = 6 dB SW1 1.2 μ V (1 dB), S/N = 6 dB SW2 1 μ V (0 dB), S/N = 6 dB SW3 1 μ V (0 dB), S/N = 6 dB SW4 1.2 μ V (1 dB), S/N = 6 dB SW5 1.3 μ V (2 dB), S/N = 6 dB	Power Requirements: DC eight "D" size flashlight batteries 12 volts or car battery by using SONY car battery cord DCC-2AW AC house current 120 V 60 Hz	
		Power Consumption: 8 W AC	
		Speaker: 10 cm x 15 cm (4" x 6"), 4 Ω	
		Dimensions: 340 (w) x 230 (h) x 160 (d) mm (13 ³ / ₈ " x 9 ¹ / ₁₆ " x 6 ⁵ / ₁₆ ")	
		Weight: 6.4 kg, 14 lb 2 oz with batteries	



SONY
SERVICE MANUAL

TABLE OF CONTENTS

<u>Section</u>	<u>Title</u>	<u>Page</u>
	Specifications	1
1.	OUTLINE	
1-1.	Block Diagram	3
1-2.	External View	3
1-3.	Internal View	4
1-4.	Rotary-Slide Switch Outline	4
2.	DISASSEMBLY	
2-1.	Rear Cabinet Ass'y Removal	5
2-2.	Front Panel Ass'y Removal	5
2-3.	Chassis Removal	6
2-4.	Printed Circuit Board Removal	7
2-5.	Front End Removal	8
2-6.	Dial Cord Stringing	9
3.	ADJUSTMENTS	
1.	FM I-f Alignment	13
2.	FM Frequency Coverage and Tracking Adjustments	14
3.	AIR Frequency Coverage and Tracking Adjustments	15
4.	PSB Frequency Coverage and Tracking Adjustments	16
5.	AM I-f Alignment	17
6.	MW Frequency Coverage and Tracking Adjustments	17
7.	LW Frequency Coverage and Tracking Adjustments	18
8.	SW1 Frequency Coverage and Tracking Adjustments	18
9.	SW2 Frequency Coverage and Tracking Adjustments	19
10.	SW3 Frequency Coverage and Tracking Adjustments	19
11.	SW4 Frequency Coverage and Tracking Adjustments	20
12.	SW5 Frequency Coverage and Tracking Adjustments	20
13.	Tuning Meter Adjustment	21
14.	BFO Coil Adjustment	21
15.	FM and PSB Maximum Sensitivity Measurement	22
16.	AIR Maximum Sensitivity Measurement	22
17.	MW Maximum Sensitivity Measurement	23
18.	SW Maximum Sensitivity Measurement	23
4.	DIAGRAMS	
4-1.	Schematic Diagram	24
4-2.	Mounting Diagram – Conductor Side	27
4-3.	Mounting Diagram – Conductor Side – Voltages and Currents	29
4-4.	Mounting Diagram – Conductor Side – Front End	31
5.	EXPLODED VIEWS AND PACKING	
5-1.	Exploded View (1)	33
5-2.	Exploded View (2)	35
5-3.	Packing	37
6.	ELECTRICAL PARTS LIST	38

SECTION 1 OUTLINE

1-1. BLOCK DIAGRAM

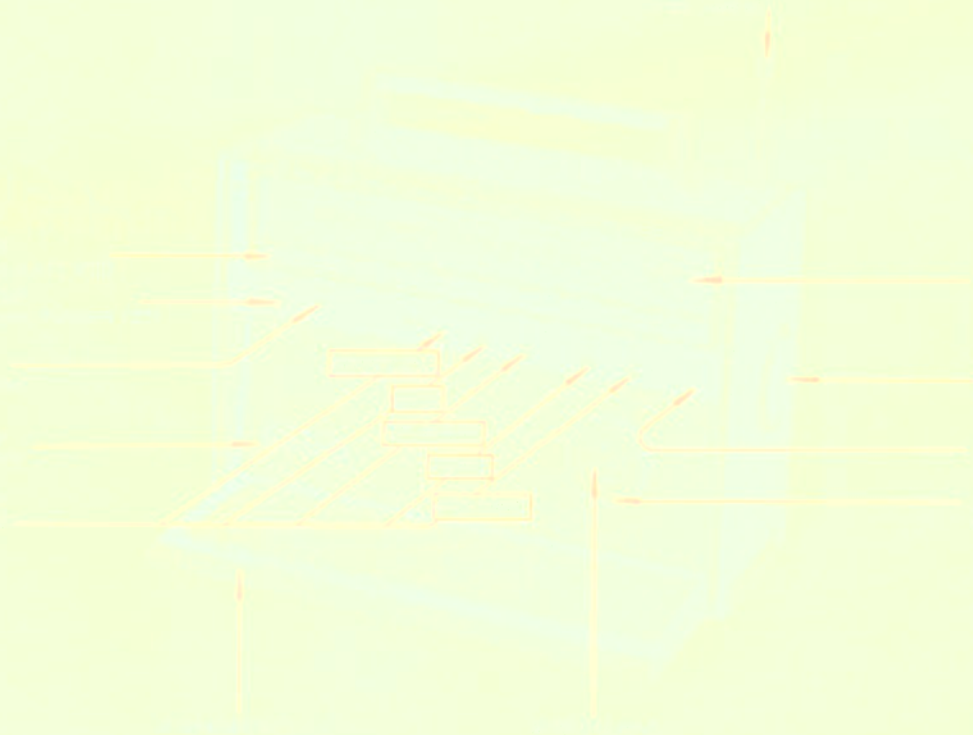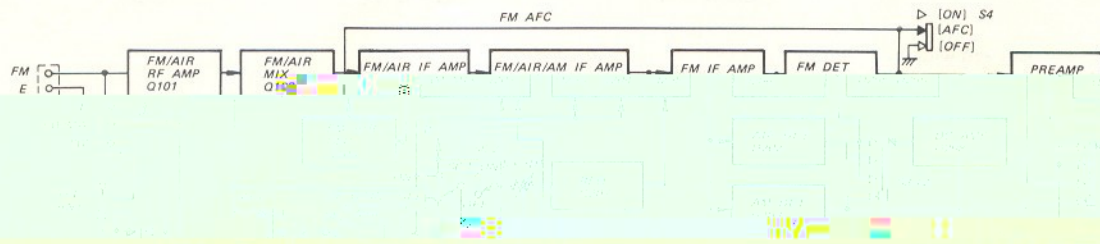


SECTION 1
OUTLINE

13 INTERNAL VIEW

3-842-487-00

1-401-553-01

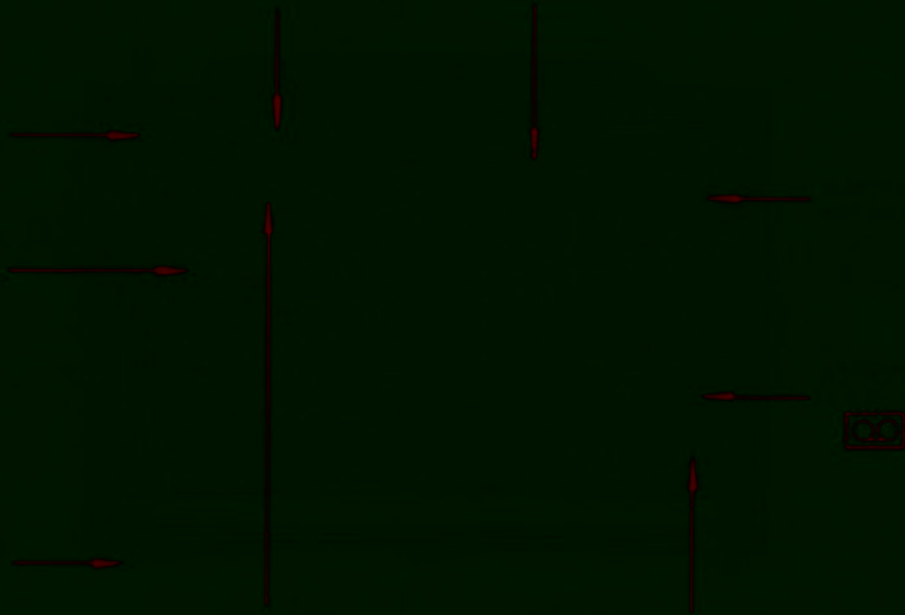


11/10 01

13-0000

SECTION 2 DISASSEMBLY


2-1. REAR CABINET ASS'Y REMOVAL

Remove rear cabinet ass'y in the numerical order.

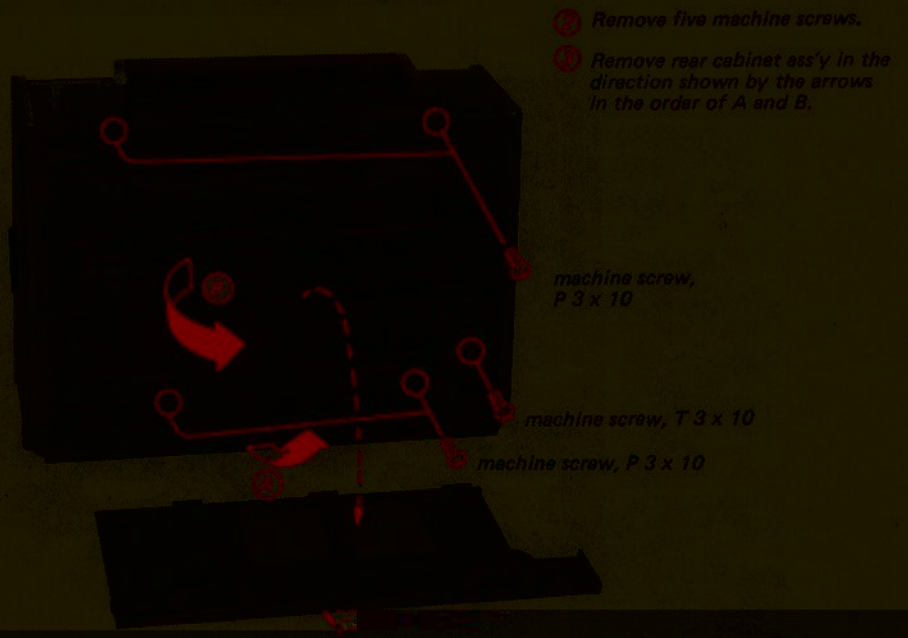



2-2. FRONT COVER ASS'Y REMOVAL

Remove front cover ass'y.

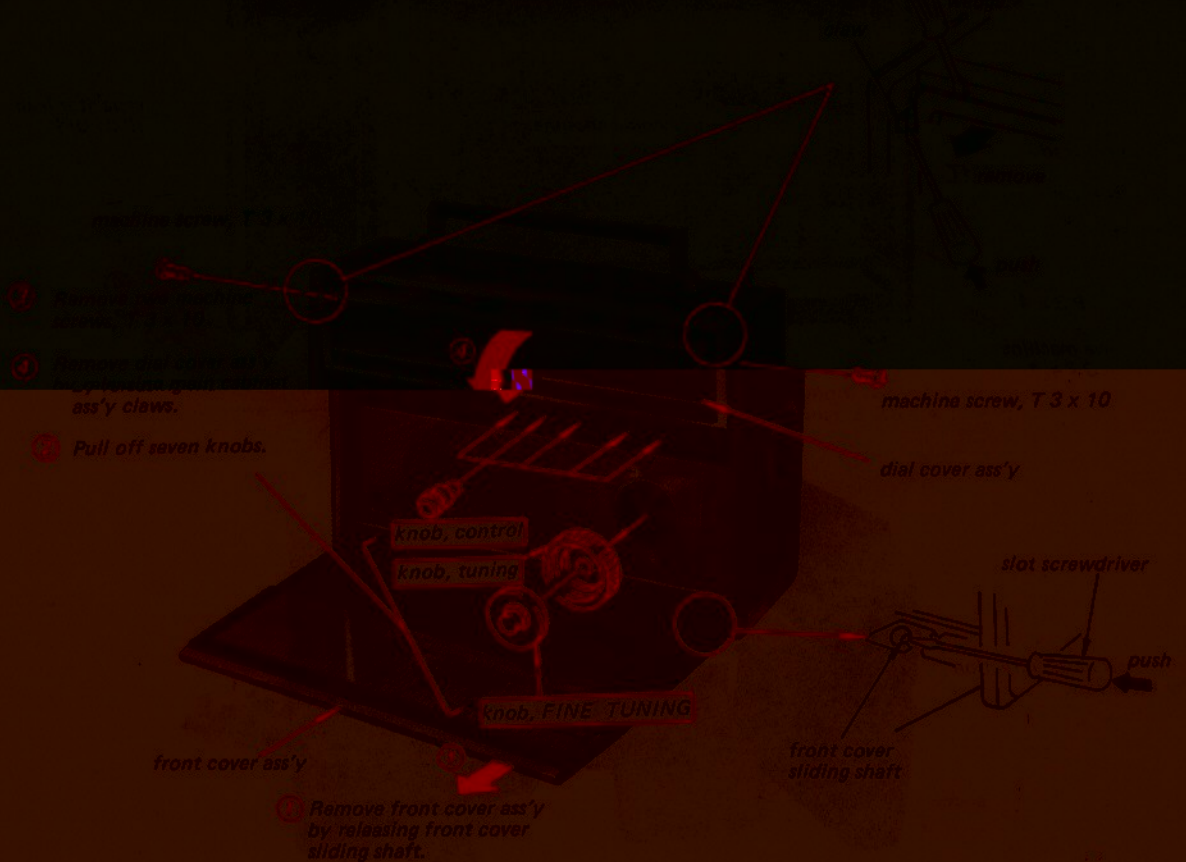

2-3. CHASSIS REMOVAL

Remove chassis in the numerical order.

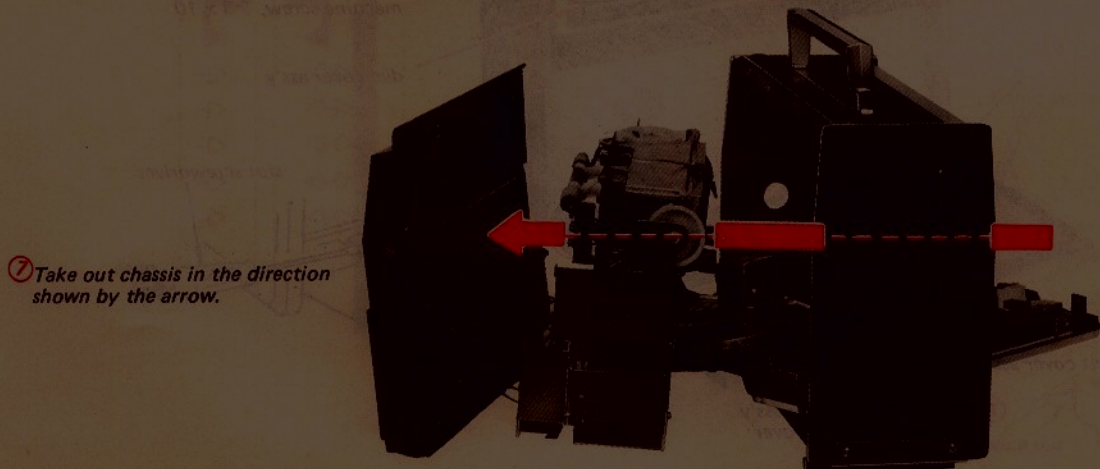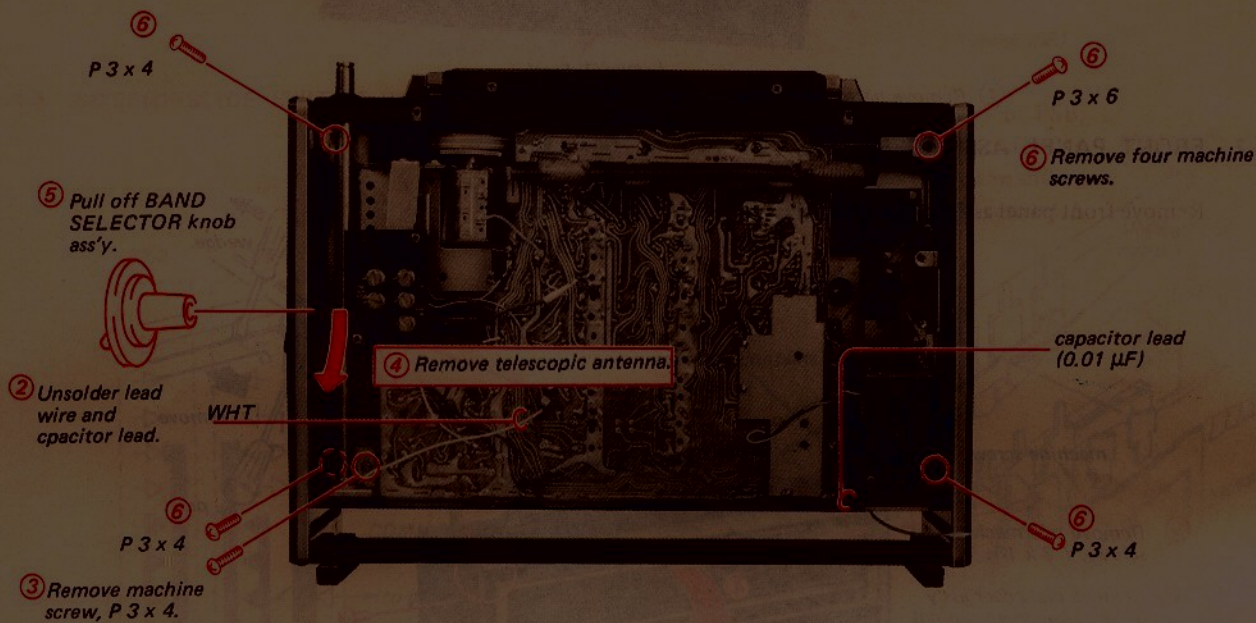


2.4. FRONT END REMOVAL

Remove front end in the numerical order.



2.5. PRINTED CIRCUIT BOARD REMOVAL

Remove rear cabinet ass'y and remove printed circuit board in the numerical order.

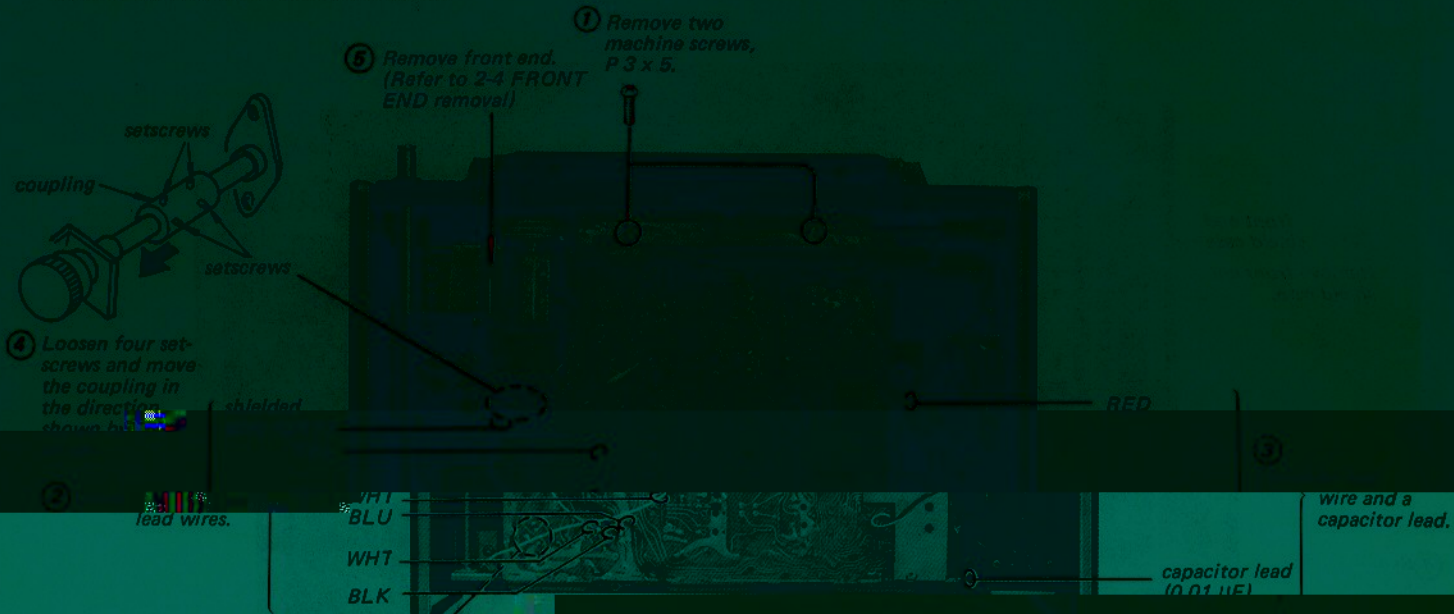


SECTION 2
ADJUSTMENTS

2-6. DIAL CORD STRINGING


Perform the chassis removal outlined in 2-3 on page 6 and proceed to the following procedure.

Dial Drum Driving:

1. Assemble dial cord and dial cord spring.

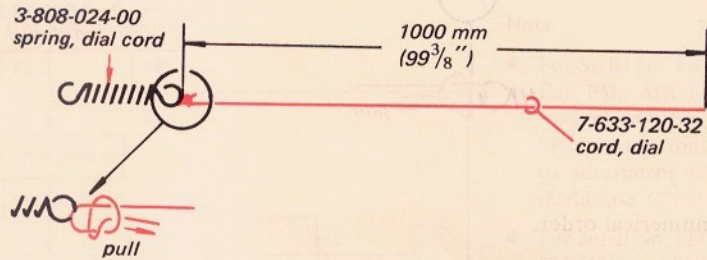


2. String dial cord in the numerical order.

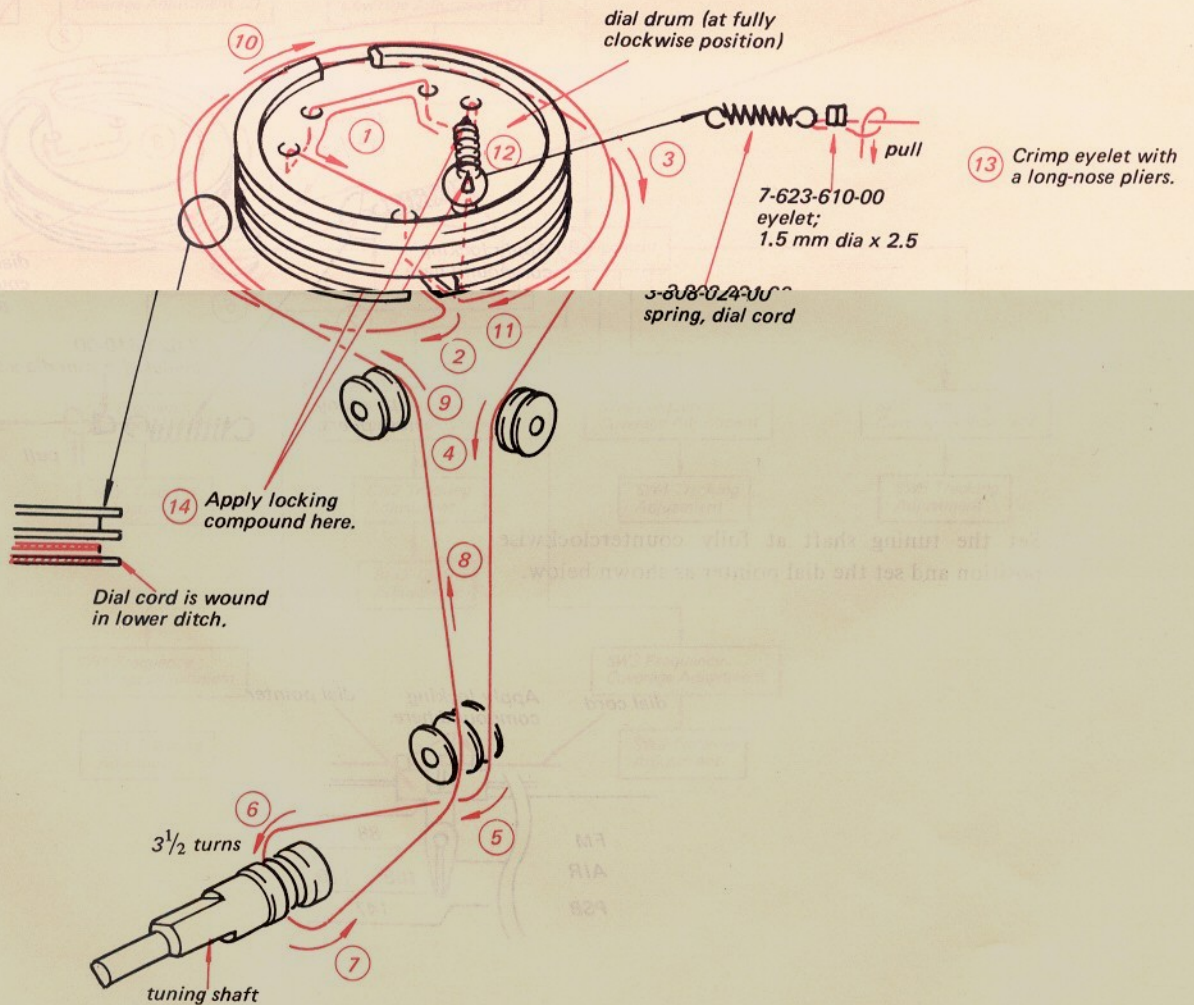


Dial Pointer Driving:


1. Assemble dial cord and dial cord spring.

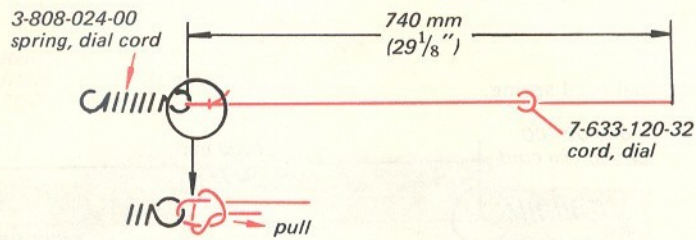

2. String dial cord in the numerical order.

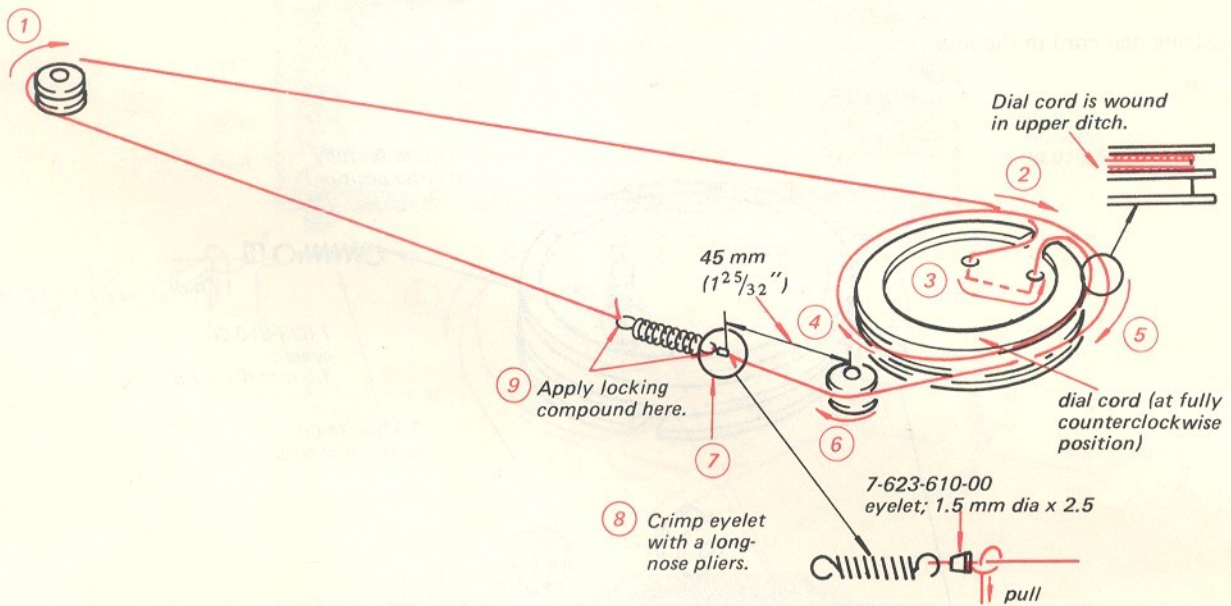

3. Set the tuning shaft at fully counterclockwise position and set the dial pointer as shown below.

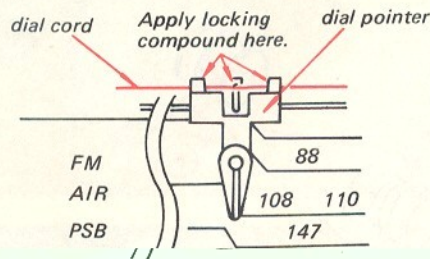

SECTION 3 ADJUSTMENTS

ADJUSTMENT FLOW CHART



Note:

- For Serial No. up to 18000:
For FM, AIR and PSB frequency coverage and tracking adjust

For Serial No. up to 18000, the frequency coverage and tracking adjustments for FM, AIR and PSB are applied. For Serial No. above 18000, the frequency coverage and tracking adjustments for FM, AIR and PSB are not applied. The frequency coverage and tracking adjustments for FM, AIR and PSB are applied for Serial No. up to 18000. For Serial No. above 18000, the frequency coverage and tracking adjustments for FM, AIR and PSB are not applied. The frequency coverage and tracking adjustments for FM, AIR and PSB are applied for Serial No. up to 18000. For Serial No. above 18000, the frequency coverage and tracking adjustments for FM, AIR and PSB are not applied.

Test Equipment/Tools Required:

AM rf signal generator
 FM rf signal generator
 VOM
 VTVM
 Loop antenna
 4 Ω , 2 W resistor


Note: 1. Modulation

AM: 30 % amplitude modulation
 by 400 Hz signal.

FM: ± 22.5 kHz frequency
 deviation modulated
 by 400 Hz signal.

2. AM, FM rf signal generator output
 level should be usable lowest possible
 for following adjustments.

3. When 0.5 ~ 1.5 V AC range is not
 available on the VOM, use a VTVM
 instead of the VOM or use a
 rectifying circuit with the VOM
 0.5 ~ 2.5 V DC range as shown
 below.

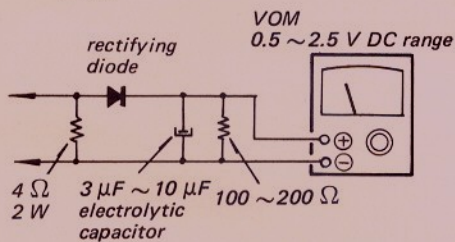

4. It is recommended that MW, SW, AIR,
 and FM/PSB maximum sensitivity
 measurements on pages 14 and 15 be
 performed in a standard shielded
 room.

5. For Serial No. up to **18000**:

For FM, AIR and PSB frequency
 coverage and tracking adjustments,
 first perform adjustment (1) by re-
 moving front end shield case and then
 proceed to adjustment (2) by re-
 attaching the front end shield case.

For Serial NO. **18001** and later:


FM, AIR and PSB frequency coverage
 and tracking adjustments can be per-
 formed without removing the front
 end shield case, and adjustment (2)
 can be eliminated.

1. FM I-f Alignment and Discriminator Adjustment

Settings:

- BAND SELECTOR switch: FM
- VOLUME control: MAX
- TONE control: HIGH
- AFC switch: OFF
- RF GAIN control: NORMAL


Procedure:

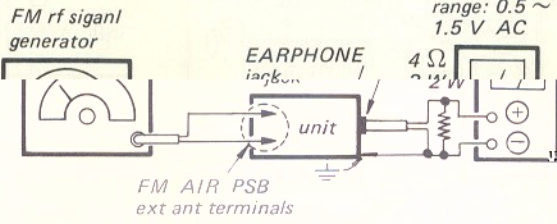

VOM connection for step 4.

main circuit board

Adjustment Locations:

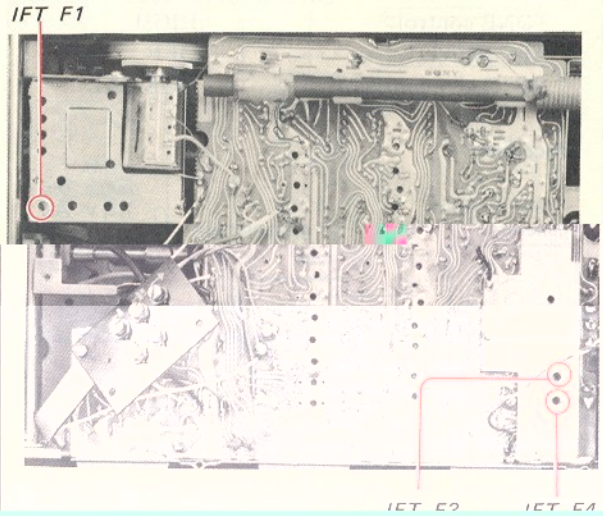


2. FM Frequency Coverage and Tracking Adjustments

Settings:

- BAND SELECTOR switch: FM
- VOLUME control: MAX
- TONE control: HIGH
- AFC switch: OFF
- RF GAIN control: NORMAL

Procedure:

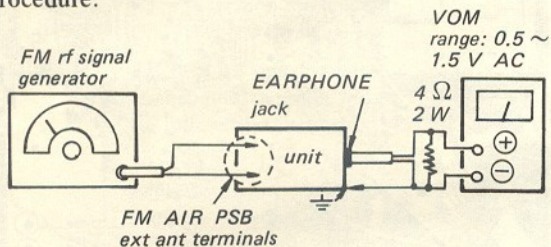


Adjustment (1)

Remove the front end shield case from the front end and proceed to the following adjustments.

Adjustment	Step	FM rf signal generator frequency	Tuning knob	Adjust	VOM reading
Frequency Coverage	1	86.5 MHz	fully counter-clockwise	L107	maximum
	2	109.5 MHz	fully clockwise	CT104	maximum
Tracking	1	86.5 MHz	tune in 86.5 MHz	L101 L104	maximum
	2	109.5 MHz	tune in 109.5 MHz	CT101-1 CT101-3	maximum

Note: Repeat above steps two or three times until desired result is obtained ending with steps 2. Fix L107, L101 and L104 with wax after adjustment.

Adjustment Locations:

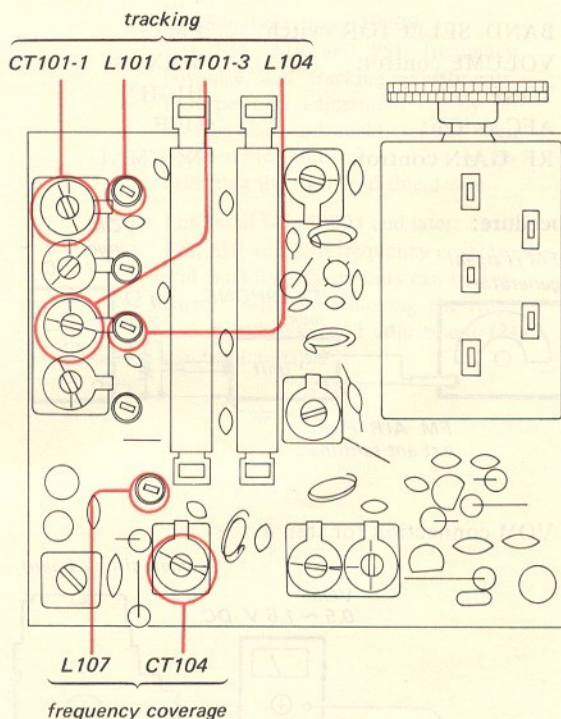


Adjustment (2)

Reattach the front end shield case to the front end and proceed to the following adjustments.

Adjustment	FM rf signal generator frequency	Tuning knob	Adjust	VOM reading
Frequency coverage	109.5 MHz	fully clockwise	CT104	maximum
Tracking	109.5 MHz	fully clockwise	CT101-1 CT101-3	maximum

Adjustment Locations:

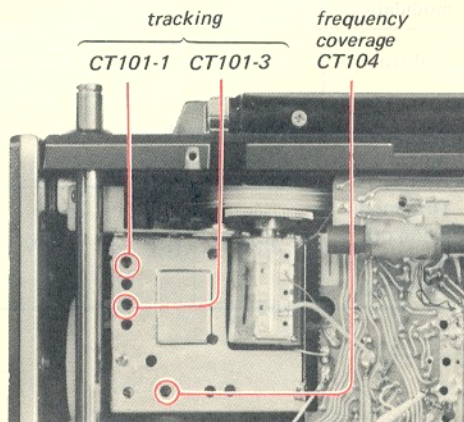


3. AIR Frequency Coverage and Tracking Adjustments

Settings:

- BAND SELECTOR switch: FM
- VOLUME control: MAX
- TONE control: HIGH
- AFC switch: OFF
- RF GAIN control: NORMAL

Procedure:

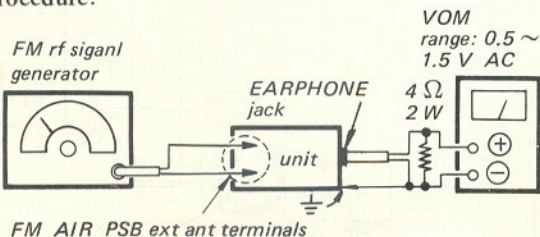


Adjustment (1)

Remove the front end shield case from the front end and proceed to the following adjustments.

Adjustment	Step	FM rf signal generator frequency	Tuning knob	Adjust	VOM reading
Frequency coverage	1	107 MHz	fully counter-clockwise	L108	maximum
	2	137.5 MHz	fully clockwise	CT105-1	maximum
Tracking	1	107 MHz	fully counter-clockwise	L102 L105	maximum
	2	137.5 MHz	fully clockwise	CT101-2 CT101-4	maximum

Note: Repeat above steps two or three times until desired result is obtained ending with steps 2. Fix L102, L105 and L108 with wax after adjustment.

Adjustment Locations:

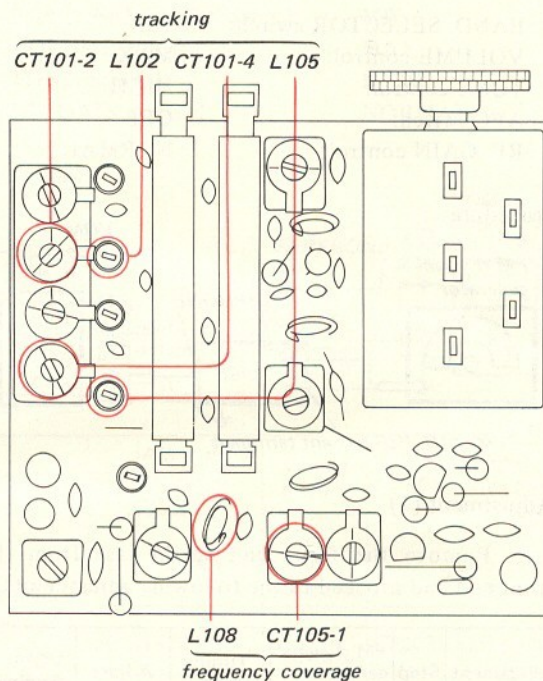


Adjustment (2)

Reattach the front end shield case to the front end and proceed to the following adjustments.

Adjustment	FM rf signal generator frequency	Tuning knob	Adjust	VOM reading
Frequency coverage	137.5 MHz	fully counter-clockwise	CT105-1	maximum
Tracking	137.5 MHz	fully clockwise	CT101-2 CT101-4	maximum

Adjustment Locations:

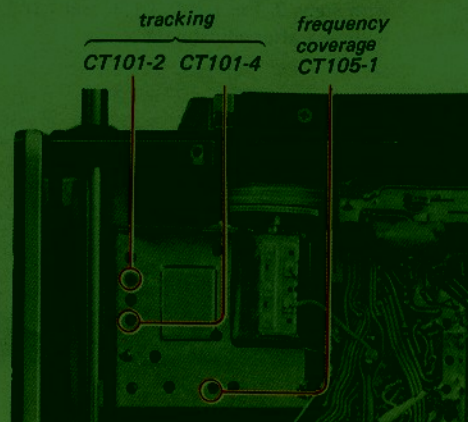


4. PSB Frequency Coverage and Tracking Adjustments


Settings:

BAND SELECTOR switch:	PSB
VOLUME control:	MAX
TONE control:	HIGH
AFC switch:	OFF
RF GAIN control:	NORMAL

Procedure:

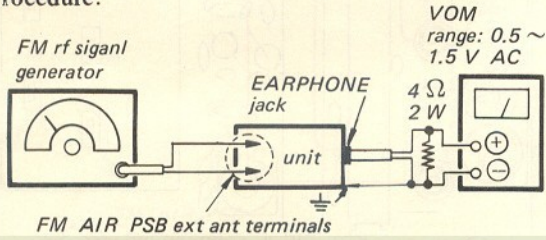

Adjustment Locations:

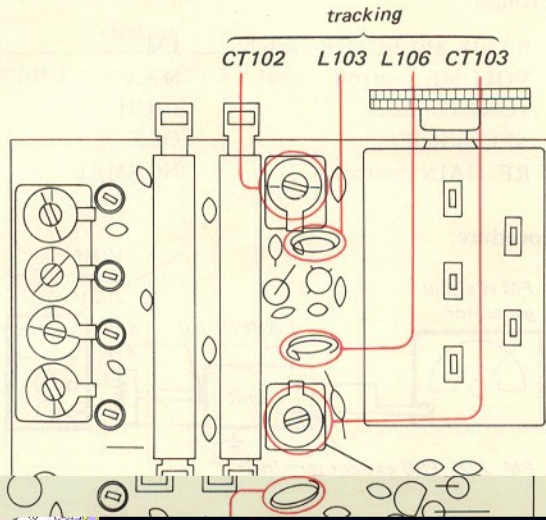


Adjustment (1)

5. AM I-f Alignment

Settings:

BAND SELECTOR switch: MW
 VOLUME control: MAX
 TONE control: HIGH
 RF GAIN control: NORMAL


Procedure:

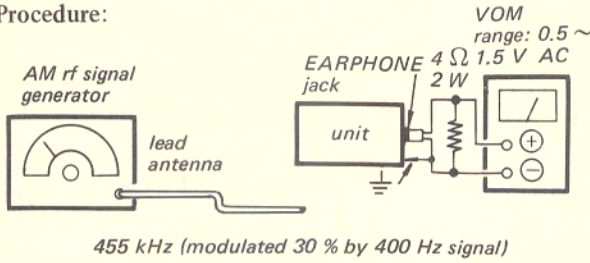

Adjust	VOM reading
CFT	maximum

Adjustment Location:

CFT




6. MW Frequency Coverage and Tracking Adjustments

Settings:

BAND SELECTOR switch: MW
 VOLUME control: MAX
 TONE control: HIGH
 RF GAIN control: NORMAL

Procedure:

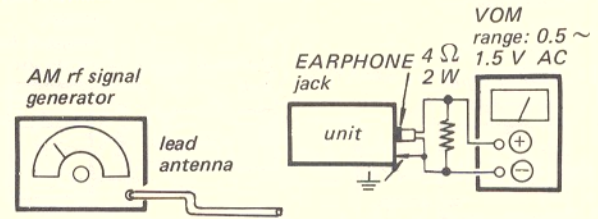

Adjustment	Step	AM rf signal generator frequency	Tuning knob	Adjust	VOM reading
Frequency	1	520 kHz	fully counter-clockwise	L202	maximum

Coverage	2	1680 kHz	fully clockwise	CT202	maximum
Tracking	1	620 kHz	tune in 620 kHz	L210	maximum




7. LW Frequency Coverage and Tracking Adjustments

Settings:

BAND SELECTOR switch: LW
 VOLUME control: MAX
 TONE control: HIGH
 RF GAIN control: NORMAL

Procedure:

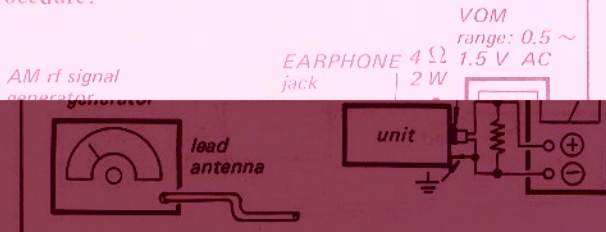


Adjustment	Step	AM rf signal generator frequency	Tuning knob	Adjust	VOM reading

8. SW1 Frequency Coverage and Tracking Adjustments

Settings:

BAND SELECTOR switch: SW1
 VOLUME control: MAX
 TONE control: HIGH
 RF GAIN control: NORMAL

Procedure:

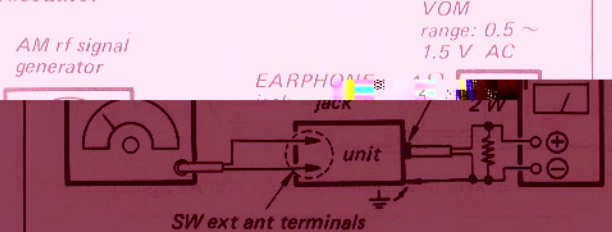


Adjustment	Step	AM rf signal generator frequency	Tuning knob	Adjust	VOM reading

9. SW2 Frequency Coverage and Tracking Adjustments

Settings:

- BAND SELECTOR switch: SW2
- VOLUME control: MAX
- TONE control: HIGH
- RF GAIN control: NORMAL

Procedure:

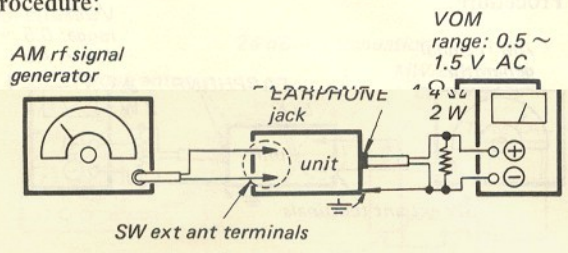


Adjustment	Step	AM rf signal generator frequency	Tuning knob	Adjust	VOM reading
Frequency Coverage	1	3.4 MHz	fully counter-clockwise	L204	maximum
	2	9.2 MHz	fully	CTC	

10. SW3 Frequency Coverage and Tracking Adjustment

Settings:

- BAND SELECTOR switch: SW3
- VOLUME control: MAX
- TONE control: HIGH
- RF GAIN control: NORMAL

Procedure:

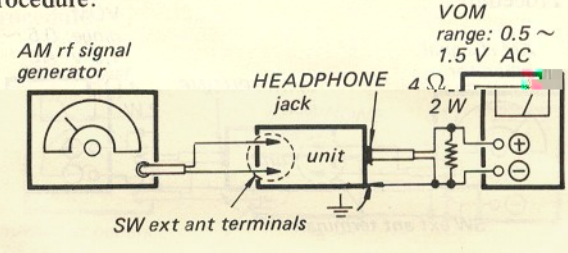

Adjustment	Step	AM rf signal generator frequency	Tuning knob	Adjust	VOM reading
Frequency Coverage	1	8.9 MHz	fully counter-clockwise	L205	maximum
			fully		



11. SW4 Frequency Coverage and Tracking Adjustments

Settings:

BAND SELECTOR switch: SW4
VOLUME control: MAX
TONE control: HIGH
RF GAIN control: NORMAL

Procedure:

AM rf signal generator

EARPHONE jack

VOM range: 0.5 ~ 1.5 V AC

4 Ω

2 W

12. SW5 Frequency Coverage and Tracking Adjustments

Settings:

BAND SELECTOR switch: SW5
VOLUME control: MAX
TONE control: HIGH
RF GAIN control: NORMAL

Procedure:

AM rf signal generator

EARPHONE jack

VOM range: 0.5 ~ 1.5 V AC

4 Ω


2 W

13. TUNING METER ADJUSTMENT

Settings:


BAND SELECTOR switch: FM
 VOLUME control: MAX
 TONE control: HIGH
 RF GAIN control: NORMAL

Procedure:

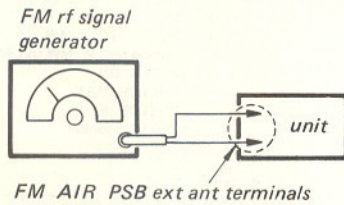


FM rf signal generator frequency	Tuning knob	Adjust	TUNING METER
Any of 86 ~ 109 MHz	Tune in FM rf signal frequency	IFT F2	maximum

Adjustment Location:

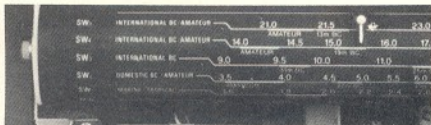

IFT F2


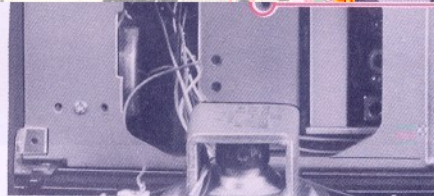


14. BFO Coil Adjustment

Settings:


BAND SELECTOR switch: SW2
 VOLUME control: MAX
 TONE control: HIGH
 RF GAIN control: NORMAL

Procedure:

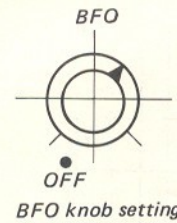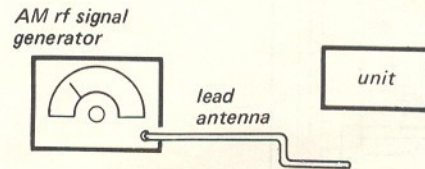

AM rf signal generator frequency	Tuning knob	Adjust
5 MHz modulation	Tune in 5 MHz signal to obtain maximum deflection on TUNING METER	L222 Adjust for zero beating

Adjustment Location:

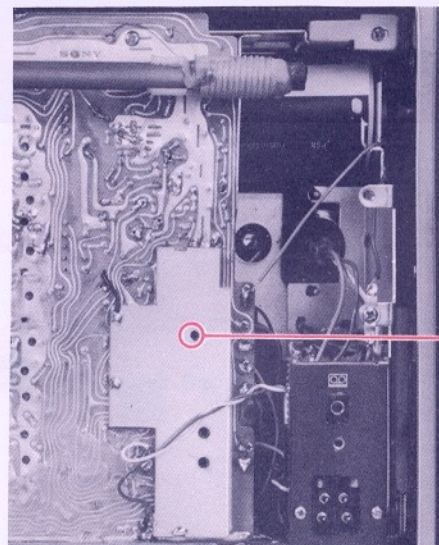


L222

15. FM and PSB Maximum Sensitivity Measurement

Settings:

BAND SELECTOR switch: FM or PSB
 VOLUME control: MAX
 TONE control: HIGH
 AFC switch: OFF

Procedure:

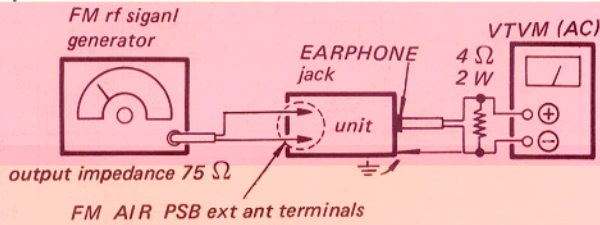


16. AIR Maximum Sensitivity Measurement

Settings:

BAND SELECTOR switch: AIR
 VOLUME control: MAX
 TONE control: HIGH

Procedure:

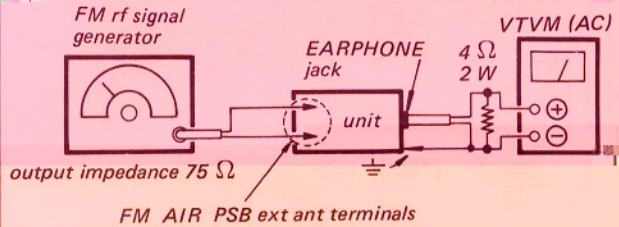

1. Set FM rf signal generator frequency to 98 MHz (FM) or 160 MHz (PSB), modulation to 400 Hz, 22.5 kHz deviation, attenuator to about -2 dB (FM) or 2 dB (PSB).
2. Turn tuning knob of the unit and tune in 98 MHz (FM) or 160 MHz (PSB) signal.
3. Vary VOLUME control until 0.447 V (50 mW output) is obtained on VTVM. Note VTVM reading in dB.
4. Turn modulation off and note VTVM reading in dB.
5. The difference of VTVM readings obtained in steps 3 and 4 is the signal-to-noise ratio at this condition.
6. Adjust FM rf signal generator attenuator until 6 dB signal-to-noise ratio is obtained.
7. Repeat adjustment turning modulation on and off and varying VOLUME control keeping 0.447 V (50 mW output) until desired 6 dB signal-to-noise ratio is obtained. When the unit is not operating normally, 50 mW output at 6 dB signal-to-noise may not be obtained.
8. Read the amount of signal generator attenuator. This is the maximum sensitivity.
9. FM maximum sensitivity is 0.8 μ V (-2 dB), PSB maximum sensitivity is 1.3 μ V (2 dB).


1. Set FM rf signal generator frequency to 120 MHz, modulation to 400 Hz, 30 % AM, attenuator to about 0 dB.
2. Turn tuning knob of the unit and tune in 120 MHz signal to obtain maximum VTVM reading.
3. Vary VOLUME control until 0.447 V (50 mW output) is obtained on VTVM. Note VTVM reading in dB.
4. Turn modulation off and note VTVM reading in dB.
5. The difference of VTVM readings obtained in steps 4 and 5 is the signal-to-noise ratio at this condition.
6. Adjust FM rf signal generator attenuator until 6 dB signal-to-noise ratio is obtained.
7. Repeat adjustment turning modulation on and off and varying VOLUME control keeping 0.447 V (50 mW output) until desired 6 dB signal-to-noise ratio is obtained. When the unit is not operating normally, 50 mW output at 6 dB signal-to-noise ratio may not be obtained.
8. Read the amount of signal generator attenuator. This is the maximum sensitivity.
9. AIR maximum sensitivity is 1 μ V (0 dB).

17. MW Maximum Sensitivity Measurement

Settings:

BAND SELECTOR switch:	MW
VOLUME control:	MAX
TONE control:	MAX
RF GAIN control:	NORMAL
BFO control:	OFF

Procedure:

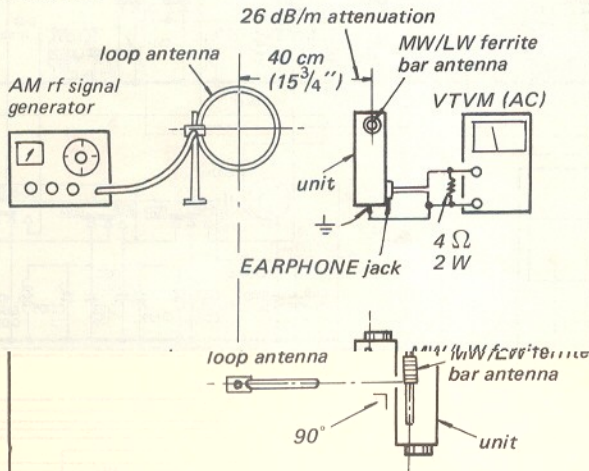


Note: Distance between center of loop antenna and center axis of MW/LW ferrite bar antenna and attenuation are dependent upon loop antenna used. In this case the attenuation is 26 dB/m at 40 cm.

18. SW Maximum Sensitivity Measurement

Settings:

BAND SELECTOR switch:	any of SW1 ~ 5
VOLUME control:	MAX
TONE control:	HIGH
RF GAIN control:	NORMAL
BFO control:	OFF

Procedure:

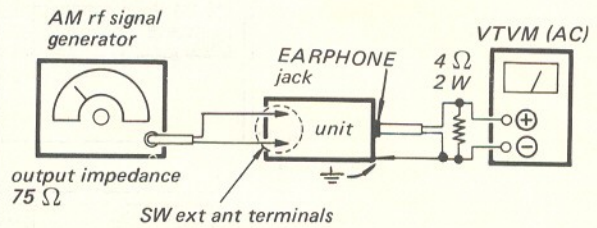

1. Set AM rf signal generator frequency to 2.5 MHz (SW1), 6.5 MHz (SW2), 11.5 MHz (SW3), 17.5 MHz (SW4) or 23.5 MHz (SW5), modulation to 400 Hz, 30 %.

2. Turn tuning knob of the unit and tune in AM rf signal generator frequency to obtain maximum VTVM reading.

3. Vary AM rf signal generator attenuator to obtain 0.447 V (50 mW output) on the VTVM. Note VTVM reading in dB.

4. Turn modulation off and note VTVM reading in dB.

1. Set AM rf signal generator frequency to 1000 kHz, modulation to 400 Hz, 30 %.

2. Turn tuning knob of the unit and tune in 1000 kHz signal.

3. Vary AM rf signal generator attenuator to obtain 0.447 V (50 mW output) on the VTVM. Note VTVM reading in dB.

4. Turn modulation off and note VTVM reading in dB.

5. The difference of VTVM readings obtained in steps 3 and 4 is the signal-to-noise ratio at this condition.

6. Adjust AM rf signal generator attenuator until 6 dB signal-to-noise ratio is obtained keeping 0.447 V (50 mW output) varying VOLUME control. When the unit is not operating normally, 50 mW output at 6 dB signal-to-noise ratio may not be obtained.

7. Read the amount of signal generator attenuator and determine maximum sensitivity by subtracting 26 dB from the attenuator reading.

8. MW maximum sensitivity is 24 μ V/m (27 dB/m).


5. The difference of VTVM readings obtained in steps 3 and 4 is the signal-to-noise ratio at this condition.

6. When the signal-to-noise ratio is more than 6 dB, the AM rf signal generator attenuator reading is the maximum sensitivity.

7. When the signal-to-noise ratio is less than 6 dB, adjust AM rf signal generator attenuator until 6 dB signal-to-noise ratio is obtained keeping 0.447 V (50 mW output) varying VOLUME control.

8. Read the amount of signal generator attenuator and determine maximum sensitivity.

9. SW1 maximum sensitivity is 1.2 μ V (1 dB), SW2 1 μ V (0 dB), SW3 1 μ V (0 dB), SW4 1.2 μ V (1 dB) and SW5 1.3 μ V (2 dB).

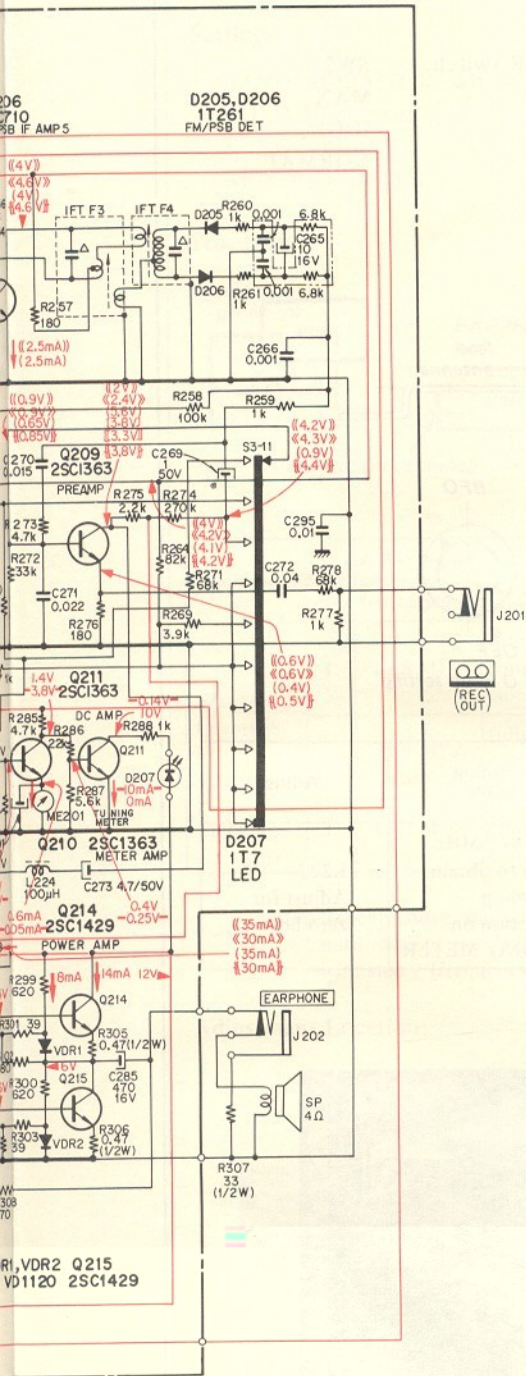

- Note:**
- All fixed capacitors are in μF , ceramic type unless otherwise specified. $p = \mu\mu$
 - All fixed resistors are in Ω , $\frac{1}{4}$ W, $\pm 5\%$ carbon film type unless otherwise specified. $k = 1000$, $M = 1000$ k
 - Capacitors marked Δ are included in i-f transformers and ceramic filter.


All voltage readings are taken at no input signal with a $20\text{ k}\Omega/\text{V}$ DC VOM with reference to ground line. Variations may be noted due to normal production tolerances.

- $(\)$: PSB, $\langle \ \rangle$: AIR, $(\)$: FM
- $[\]$: LW, $[[\]$: MW, $[]$: SW
- $\{ \}$: common for LW, MW and SW
- $\langle \ \rangle$: SW, BFO ON
- \star : SQUELCH MAX
- \ast : SQUELCH MIN
- $(-)$: tuned-in condition

• — : B+ line


• Switch mode:

Ref. No.	Switch	Mode
S1	FM/AIR/PSB selector	PSB
S2		SW5
S3		SELECTOR
S4	AFC	OFF
S5	AGC/MGC selector	AGC
S6	BFO	OFF
S7	POWER	OFF
S8	AC/DC selector	DC
S9	LIGHT	OFF




C resistance

MAIN CIRCUIT BOARD

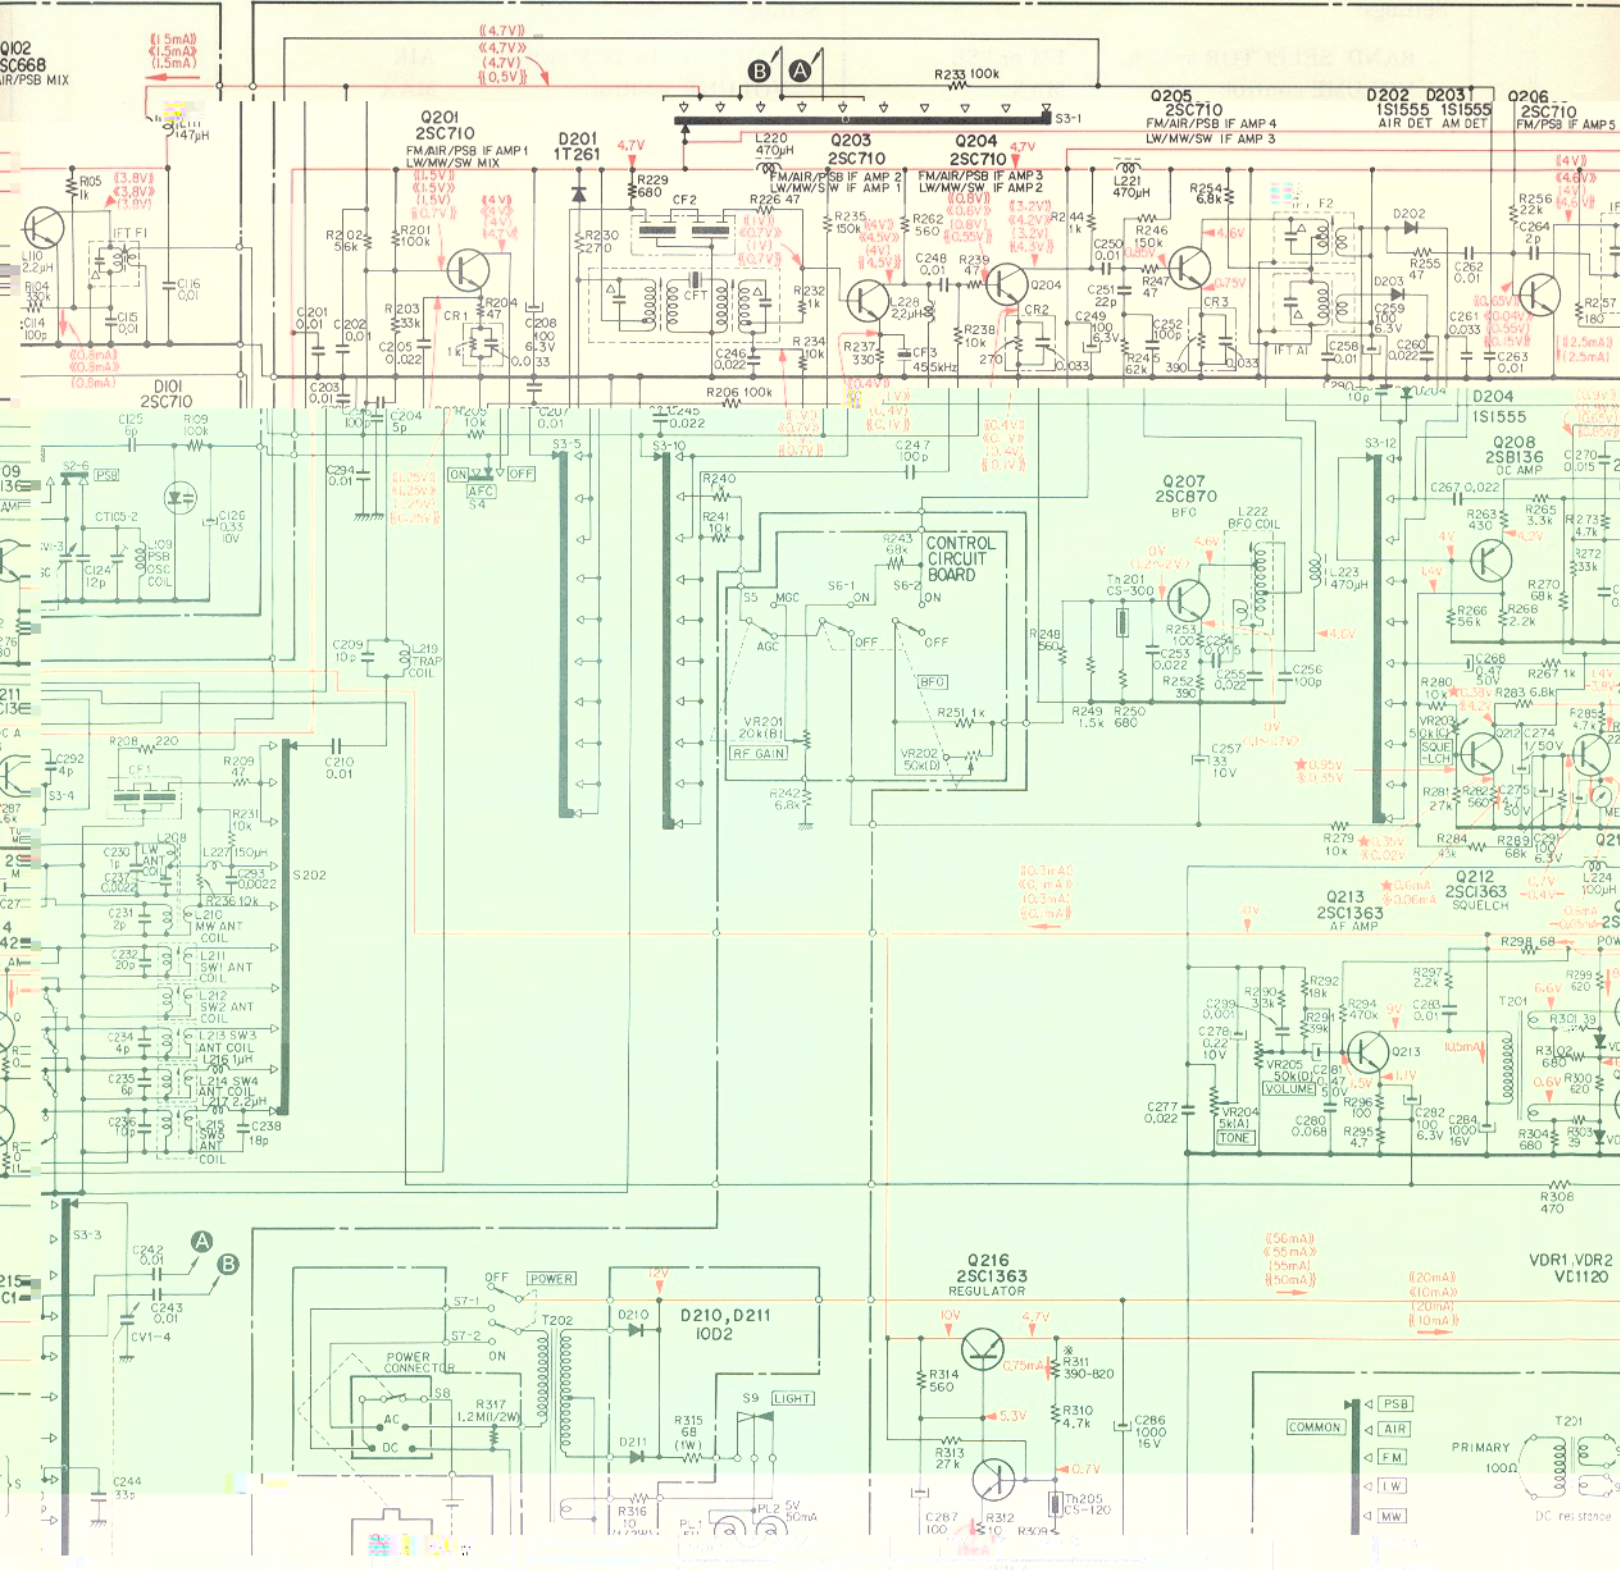


MAIN CIRCUIT BOARD

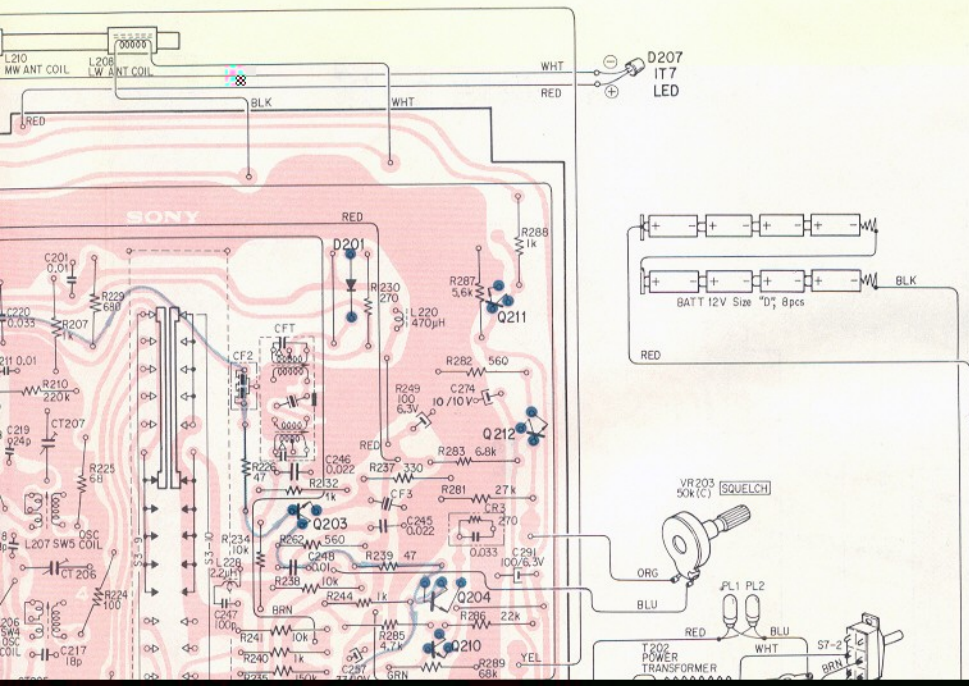


Q	D
	D207
Q211	D201
Q201	
Q202	
Q212	
Q203	
Q204	
Q210	


Q101, 102: 2SC668 D101: 2SC710

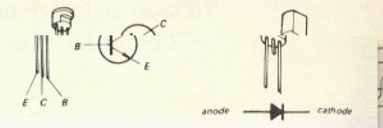


Q103, 201, 202, 203, 204, 205, 206: 2SC710
 Q207: 2SC870
 D201, 205, 206: 1T261
 D202, 203, 204: 1S1555

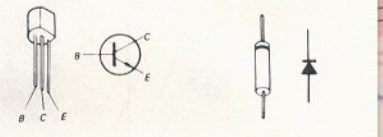

Q208: 2SB136 D207: 1T7 (LED)

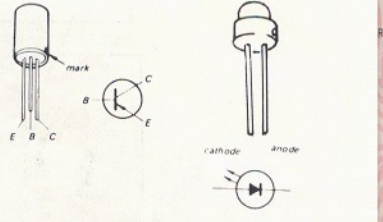

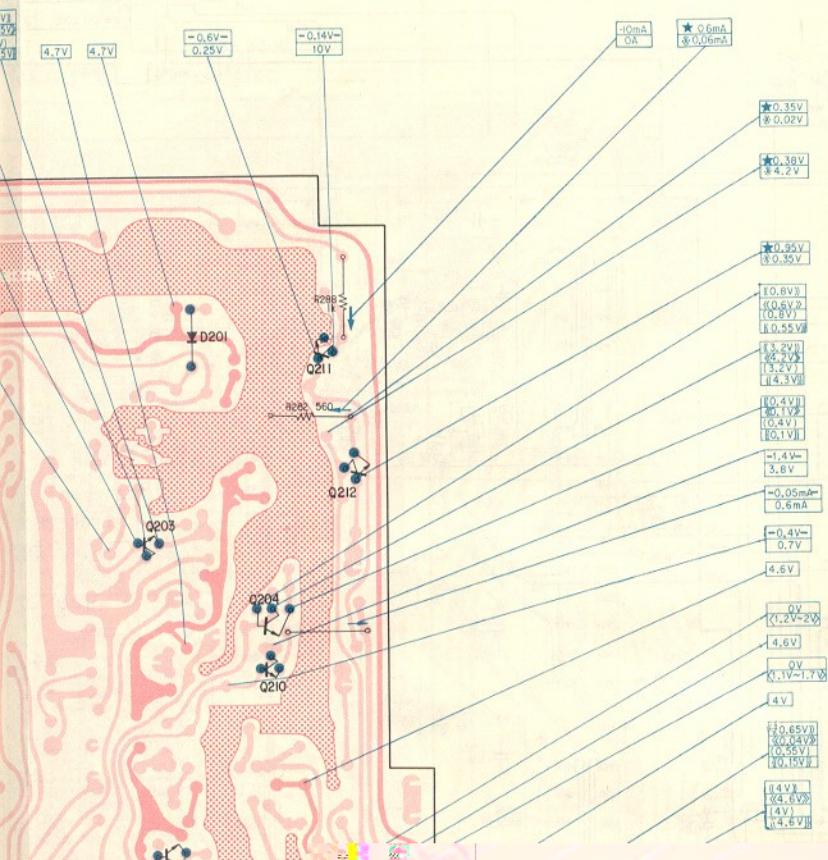


Note:

All voltage and current readings are taken at no input signal with a 20 kΩ/V DC VOM with reference to ground line. Variations may be noted due to normal production tolerances.

- (()): PSB, (≤ ≥): AIR, (): FM
- []: LW, [[]]: MW, { } : SW
- { } : common for LW, MW and SW
- < > : SW, BFO ON
- ★ : SQUELCH MAX
- * : SQUELCH MIN
- (-) : tuned-in condition
- Red solid area : B + pattern
- Red hatched area : ground pattern


4-5. SCHEMATIC AND MOUNTING DIAGRAMS


Applicable to the sets that the part No. of printed circuit boards are 1-591-005-16 and 1-581-748-16.

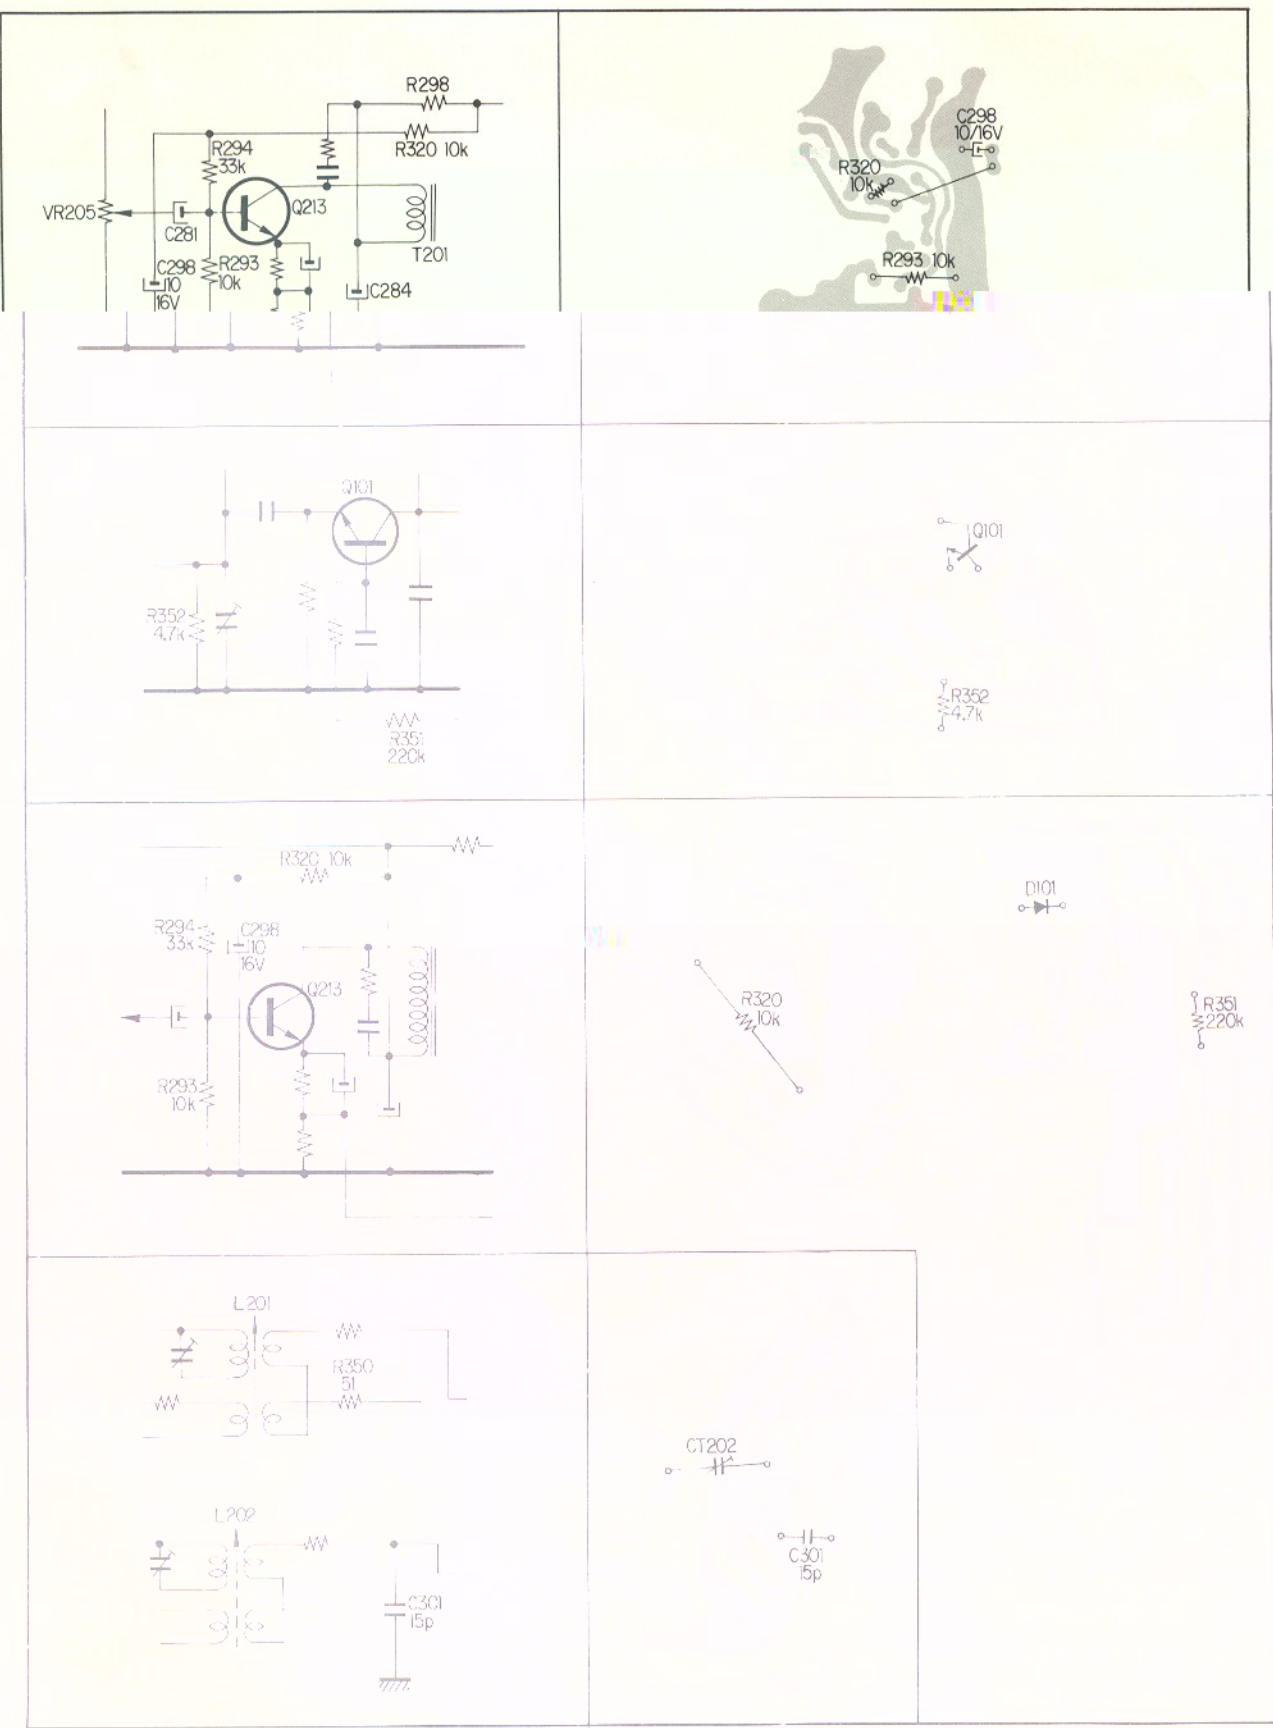

SECTION 5 EXPLODED VIEWS AND PACKING

5-1. EXPLODED VIEW (1)

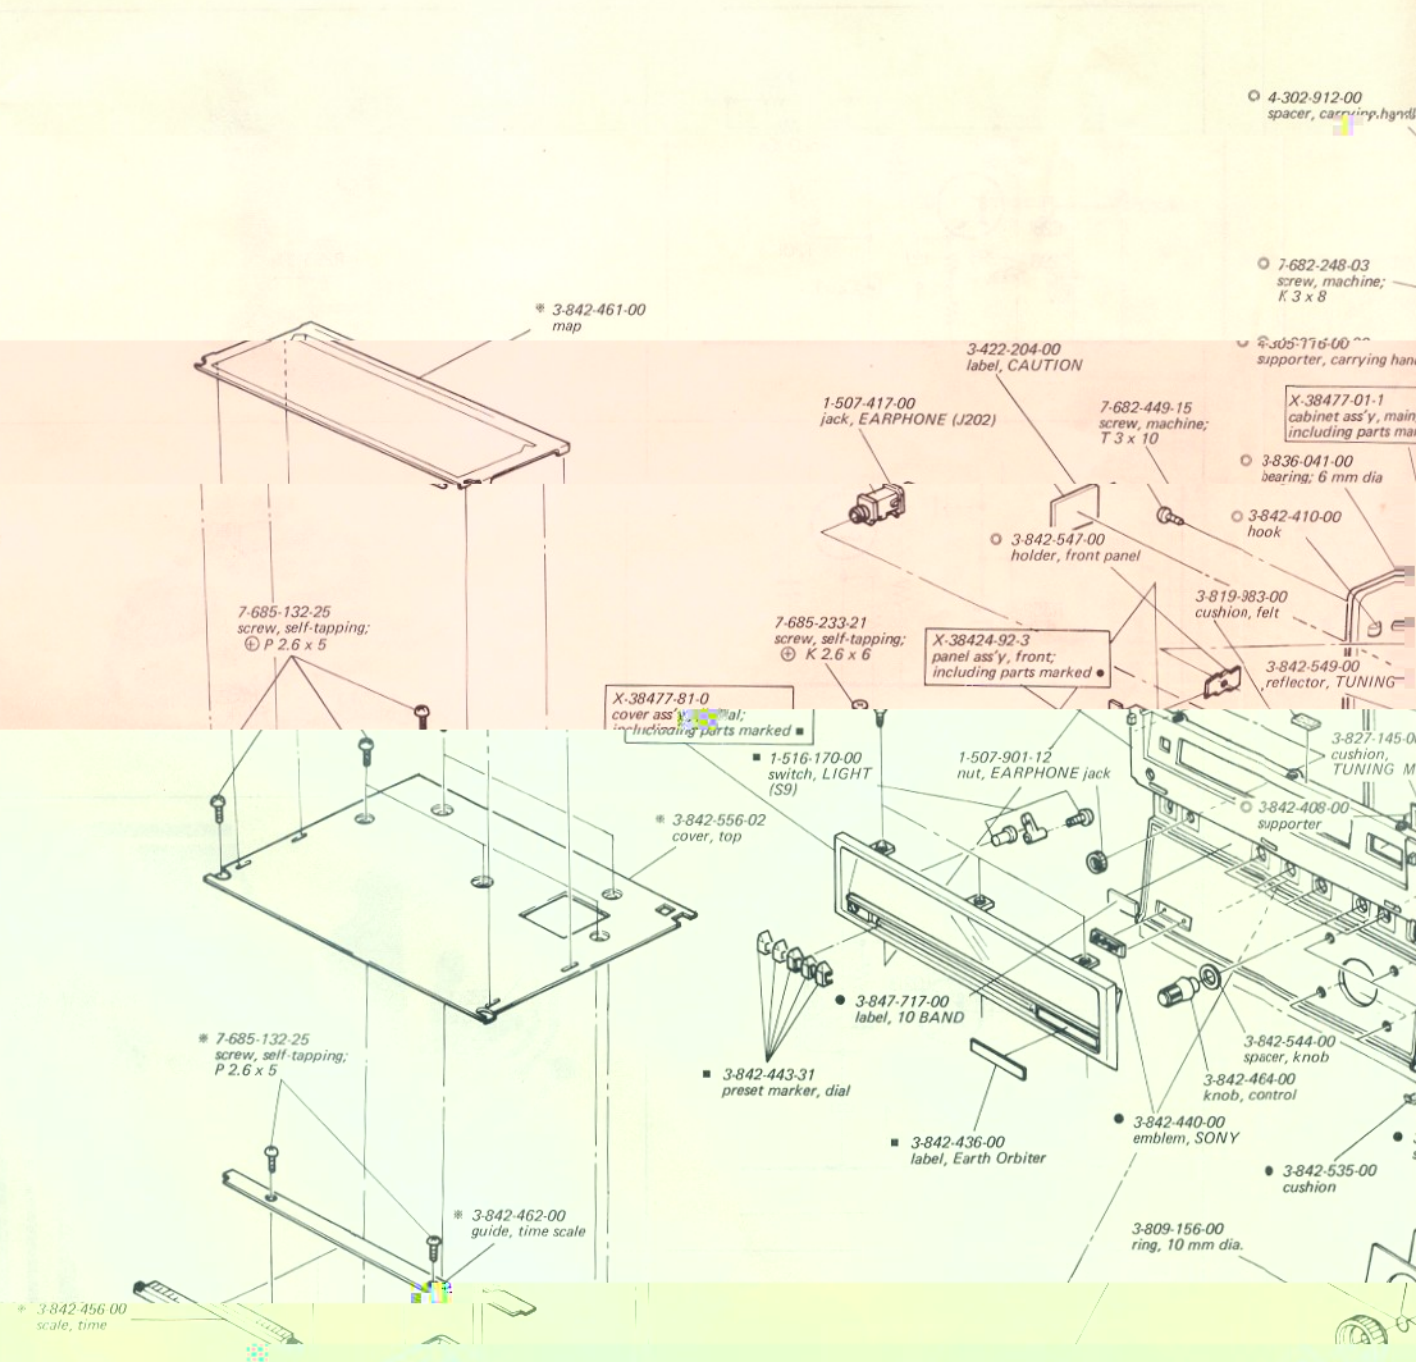

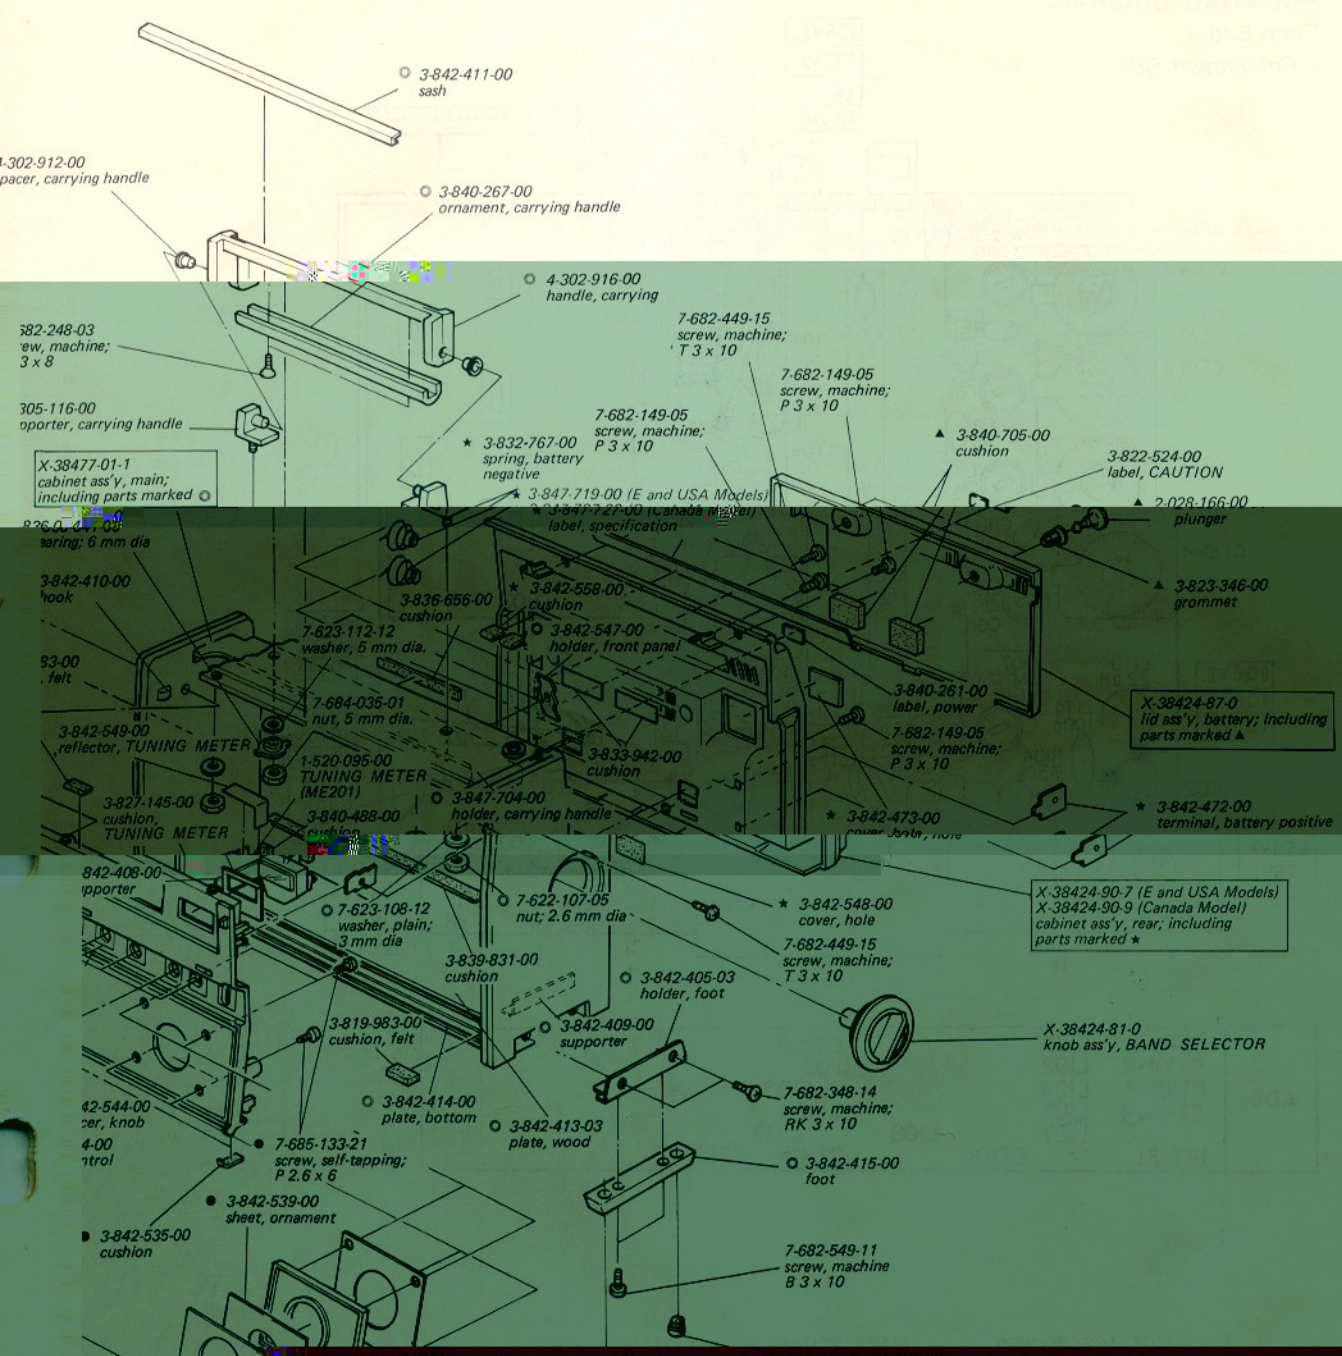



Note: 1. Parts without part numbers and names are not available.

2. All screws are Phillips type (cross recess type) unless otherwise indicated.


(-): slotted head

5-2. EXPLODED VIEW (2)

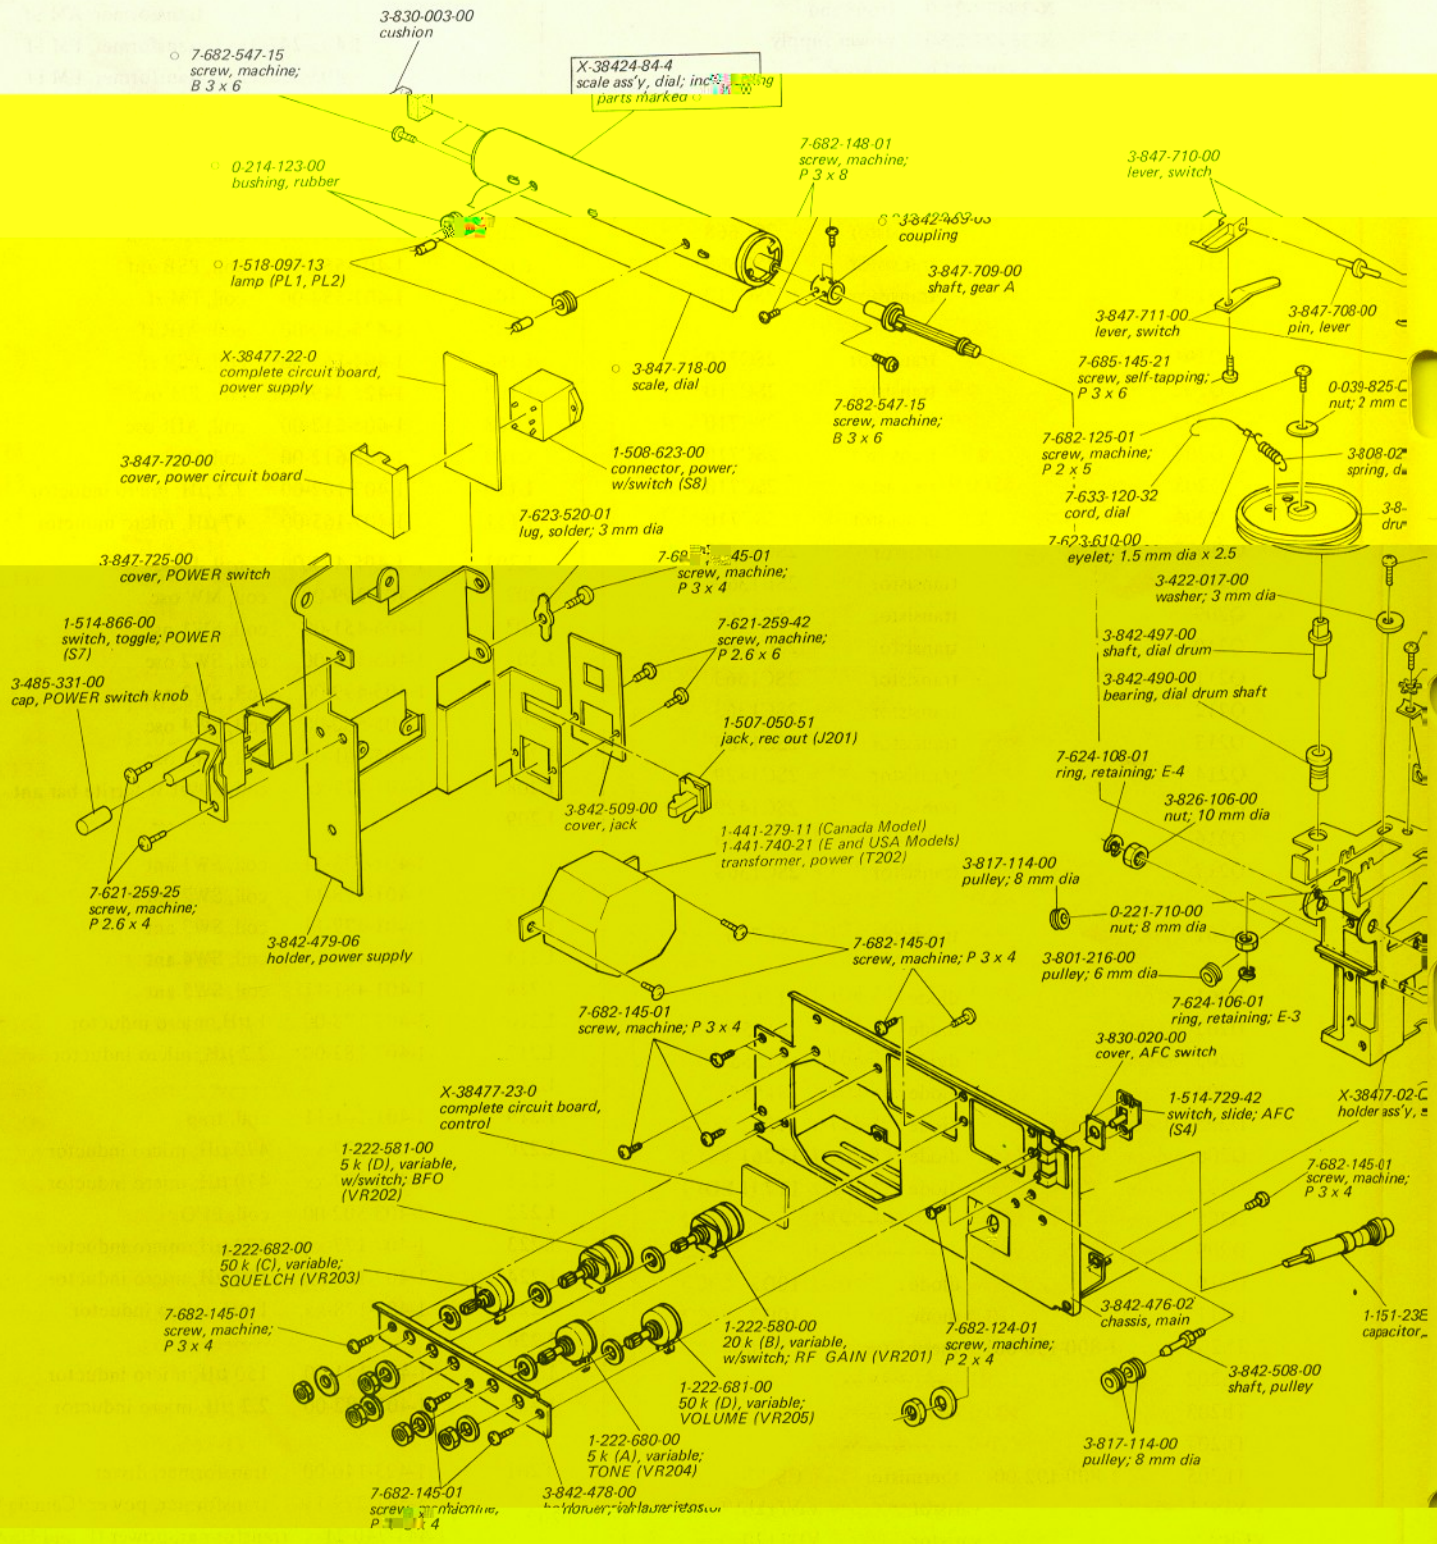

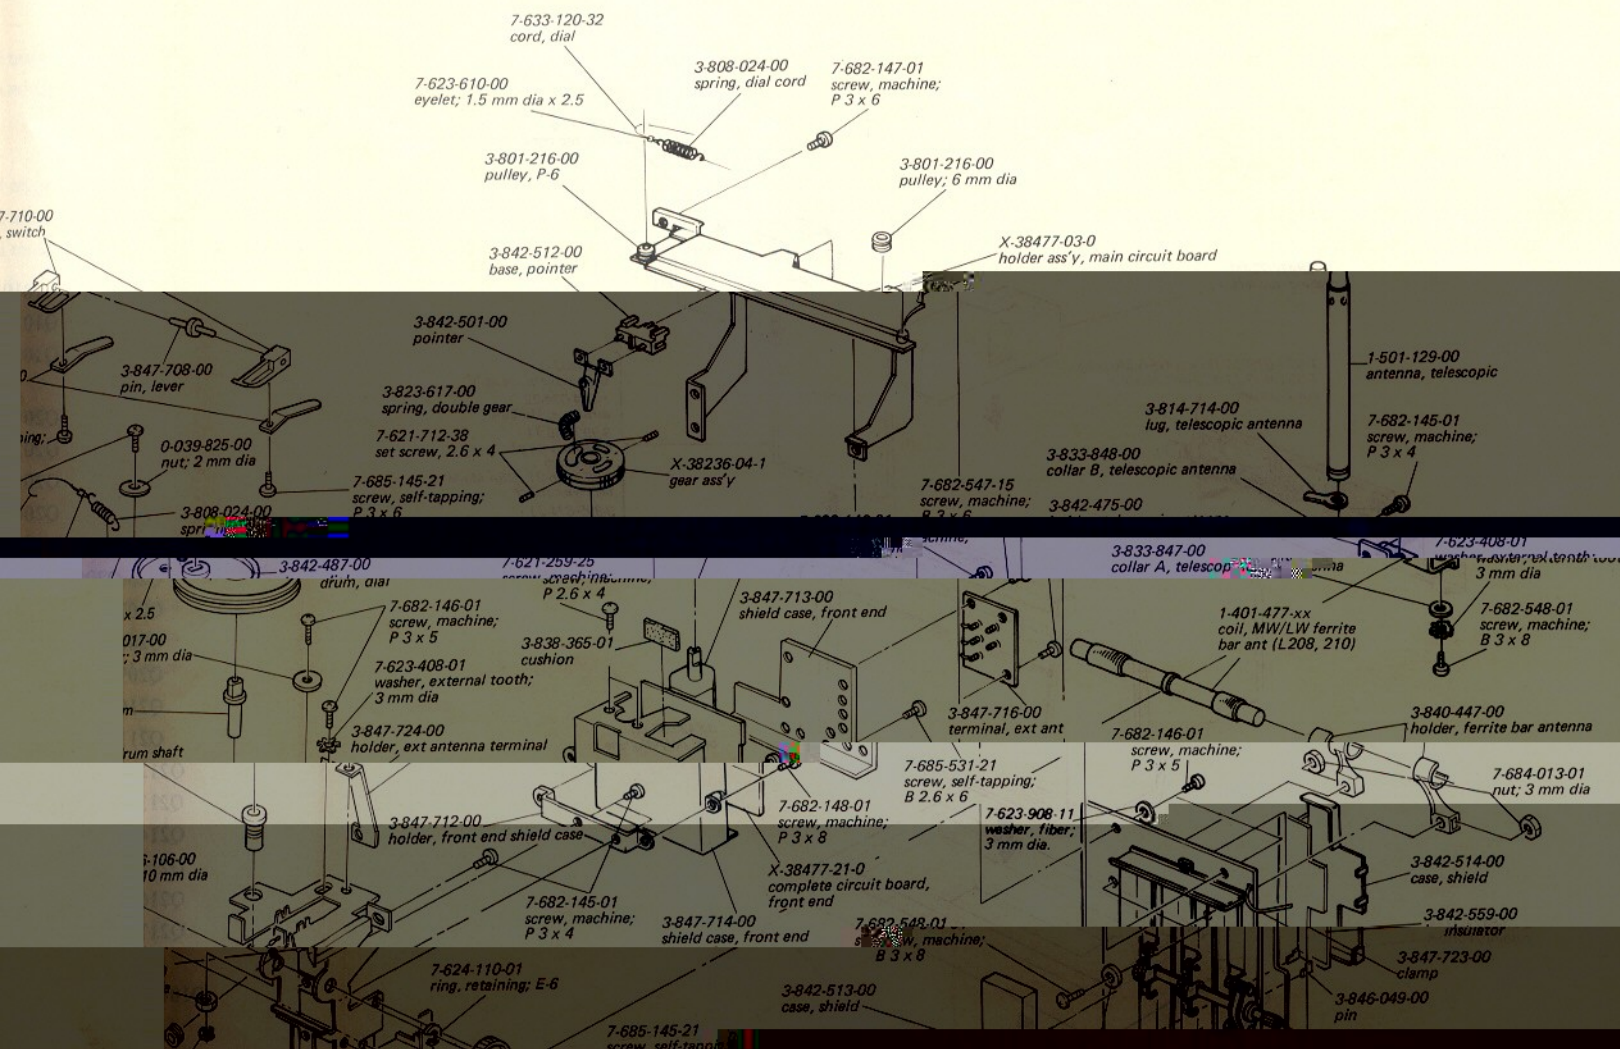

5-3. PACKING

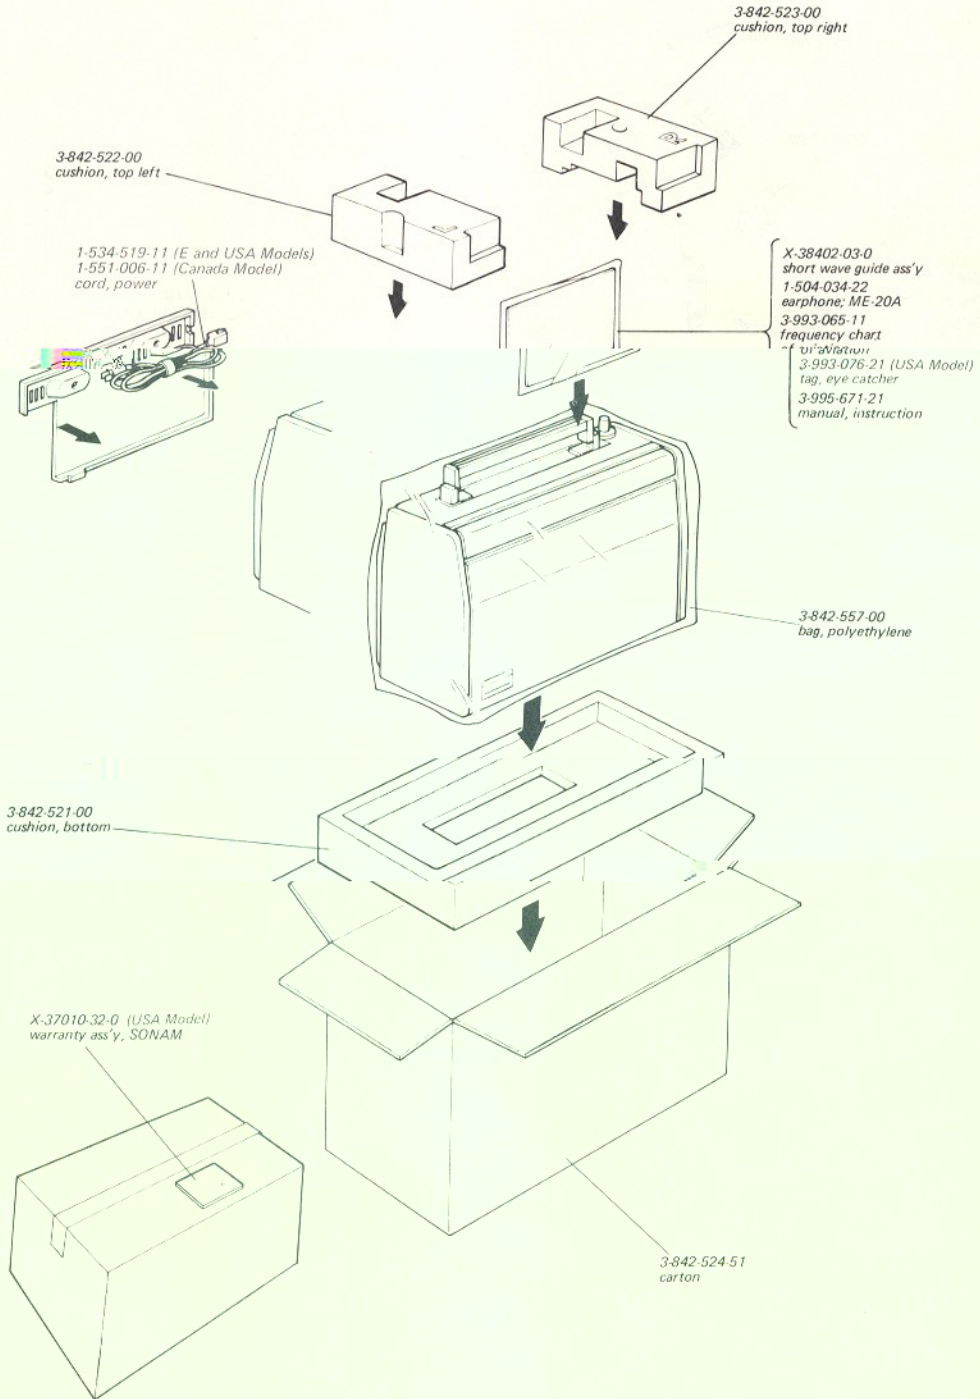

Note: Parts not shown for customers and names are not available



SECTION 6 ELECTRICAL PARTS LIST

<u>Ref. No.</u>	<u>Part No.</u>	<u>Description</u>
COMPLETE CIRCUIT BOARDS		
	X-38477-21-0	front end
	X-38477-22-0	power supply
	X-38477-23-0	control
	X-38477-24-0	main
SEMICONDUCTORS		
Q101		transistor 2SC668
Q102		transistor 2SC668
Q103		transistor 2SC710
Q201		transistor 2SC710
Q202		transistor 2SC710
Q203		transistor 2SC710
Q204		transistor 2SC710
Q205		transistor 2SC710
Q206		transistor 2SC710
Q207		transistor 2SC870
Q208		transistor 2SB136
Q209		transistor 2SC1363
Q210		transistor 2SC1363
Q211		transistor 2SC1363
Q212		transistor 2SC1363
Q213		transistor 2SC1363
Q214		transistor 2SC1429
Q215		transistor 2SC1429
Q216		transistor 2SC1363
Q217		transistor 2SC1363
D101		transistor 2SC710
D201		diode 1T261
D202		diode 1S1555
D203		diode 1S1555
D204		diode 1S1555
D205		diode 1T261
D206		diode 1T261
D207		diode 1T7 (LED)
D208		-----
D209		-----
D210		diode 10D2
D211		diode 10D2
Th201	1-800-196-00	thermistor CS-300
Th202		-----
Th203		-----
Th204		-----
Th205	1-800-192-00	thermistor CS-120
VDR1		varistor VD1120
VDR2		varistor VD1120

<u>Ref. No.</u>	<u>Part No.</u>	<u>Description</u>
COILS AND TRANSFORMERS		
IFT A1	1-403-174-11	transformer, AM i-f
IFT F1	1-403-242-31	transformer, FM i-f
IFT F2	1-403-555-11	transformer, FM i-f
IFT F3	1-403-287-11	transformer, FM i-f
IFT F4	1-403-287-21	transformer, FM i-f
L101	1-401-554-00	coil, FM ant
L102	1-425-349-00	coil, AIR ant
L103	1-401-555-00	coil, PSB ant
L104	1-401-554-00	coil, FM rf
L105	1-425-349-00	coil, AIR rf
L106	1-401-555-00	coil, PSB rf
L107	1-425-349-00	coil, FM osc
L108	1-405-612-00	coil, AIR osc
L109	1-405-612-00	coil, PSB osc
L110	1-407-182-00	2.2 μ H, micro inductor
L111	1-407-165-00	47 μ H, micro inductor
L201	1-405-497-00	coil, LW osc
L202	1-405-399-00	coil, MW osc
L203	1-405-451-00	coil, SW1 osc
L204	1-405-498-00	coil, SW2 osc
L205	1-405-499-00	coil, SW3 osc
L206	1-405-500-00	coil, SW4 osc
L207	1-405-501-00	coil, SW5 osc
L208, 210	1-401-477-xx	coil, MW/LW ferrite bar ant
L209		-----
L211	1-401-373-11	coil, SW1 ant
L212	1-401-478-11	coil, SW2 ant
L213	1-401-479-11	coil, SW3 ant
L214	1-401-480-11	coil, SW4 ant
L215	1-401-481-11	coil, SW5 ant
L216	1-407-178-00	1 μ H, micro inductor
L217	1-407-182-00	2.2 μ H, micro inductor
L218		-----
L219	1-401-201-11	coil, trap
L220	1-407-177-xx	470 μ H, micro inductor
L221	1-407-177-xx	470 μ H, micro inductor
L222	1-405-502-00	coil, BFO
L223	1-407-177-xx	470 μ H, micro inductor
L224	1-407-169-xx	100 μ H, micro inductor
L225	1-407-178-xx	1 μ H, micro inductor
L226		-----
L227	1-407-171-00	150 μ H, micro inductor
L228	1-407-182-00	2.2 μ H, micro inductor
T201	1-423-140-00	transformer, driver
T202	1-441-279-11	transformer, power (Canada Model)
	1-441-740-21	transformer, power (E and USA Models)

Ref. No. Part No. Description

CAPACITORS

All fixed capacitors are in μF and ceramic type unless otherwise specified. p = $\mu\mu$, elect = electrolytic

Ref. No. Part No. Description

C101	1-102-808-11	6 p	
C102	1-102-810-11	8 p	
C103	1-102-807-11	5 p	
C104	1-102-807-11	5 p	
C105	1-102-955-11	12 p	
C106	1-108-227-12	0.001	mylar
C107			

C220	1-108-244-12	0.033	mylar
C221		-----	
C222	1-107-133-11	120 p	silvered mica
C223	1-107-241-11	360 p	silvered mica
C224	1-103-78-11	1300 p	styrol
C225	1-103-785-11	2700 p	styrol
C226	1-107-143-11	330 p	silvered mica
C227	1-107-134-11	130 p	silvered mica
C228	1-107-126-11	62 p	silvered mica
C229	1-102-969-11	33 p	
C230	1-102-934-11	1 p	

C203	1-101-923-11	0.01	
C204	1-102-807-11	5 p	
C205	1-108-242-12	0.022	mylar
C206		-----	
C207	1-101-923-11	0.01	
C208	1-121-413-11	100	6.3 V elect
C209	1-102-954-11	10 p	
C210	1-101-923-11	0.01	
C211	1-108-239-12	0.01	mylar
C212	1-108-242-12	0.022	mylar
C213	1-102-960-11	24 p	
C214		-----	
C215	1-102-964-11	36 p	
C216	1-102-253-11	10 p	
C217	1-102-958-11	18 p	
C218	1-102-958-11	18 p	
C219	1-102-252-11	24 p	

C254	1-108-240-12	0.015	mylar
C255	1-108-242-12	0.022	mylar
C256	1-102-734-11	100 p	
C257	1-121-402-11	33	10 V elect
C258	1-108-239-12	0.01	mylar
C259	1-121-413-11	100	6.3 V elect
C260	1-108-242-12	0.022	mylar
C261	1-108-244-12	0.033	mylar
C262	1-101-923-11	0.01	
C263	1-101-923-11	0.01	
C264	1-102-939-11	2 p	
C265	1-121-469-11	10	10 V elect
C266	1-108-227-12	0.001	mylar
C267	1-108-242-12	0.022	mylar
C268	1-121-726-11	0.47	50 V elect
C269	1-121-391-11	1	50 V elect
C270	1-108-240-12	0.015	mylar

<u>Ref. No.</u>	<u>Part No.</u>	<u>Description</u>		
C271	1-108-242-12	0.022		mylar
C272	1-101-925-11	0.04		
C273	1-121-396-11	4.7	50 V	elect
C274	1-121-496-11	10	10 V	elect
C275	1-121-396-11	4.7	50 V	elect
C276		-----		
C277	1-108-242-12	0.022		mylar
C278	1-127-046-11	0.22	10 V	solid aluminum
C279	1-108-227-12	0.001		mylar
C280	1-108-249-12	0.068		mylar
C281	1-121-726-11	0.47	50 V	elect
C282	1-121-413-11	100	6.3 V	elect
C283	1-101-923-11	0.01		
C284	1-121-245-11	1000	16 V	elect
C285	1-121-426-11	470	16 V	elect
C286	1-121-245-11	1000	16 V	elect
C287	1-121-415-11	100	16 V	elect
C288		-----		
C289	1-102-955-11	12 p		
C290	1-102-956-11	15 p		
C291	1-121-413-11	100	6.3 V	elect
C292	1-102-941-11	4 p		
C293	1-102-204-11	0.0022		
C294	1-101-923-11	0.01		
C295	1-101-923-11	0.01		
C296	1-102-975-11	100 p		
C297, 298		-----		
C299	1-108-227-12	0.001		mylar
CT101	1-141-153-00	capacitor, trimmer; 4-unit		
CT102	1-141-097-00	capacitor, trimmer		
CT103	1-141-097-00	capacitor, trimmer		
CT104	1-141-097-00	capacitor, trimmer		
CT105	1-141-144-00	capacitor, trimmer; 2-unit		
CT201	1-141-142-00	capacitor, trimmer		
CT202	1-141-142-00	capacitor, trimmer		
CT203	1-141-142-00	capacitor, trimmer		
CT204	1-141-142-00	capacitor, trimmer		
CT205	1-141-142-00	capacitor, trimmer		
CT206	1-141-142-00	capacitor, trimmer		
CT207	1-141-142-00	capacitor, trimmer		
CV1	1-151-257-00	capacitor, tuning		
CV2	1-151-238-00	capacitor, FINE TUNING		

RESISTORS

All fixed resistors are in Ω , $\frac{1}{4}$ W, $\pm 5\%$ carbon film type unless otherwise specified. k = 1000, M = 1000 k

R101	1-244-673-11	1 k
R102	1-244-713-11	47 k
R103	1-244-703-11	18 k

<u>Ref. No.</u>	<u>Part No.</u>	<u>Description</u>
R104	1-244-733-11	330 k
R105	1-242-673-11	1 k
R106	1-242-681-11	2.2 k
R107	1-244-729-11	220 k
R108	1-244-673-11	1 k
R109	1-242-721-11	100 k
R201	1-244-721-11	100 k
R202	1-244-731-11	50 k
R203	1-244-709-11	33 k
R204	1-244-641-11	47
R205	1-244-697-11	10 k
R206	1-244-721-11	100 k
R207	1-244-673-11	1 k
R208	1-244-657-11	220
R209	1-244-641-11	47
R210	1-244-729-11	220 k
R211	1-244-673-11	1 k
R212	1-244-657-11	220
R213	1-244-669-11	680
R214	1-244-667-11	560
R215	1-244-665-11	470
R216	1-244-651-11	120
R217	1-244-645-11	68
R218	1-244-643-11	56
R219	1-244-657-11	220
R220	1-244-657-11	220
R221	1-244-669-11	680
R222	1-244-655-11	180
R223	1-244-649-11	100
R224	1-244-649-11	100
R225	1-224-645-11	68
R226	1-244-641-11	47
R227	1-244-643-11	56
R228	1-244-641-11	47
R229	1-244-669-11	680
R230	1-244-659-11	270
R231	1-244-697-11	10 k
R232	1-244-673-11	1 k
R233	1-244-721-11	100 k
R234	1-244-697-11	10 k
R235	1-244-725-11	150 k
R236	1-244-697-11	10 k
R237	1-244-661-11	330
R238	1-244-697-11	10 k
R239	1-244-641-11	47
R240	1-244-673-11	1 k
R241	1-244-697-11	10 k
R242	1-244-693-11	6.8 k
R243	1-244-717-11	68 k
R244	1-244-673-11	1 k

<u>Ref. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Ref. No.</u>	<u>Part No.</u>	<u>Description</u>
R245	1-244-716-11	62 k	R296	1-244-649-11	100
R246	1-244-725-11	150 k	R297	1-244-681-11	2.2 k
R247	1-244-641-11	47	R298	1-244-645-11	68
R248	1-244-667-11	560	R299	1-244-668-11	620
R249	1-244-677-11	1.5 k	R300	1-244-668-11	620
R250	1-244-669-11	680	R301	1-244-639-11	39
R251	1-244-673-11	1 k	R302	1-244-669-11	680
R252	1-244-663-11	390	R303	1-244-639-11	39
R253	1-244-649-11	100	R304	1-244-669-11	680
R254	1-244-693-11	6.8 k	R305	1-207-459-11	0.47 1/2 W wirewound
R255	1-244-641-11	47	R306	1-207-459-11	0.47 1/2 W wirewound
R256	1-244-705-11	22 k	R307	1-244-837-31	33 1/2 W
R257	1-244-655-11	180	R308	1-244-665-11	470
R258	1-244-721-11	100 k	R309	1-244-667-11	560
R259	1-244-673-11	1 k	R310	1-244-689-11	4.7 k
R260	1-244-673-11	1 k		1-244-663-11	390
R261	1-244-673-11	1 k		1-244-665-11	470
R262	1-244-673-11	1 k			

<u>Ref. No.</u>	<u>Part No.</u>	<u>Description</u>
CR2	1-231-208-11	encapsulated component; 270 Ω + 0.033 μF
CR3	1-231-209-11	encapsulated component; 390 Ω + 0.033 μF
CR4	1-231-202-11	encapsulated component; 6.8 kΩ + 6.8 kΩ + 0.001 μF + 0.001 μF
J201	1-507-050-51	jack, rec out
J202	1-507-412-00	jack, EARPHONE
ME	1-520-095-00	TUNING METER
S1	1-514-861-22	switch, slide

<u>Ref. No.</u>	<u>Part No.</u>	<u>Description</u>
S2	1-514-861-22	switch, slide
S3	1-516-311-00	switch, rotary-slide
S4	1-514-729-42	switch, slide; AFC
S5	-----	-----
S6	-----	-----
S7	1-514-866-00	switch, toggle; POWER
S8	1-508-623-00	connector, power; w/switch
S9	1-516-170-00	switch, leaf; LIGHT
SP	1-502-456-00	speaker, 4 Ω
TEL ANT	1-501-129-00	antenna, telescopic
	1-507-901-12	nut, EARPHONE jack

Hardware Nomenclature


P - Pan Head Screw		SC - Set Screw	
PS - Pan Head Screw with Spring Washer		E - Retaining Ring (E Washer)	
K - Flat Countersunk Head Screw		W - Washer	
B - Binding Head Screw		SW - Spring Washer	
RK - Oval Countersunk Head Screw		LW - Lock Washer	
T - Truss Head Screw		N - Nut	
R - Round Head Screw			
F - Flat Fillister Head Screw			

- Example -

Sony Corporation

SECTION 5
EXPLODED VIEWS AND PACKING


5-1. EXPLODED VIEW (1)

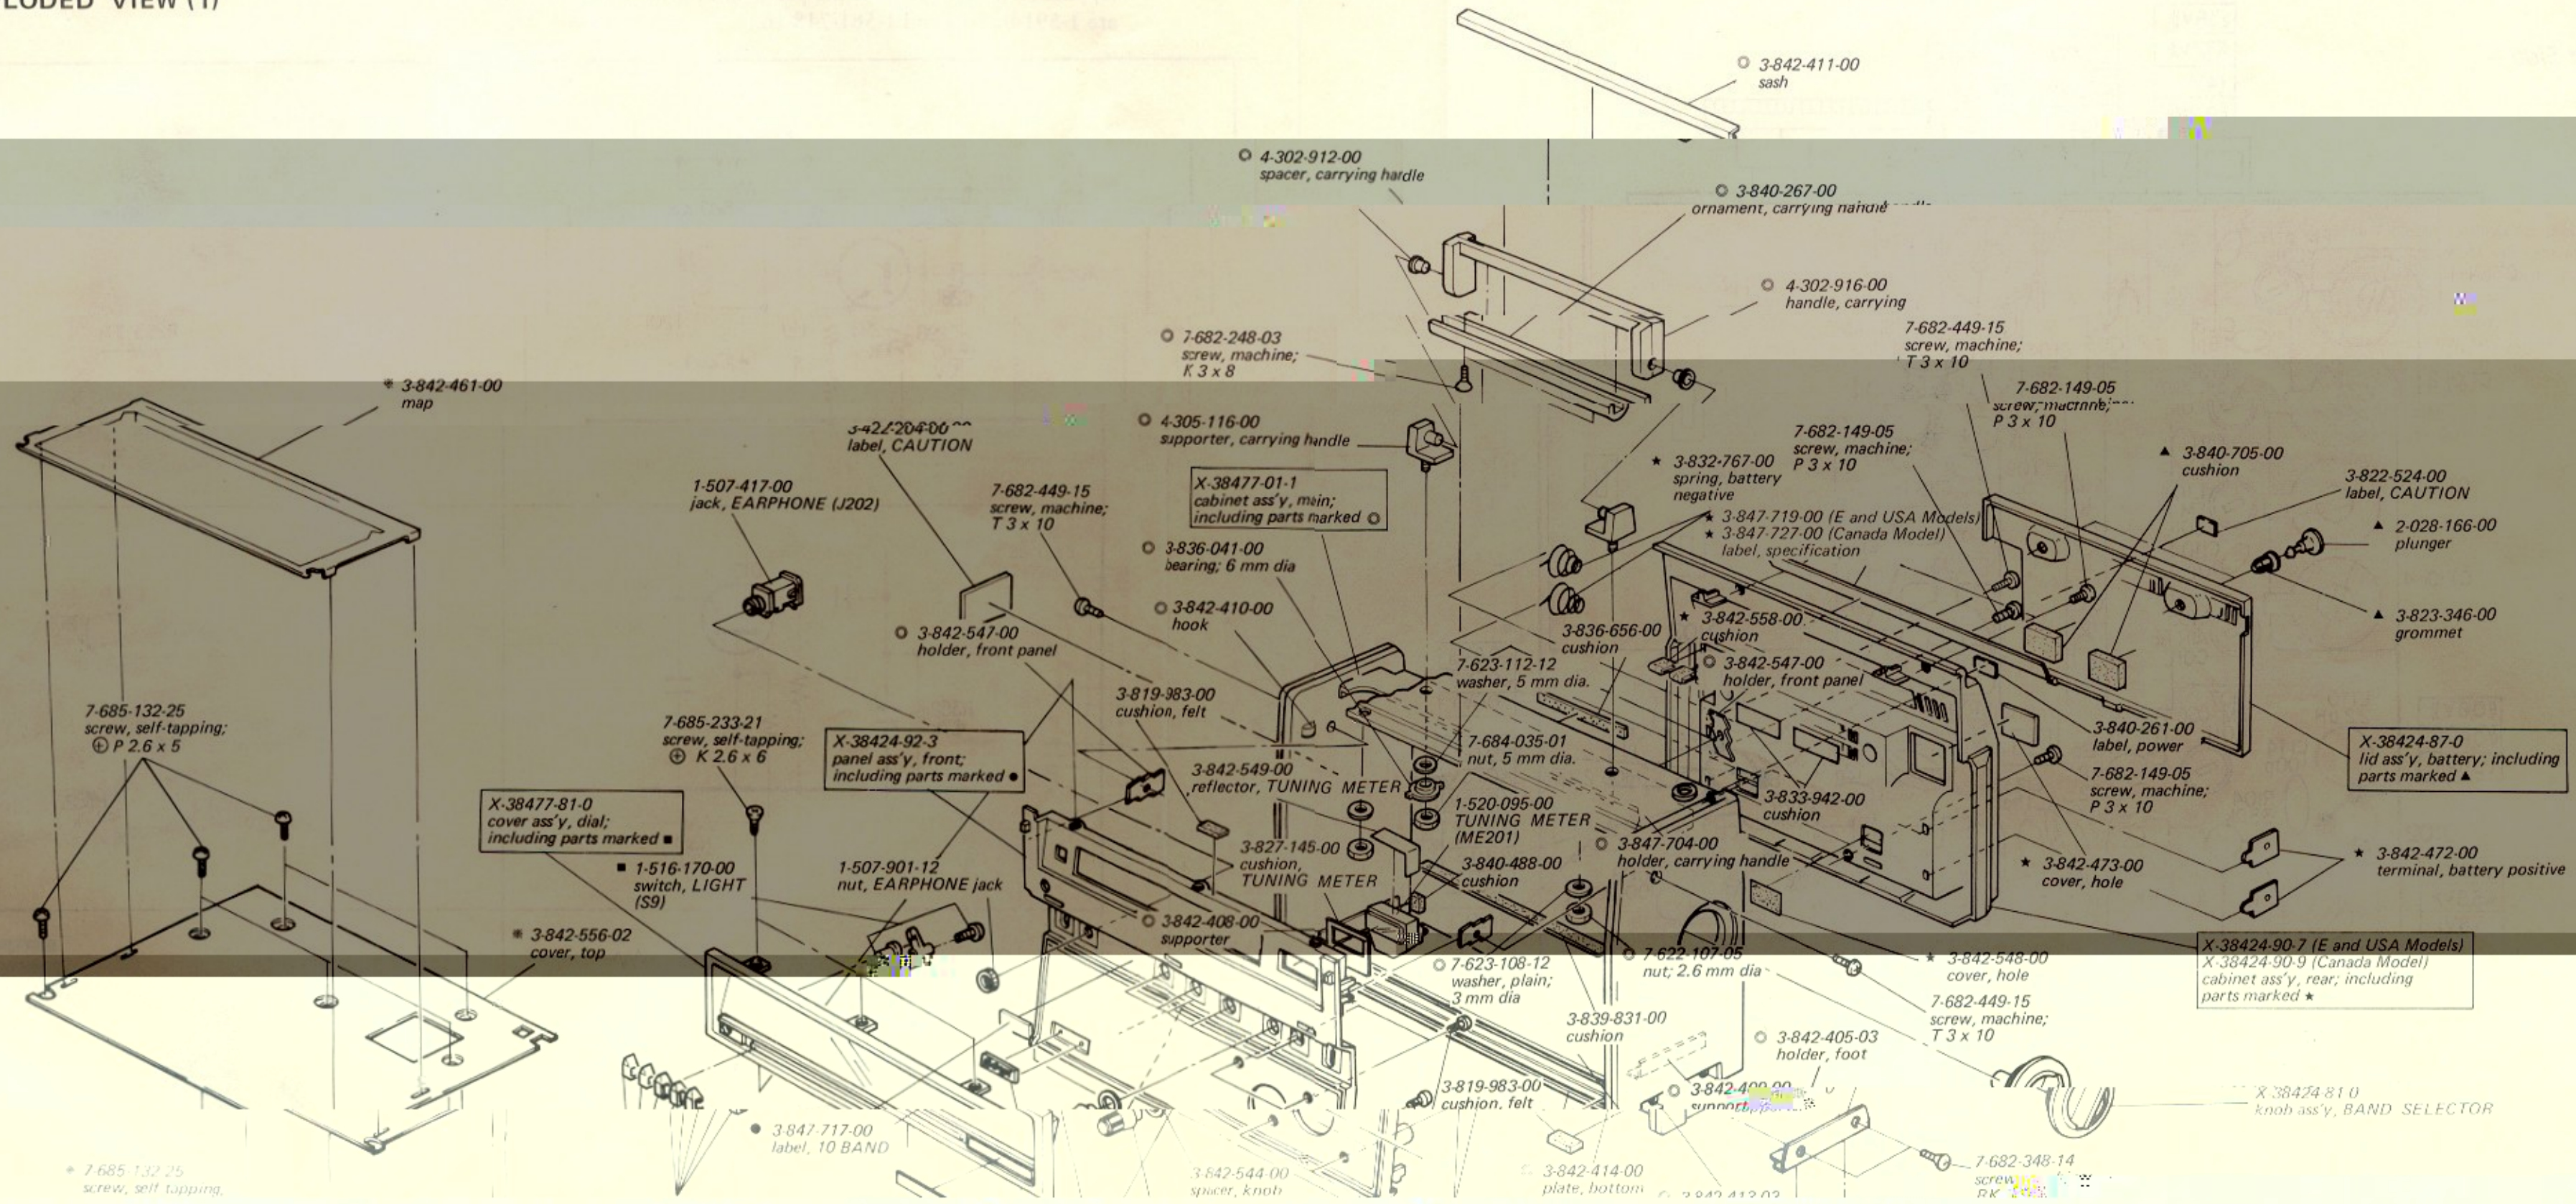

SECTION 4 DIAGRAMS

4-1. SCHEMATIC DIAGRAM

Applicable to the sets that the part No. of printed circuit boards are 1-591-005-11~15 and 1-581-748-11~15. For the others, see page 32.

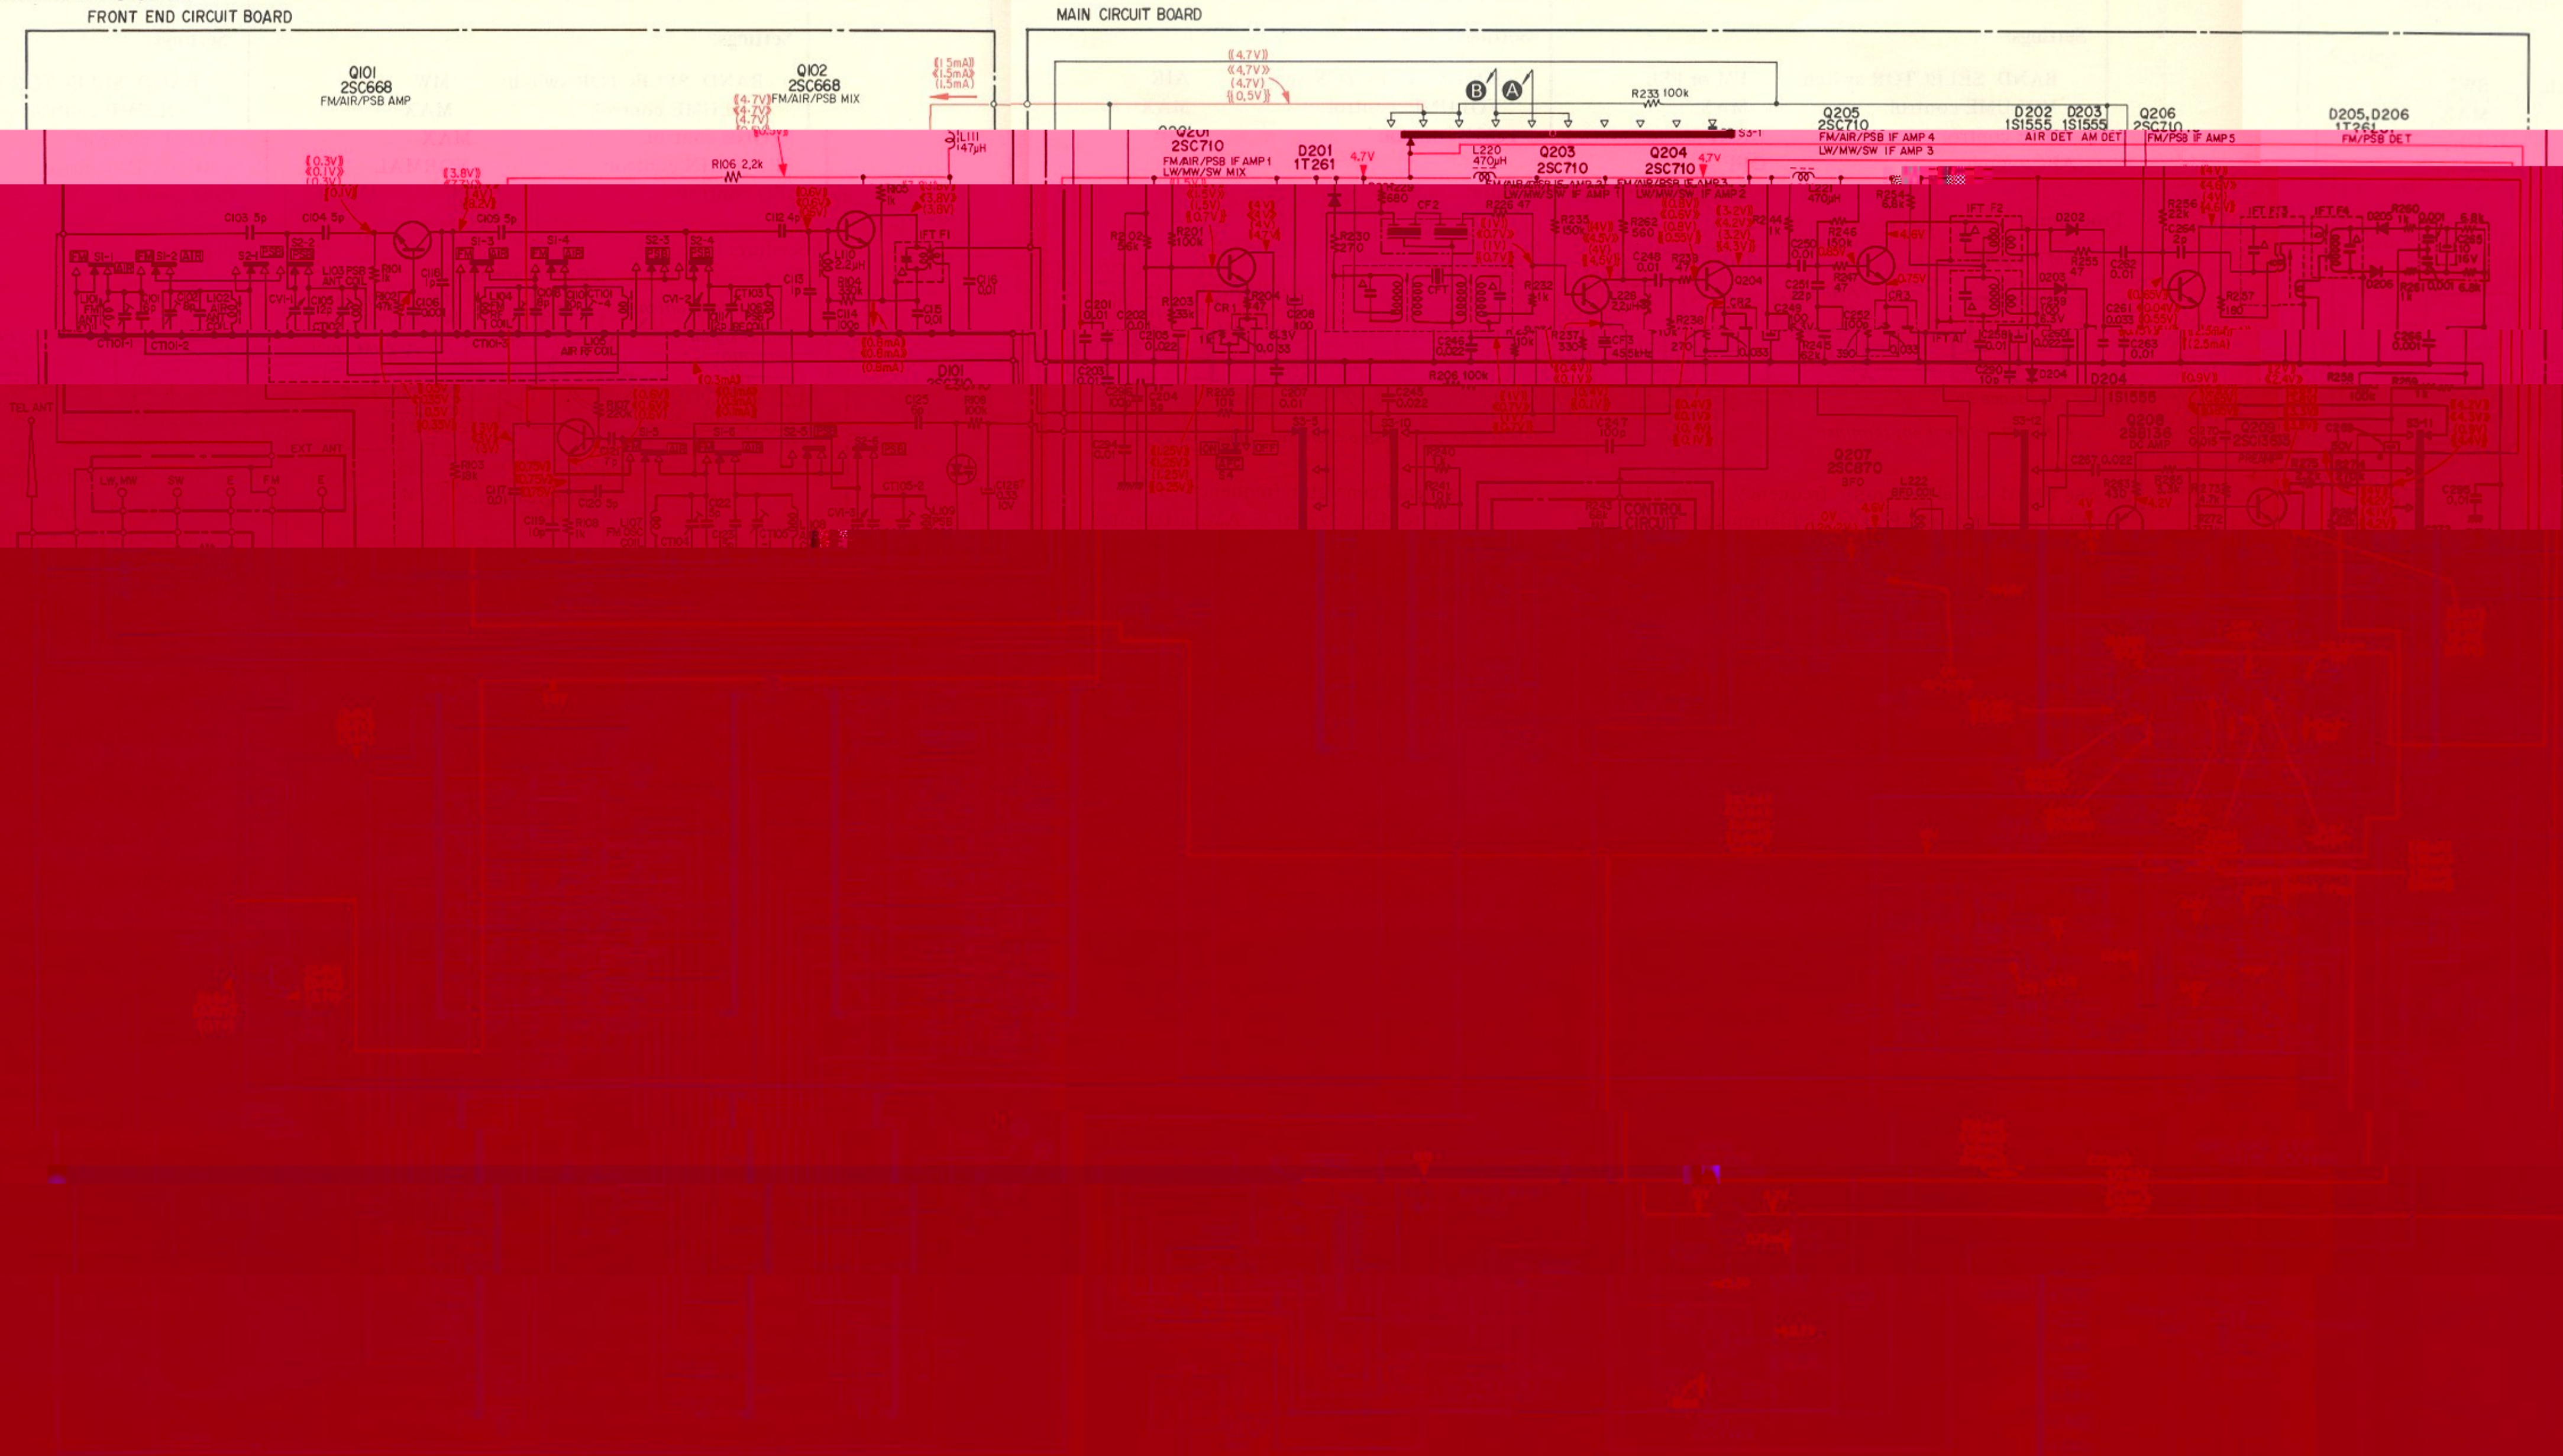

- Note:**
- All fixed capacitors are in μF , ceramic type unless otherwise specified. $p = \mu\text{m}$
 - All fixed resistors are in Ω , $\frac{1}{4}$ W, $\pm 5\%$ carbon film type unless otherwise specified. $k = 1000$, $M = 1000 k$
 - Capacitors marked Δ are included in i-f transformers and ceramic filter.

● All voltage readings are taken at no input signal with a 20 k Ω /V DC VOM with reference to ground line. Variations may be noted due to normal production tolerances.

- () : PSB, < > : AIR, () : FM
- [] : LW, [] : MW, [] : SW
- || : common for LW, MW and SW
- < > : SW, SFO ON
- △ : SQUELCH MIN
- () : tuned-in condition

● Switch mode:

Ref. No.	Switch	Mode
S1	FM/AIR/PSB selector	PSB
S2	BAND SELECTOR	SW
S4	ARC	OFF

